

process must take place at the accessible connection points using a suitable tool.

No.	Procedure	Instructions
	Removing rear backrest	Refer to No. 724719, <i>Removing and installing rear backrest</i>
	Removing cover for seat connection	
	Removing C-pillar trim	⇒ Page 137 ' <i>Removing the C-pillar trim</i> '
	Removing rear roof lining	⇒ Page 161 ' <i>Removing rear roof lining</i> '
	Removing D-pillar trim	⇒ Page 144 ' <i>Removing the D-pillar cover</i> '
	Removing luggage compartment trim (loadspace cover)	⇒ Page 30 ' <i>Removing luggage compartment trim (loadspace cover)</i> '
1	Removing cover for lock mount -6-	⇒ Page 98 ' <i>Removing cover for lock mount</i> '
2	Unclipping corner part	Unclip corner part -5-
3	Removing corner part	