


Current Flow Diagram Type 944 USA Model 83

PART I	POWER SUPPLY, STARTER DIGITAL MOTOR ELECTRONIC (DME) FUEL PUMP
PART II	LIGHT SWITCH, CONCEALING HEADLIGHT FOG LIGHTS HEADLIGHT PARKING LIGHT, REAR LIGHT
PART III	BRAKE LIGHT EMERGENCY FLASHER TURN SIGNAL, BACK-UP LIGHT HORN INTERIOR LIGHT
PART IV	REAR WINDOW DEFOGGER, IGNITION/STARTER SWITCH, SEAT BELTS INSTRUMENT CLUSTER
PART V	INSTRUMENTS CENTER CONSOLE WIND SHIELD WIPER
PART VI	FRESH AIR BLOWER COOLING FAN

Current Flow Diagram Type 944 USA Model 83 Part I

POWER SUPPLY, STARTER
DIGITAL MOTOR ELECTRONIC (DME)
FUEL PUMP

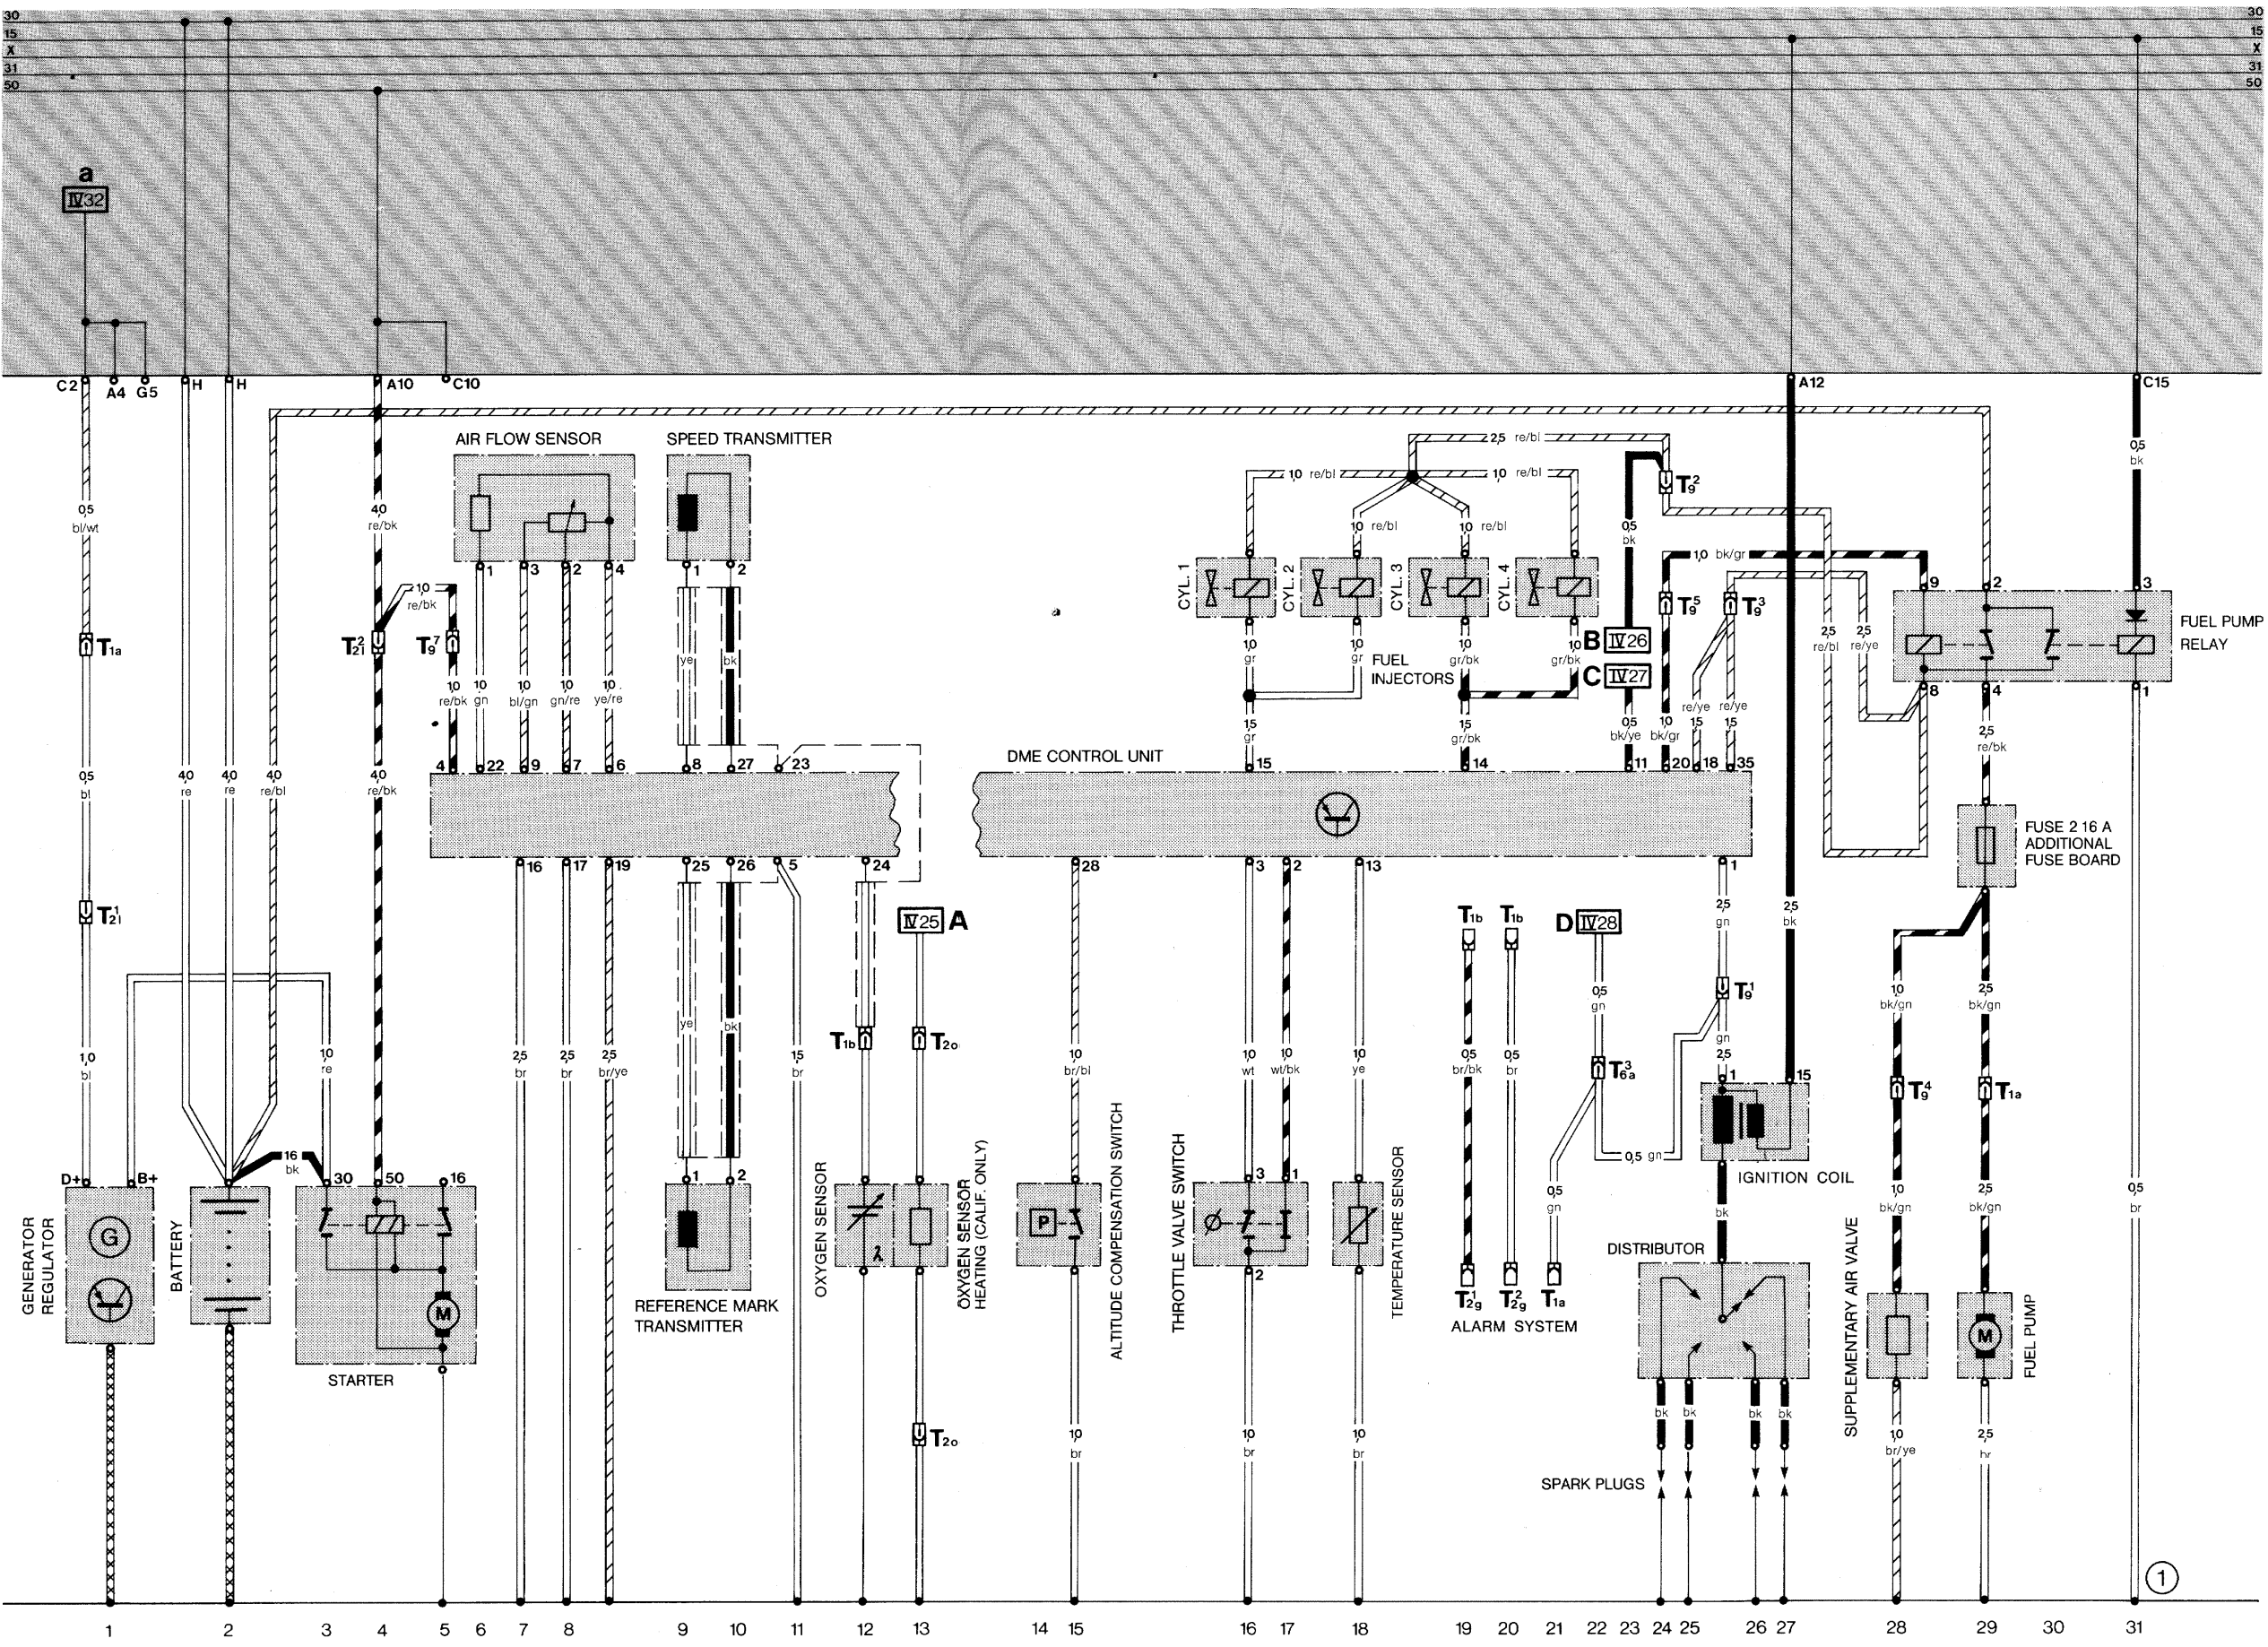


Current Flow Diagram Type 944 USA Model 83 Part II

LIGHT SWITCH, CONCEALING HEADLIGHT

FOG LIGHTS

HEADLIGHT

PARKING LIGHT, REAR LIGHT

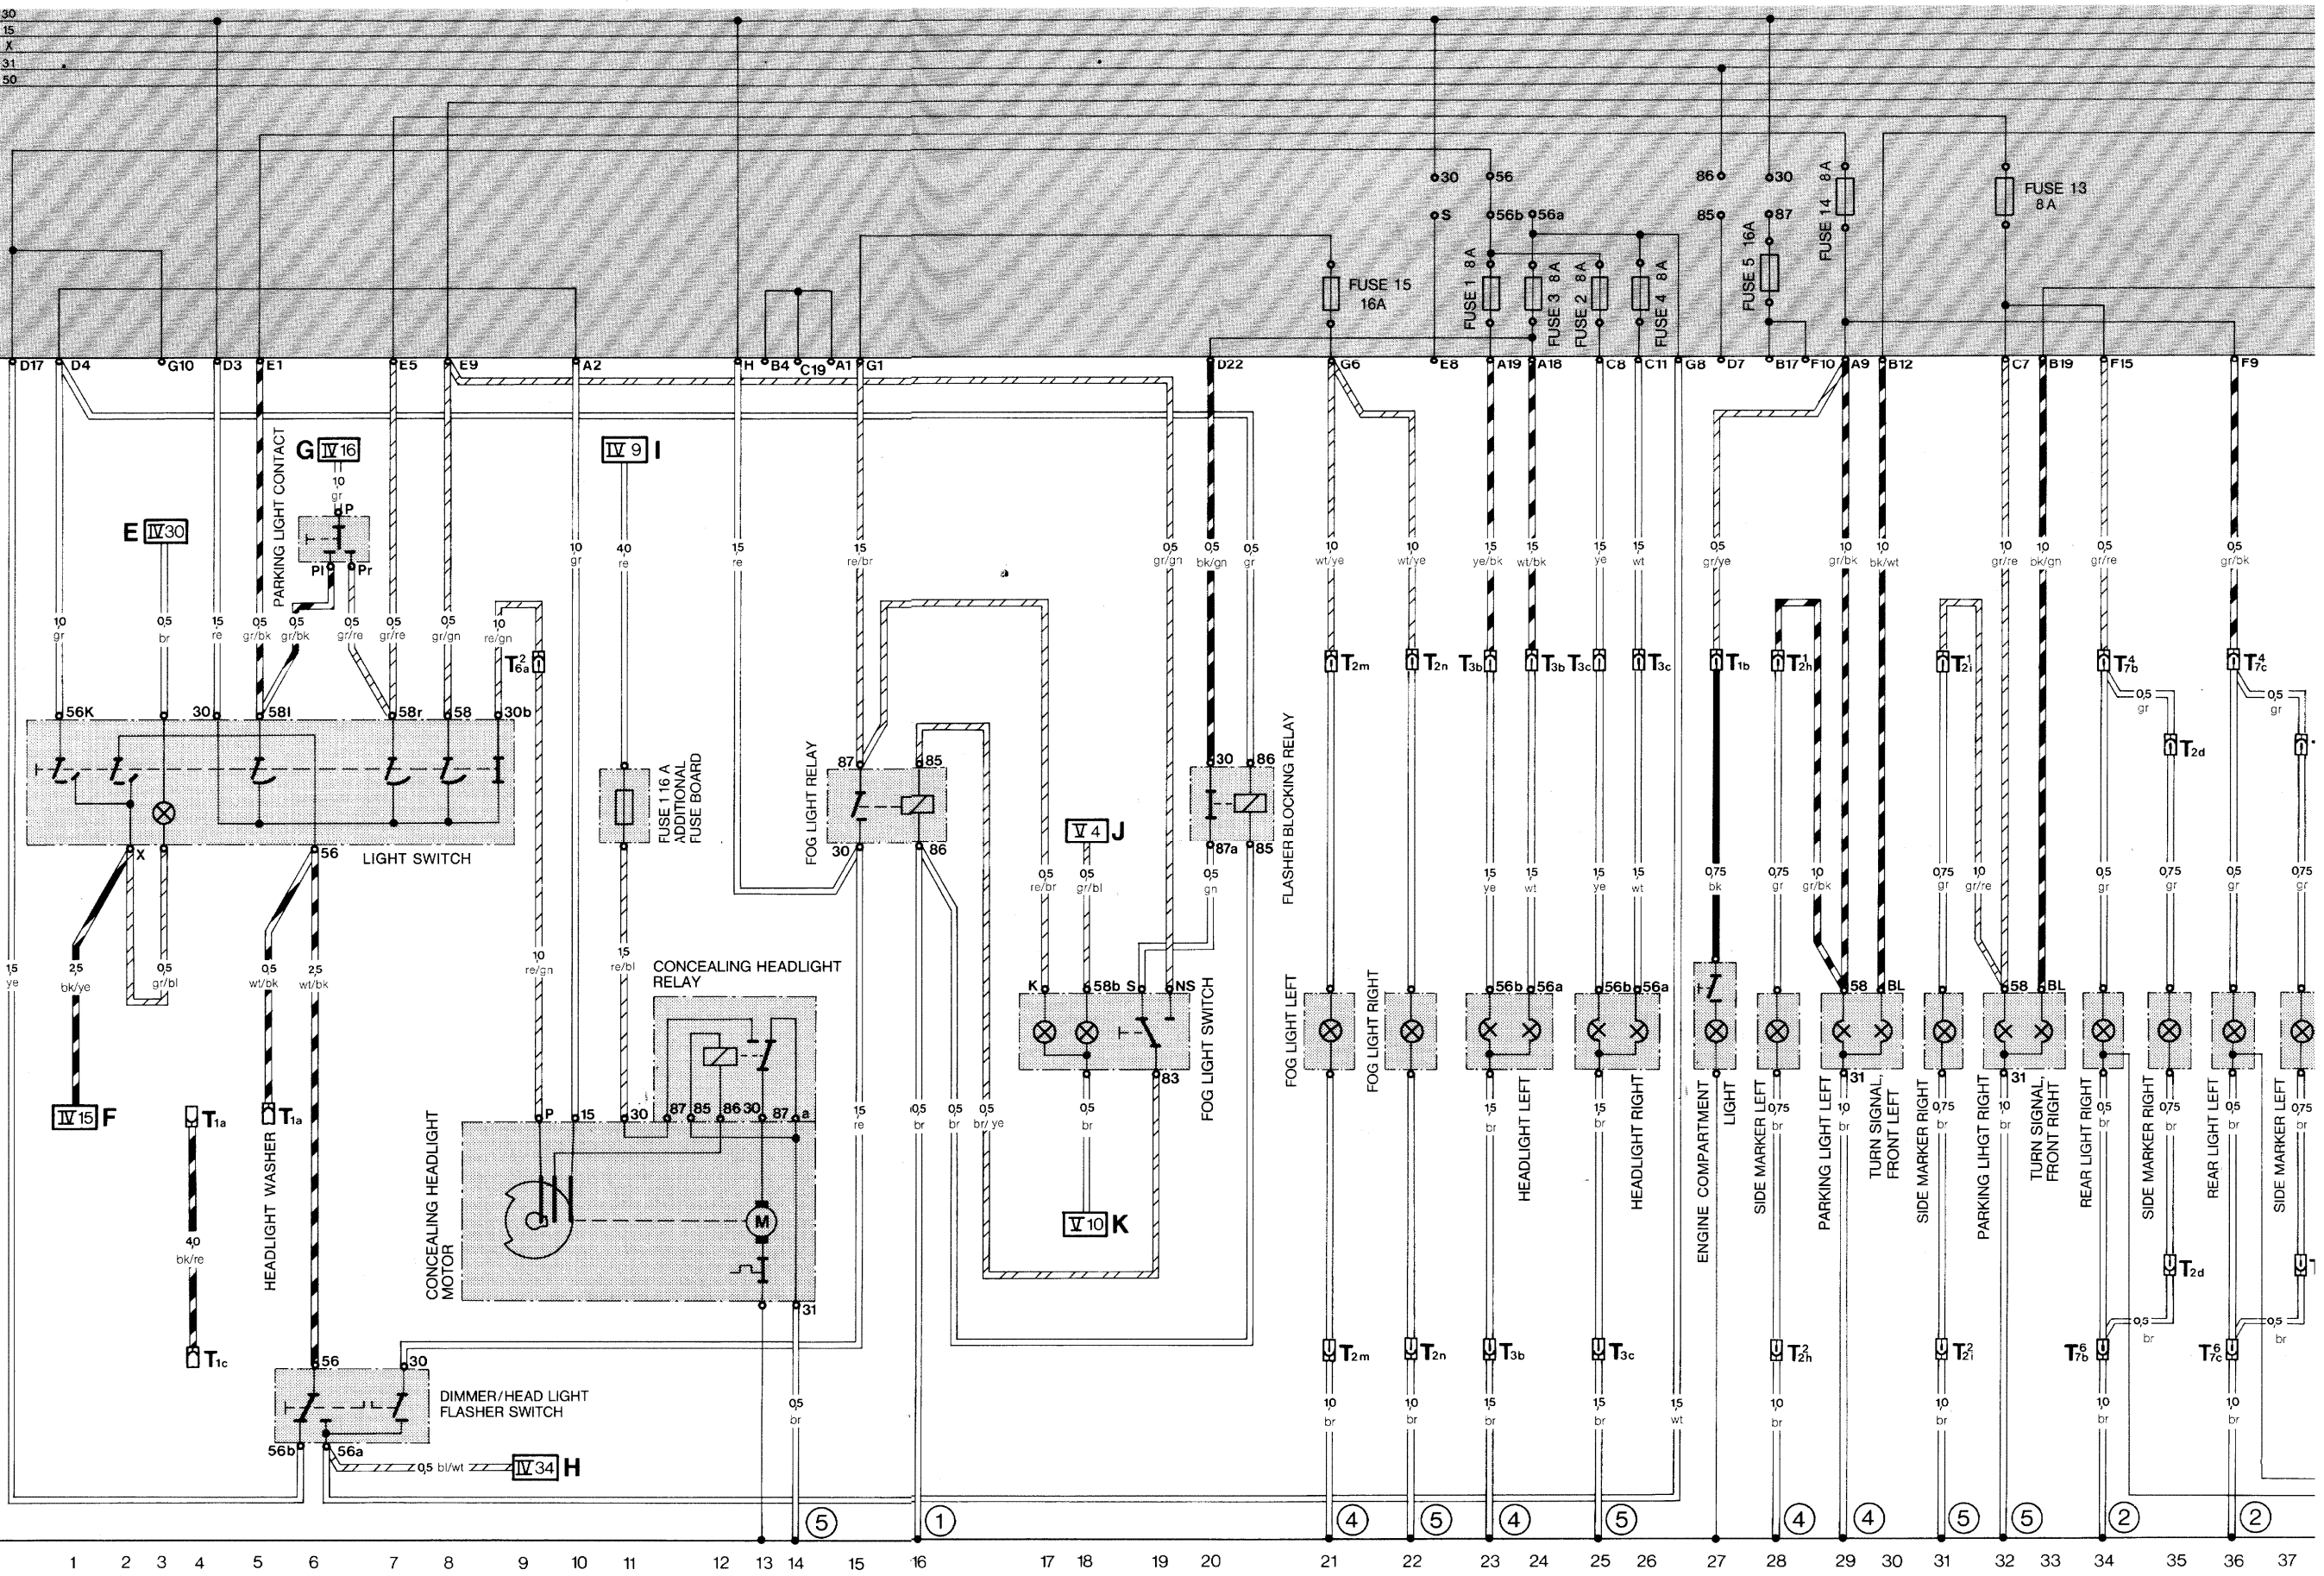

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37


— LIGHT SWITCH, CONCEALING HEADLIGHT — — FOG LIGHTS — — HEADLIGHT — — PARKING LIGHT, REAR LIGHT —

Current Flow Diagram Type 944 USA Model 83 Part III

BRAKE LIGHT
EMERGENCY FLASHER
TURN SIGNAL, BACK-UP LIGHT
HORN
INTERIOR LIGHT

Current Flow Diagram Type 944 USA Model 83 Part IV


REAR WINDOW DEFOGGER,
IGNITION/STARTER SWITCH, SEAT BELTS
INSTRUMENT CLUSTER

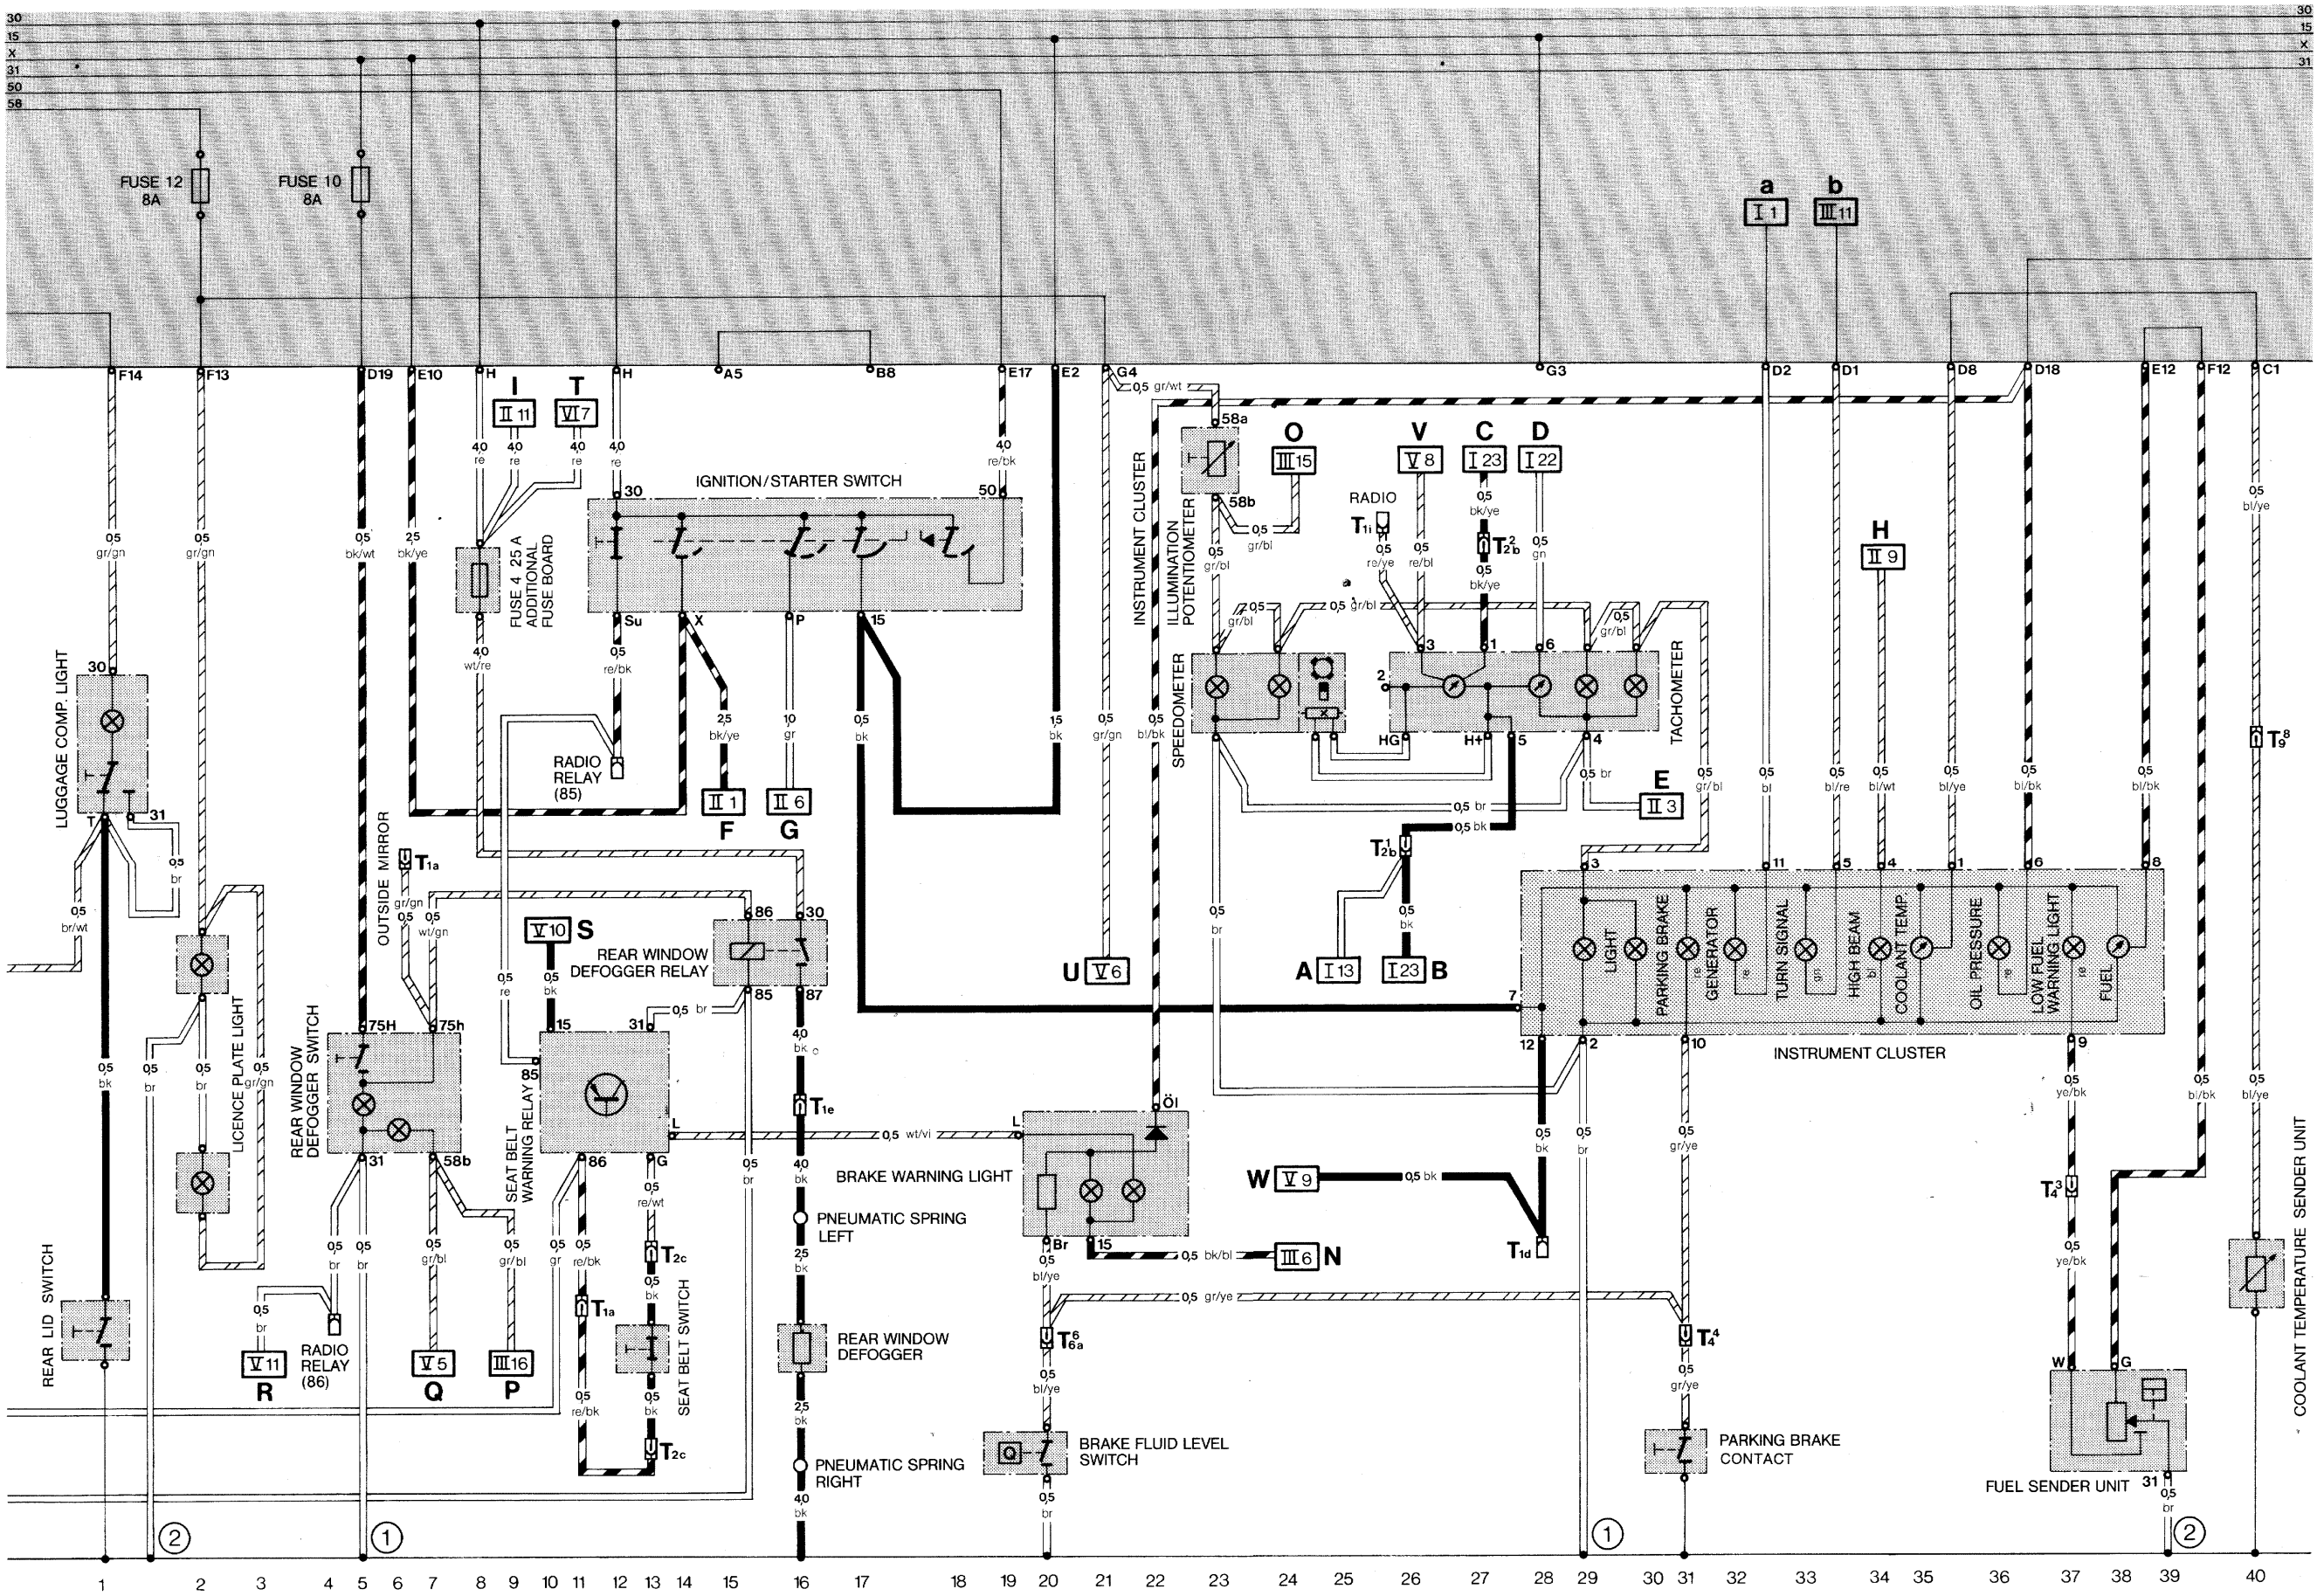


REAR WINDOW DEFOGGER, IGNITION/STARTER SWITCH, SEAT BELTS | INSTRUMENT CLUSTER

Current Flow Diagram Type 944 USA Model 83 Part V

INSTRUMENTS CENTER CONSOLE
WIND SHIELD WIPER

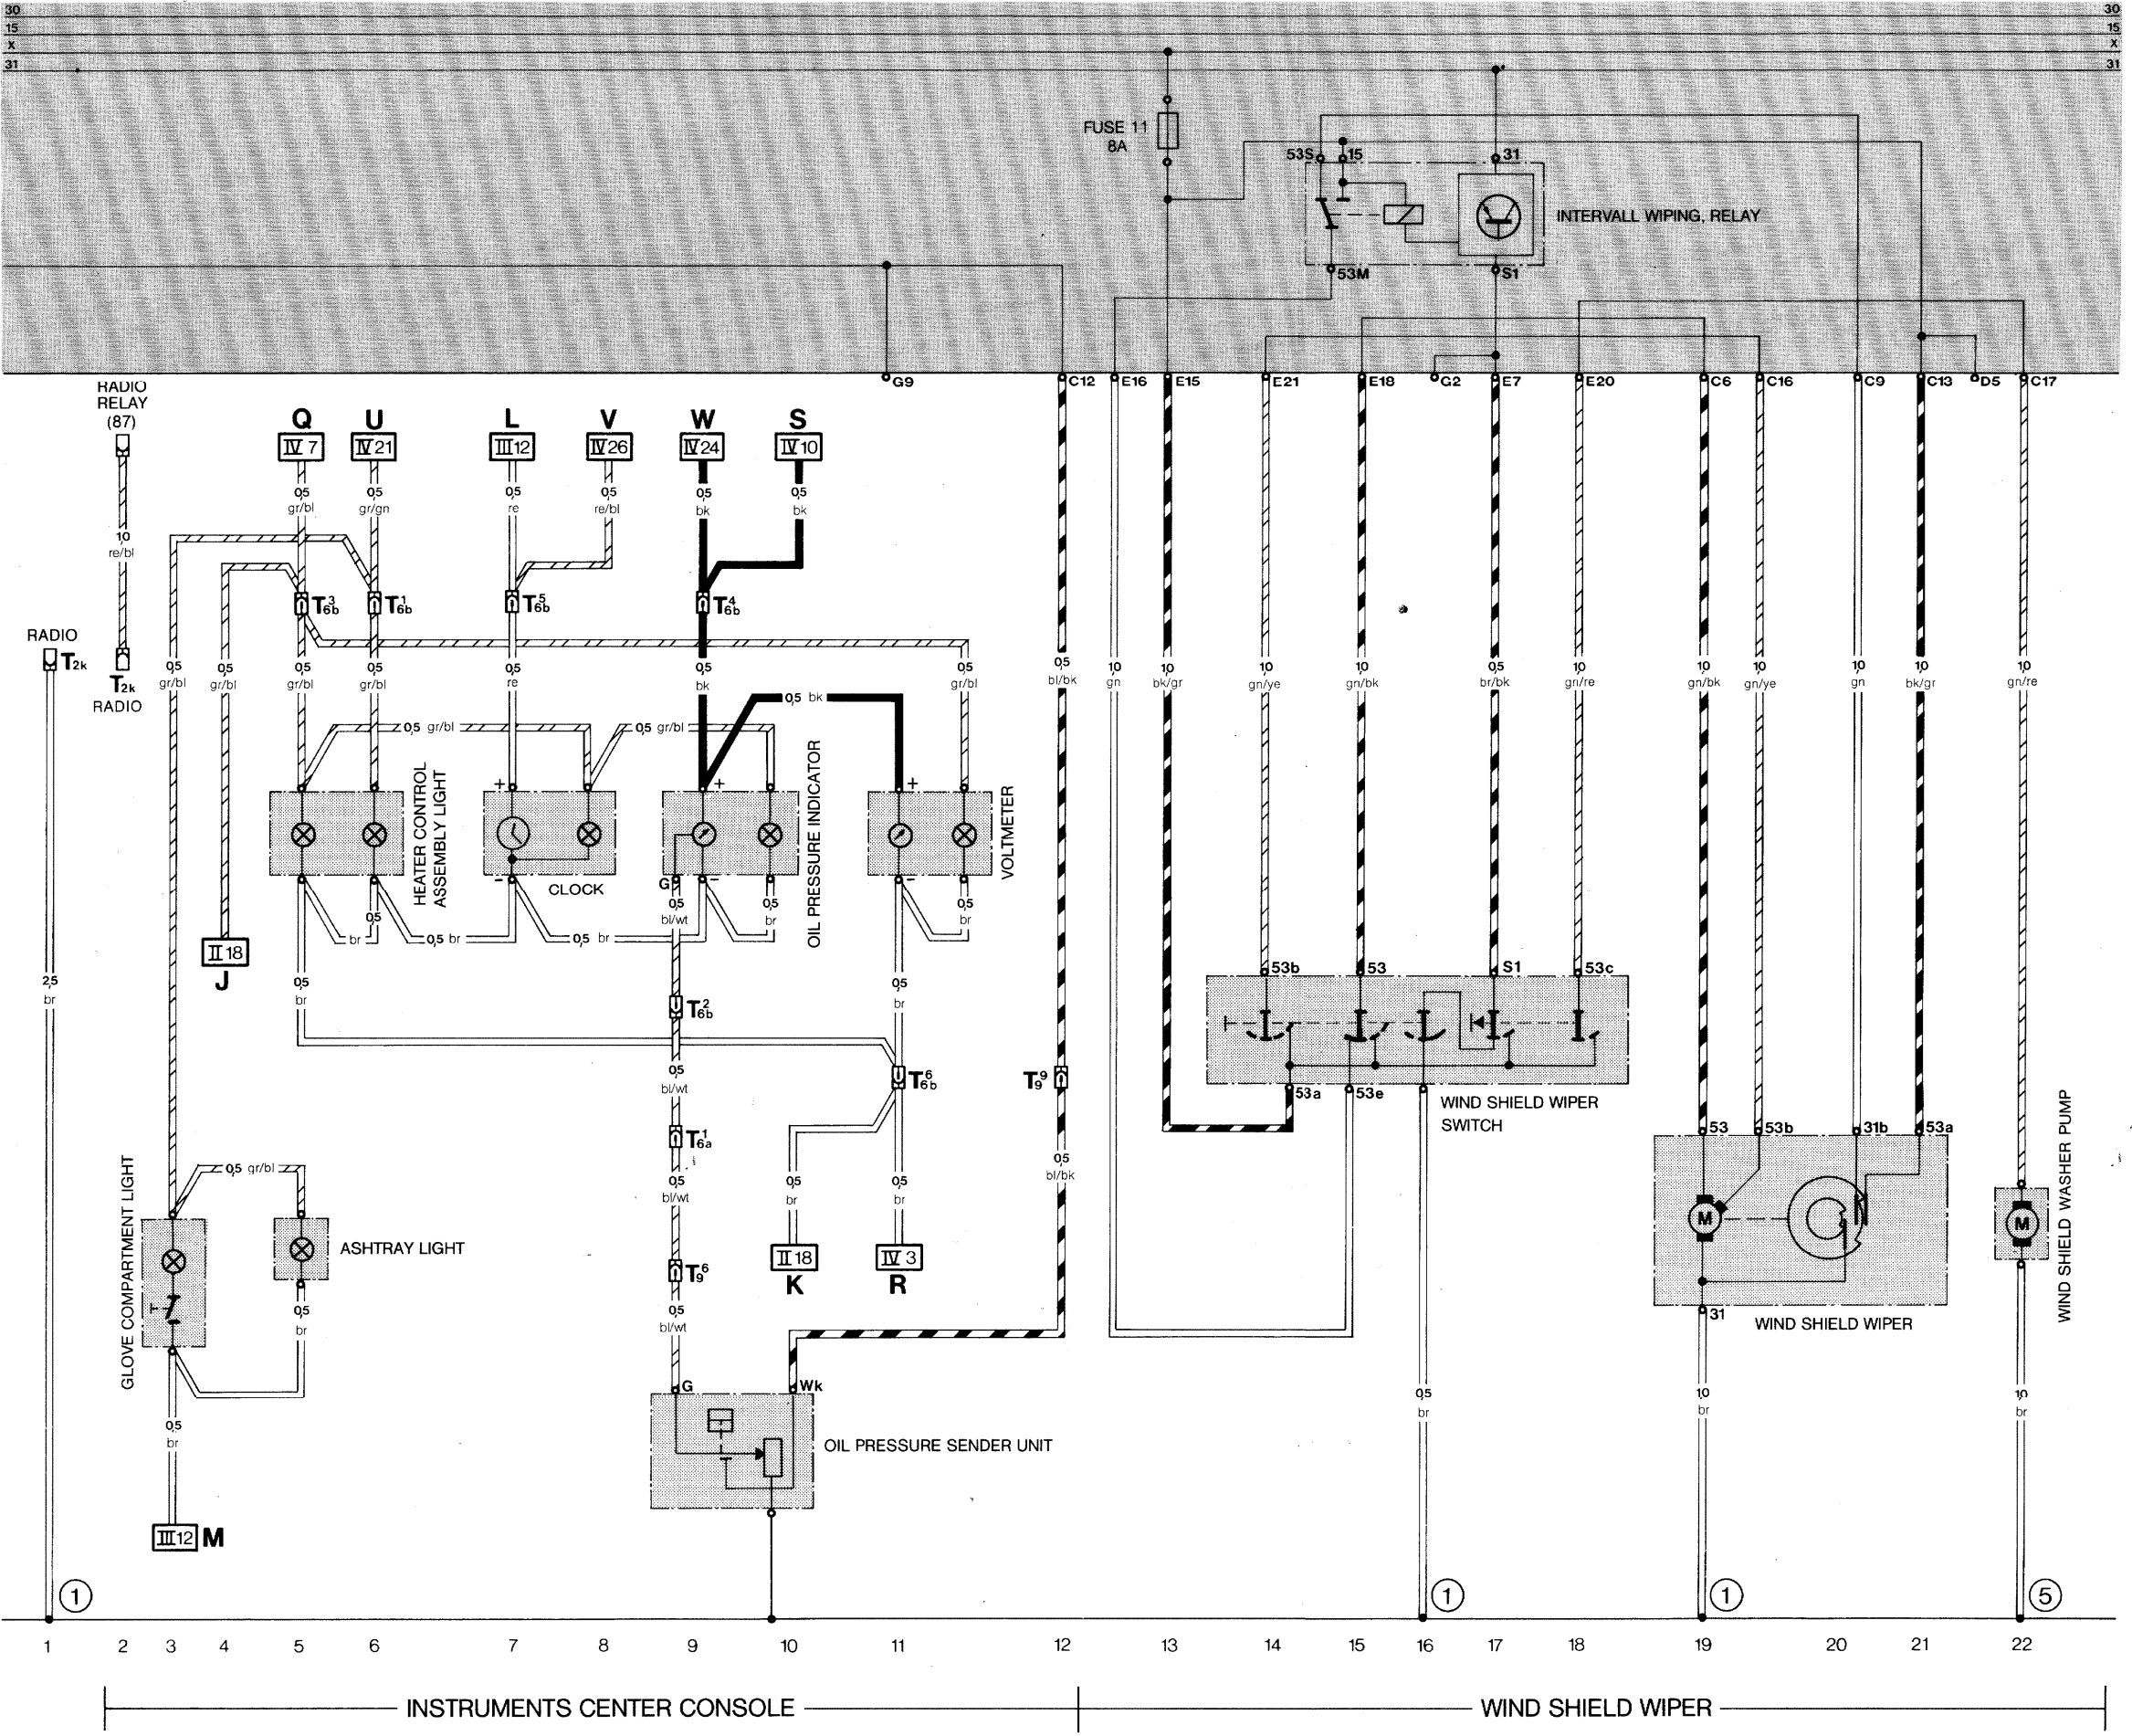


Current Flow Diagram Type 944 USA Model 83 Part VI

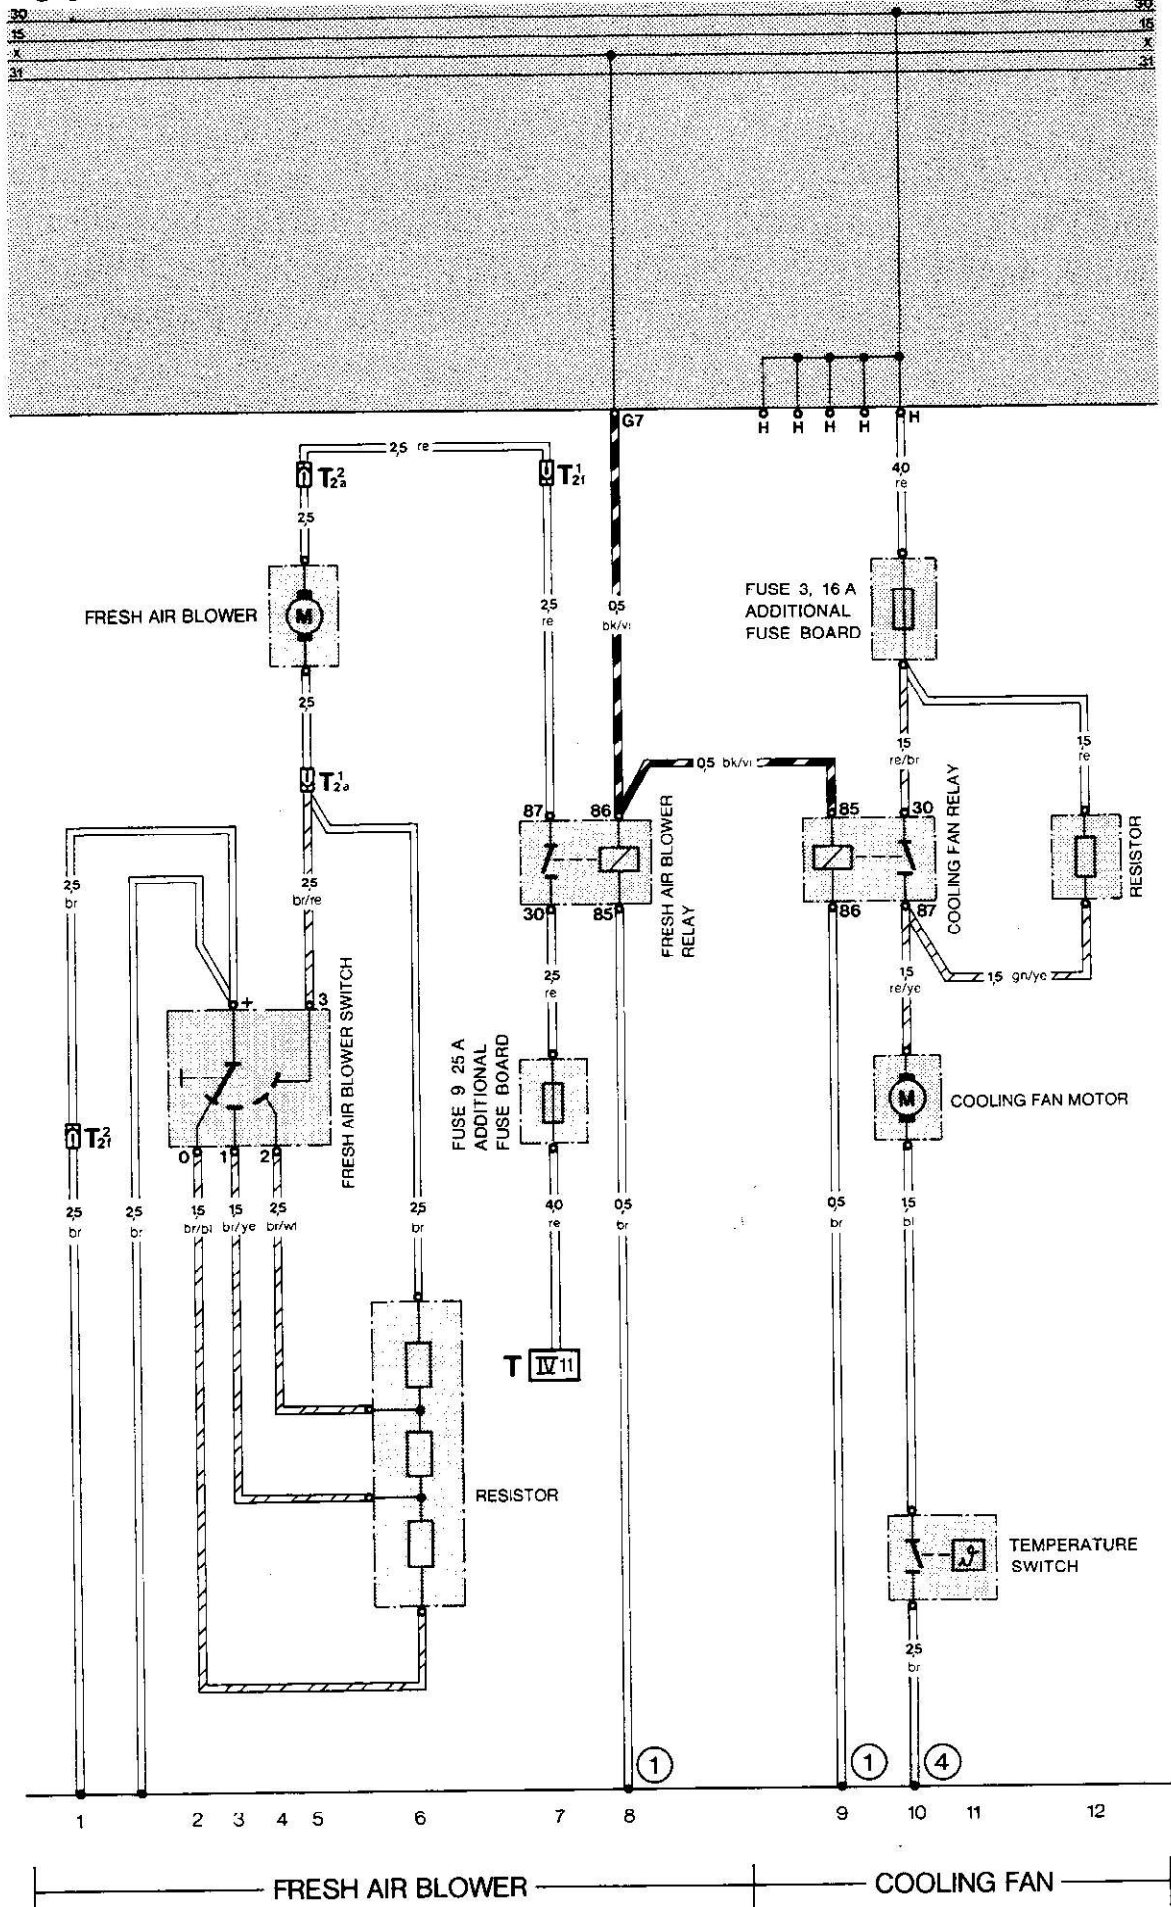

Additional Current Flow Diagram Type 944 USA

AIR CONDITIONER

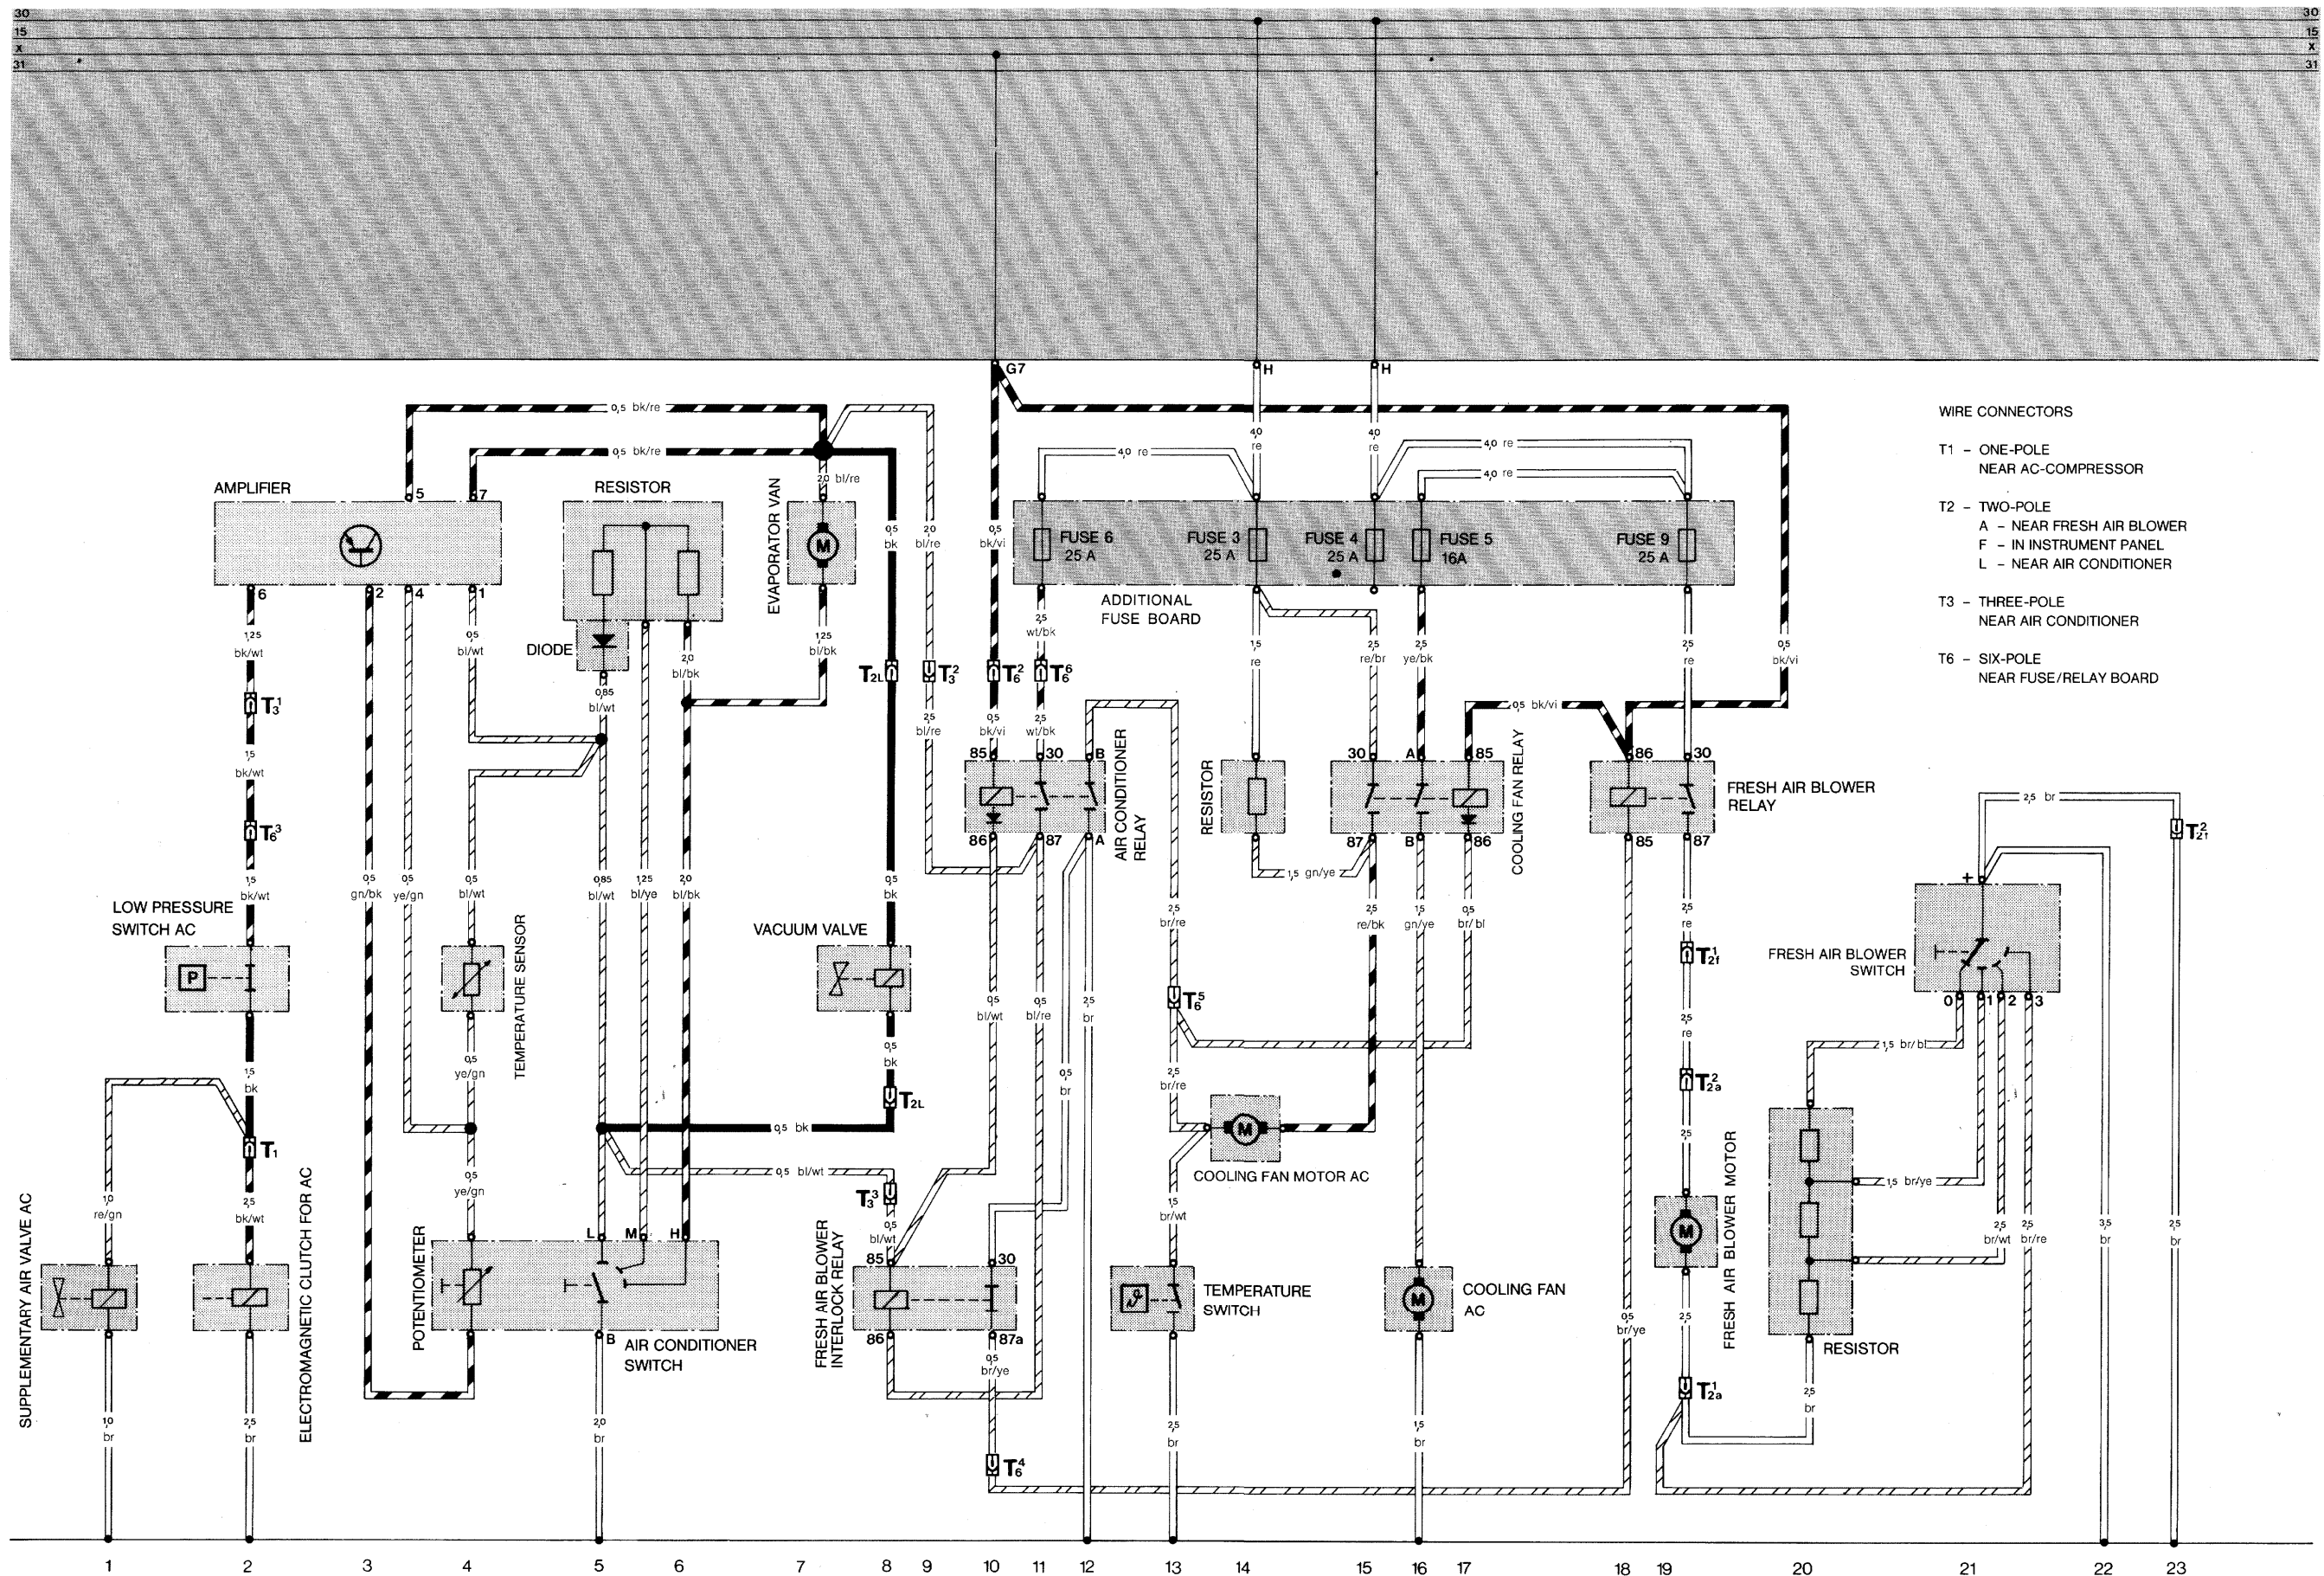

WIRE CONNECTORS

- T1 - ONE-POLE
NEAR AC-COMPRESSOR
- T2 - TWO-POLE
A - NEAR FRESH AIR BLOWER
F - IN INSTRUMENT PANEL
L - NEAR AIR CONDITIONER
- T3 - THREE-POLE
NEAR AIR CONDITIONER
- T6 - SIX-POLE
NEAR FUSE/RELAY BOARD

Additional Current Flow Diagram Type 944

RADIO

