



- | | | |
|------------------------|--|--|
| 1 - Fuel pump | A - Charging air cooler | H - Air circulation valve |
| 2 - Fuel filter | B - Air flow sensor | I - Temperature valve
(open above 58°C/
136.4°F) |
| 3 - Pressure damper | C - Throttle housing | J - Shutoff valve |
| 4 - Pressure regulator | D - Intake pipe | K - Control valve |
| 5 - Injection line | E - To charging pressure control valve | L - To control unit
(charging pressure control) |
| 6 - Fuel injector | F - To brake booster | M - Timing valve for charging pressure |
| 7 - Fuel return | G - Idle actuator | |