 
 
 
 
 

 
 
 

 

 
 
 
 
 


 




 


 

 
 





Current Flow Diagram Type 928 USA
Model 79
Symbols and Explanation

Current Flow Diagram Type 928 USA Model 79 Symbols and Explanation

	SWITCH, OPEN		RESISTOR, HEATING ELEMENT
	SWITCH, CLOSED		FUSE
	SEQUENCE SWITCH		BULB
	TIP SWITCH		POTENTIOMETER
	SWITCH (TIP SWITCH), MANUALLY OPERATED		RESISTOR SENDER UNIT
	SWITCH (TIP SWITCH), MECHANICALLY OPERATED, E.G. LIMIT SWITCH		INDUCTANCE, COIL
	TEMPERATURE SWITCH		HORN
	PRESSURE SWITCH		LOUDSPEAKER
	TEMPERATURE SWITCH (THERMAL OVERLOAD PROTECTION)		ANTENNA
	FLOAT SWITCH		EQUIPMENT BORDER LINE
	MOTOR		SOLID-STATE CIRCUIT
	GENERATOR		SPARK GAP
	METER, INDICATOR		DIODE
	SOLENOID		BATTERY CELL
	RELAY		WIRE CONNECTION, PERMANENT
	SOLENOID VALVE		WIRE CONNECTION, DETACHABLE
			SHIELDED WIRE



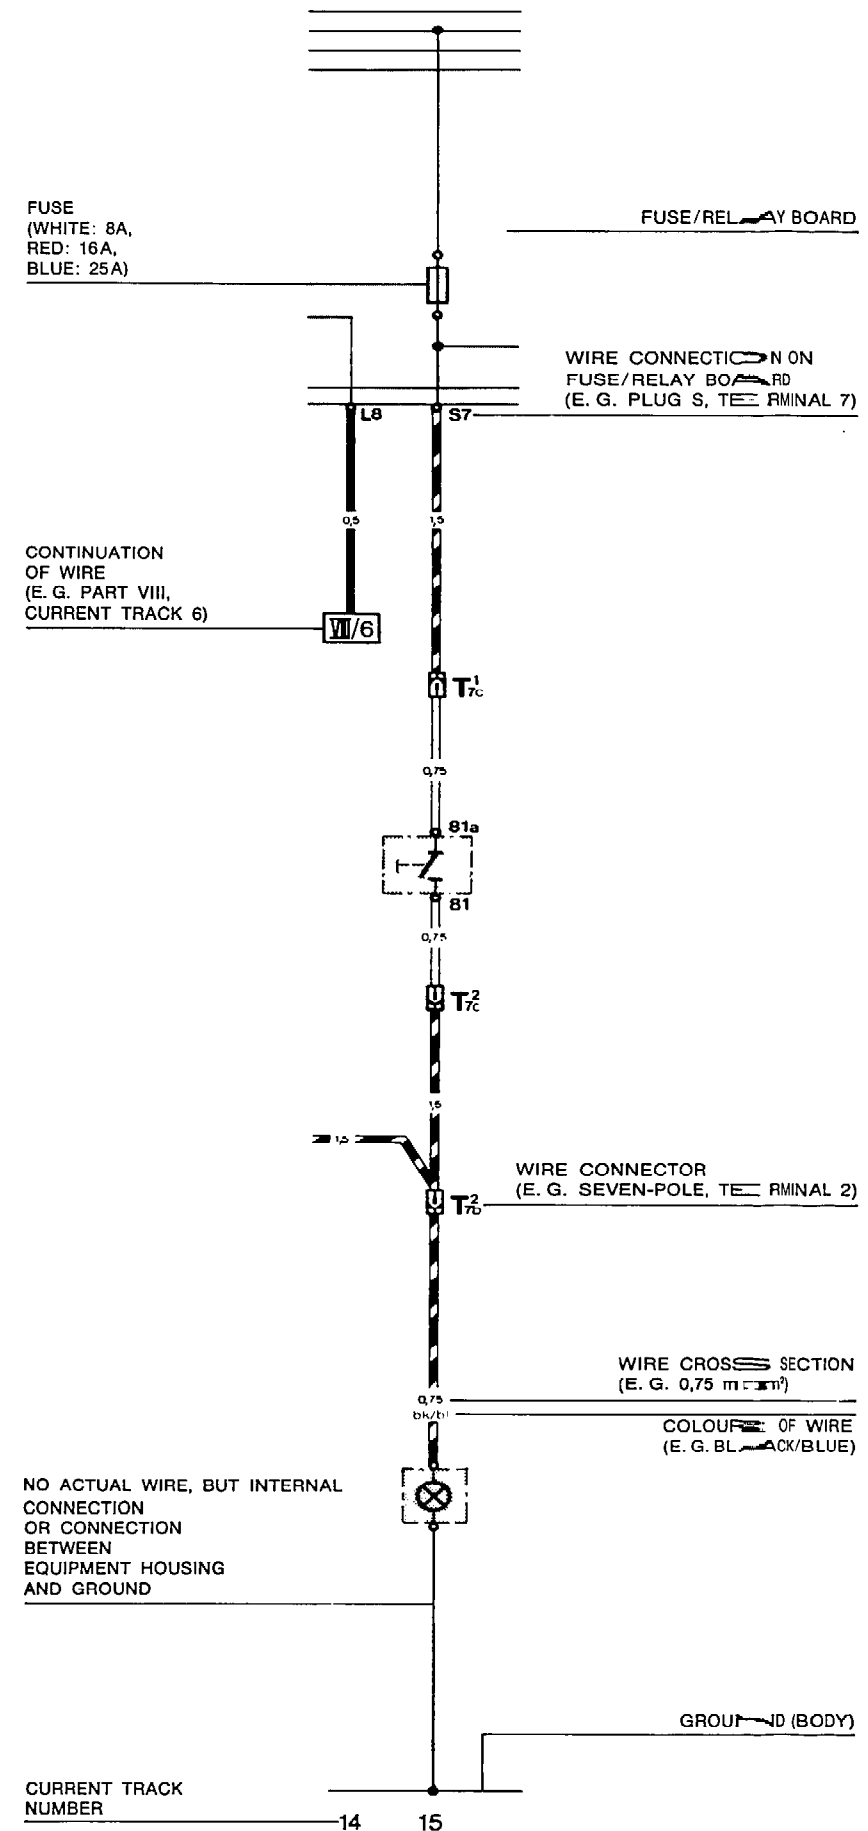Current Flow Diagram Type 928 USA
Model 79
Index

Index

Part	Current-track	Description
VII	7	AIR CONDITIONER SWITCH
IX	19	ANTENNA
X	11	BACKREST ADJUSTMENT, MOTOR
X	11	BACKREST ADJUSTMENT, SWITCH
X	9	BACKREST LIMIT SWITCH
IV	13	BACK-UP LIGHT, LEFT
IV	15	BACK-UP LIGHT, RIGHT
IV	6	BACK-UP LIGHT, SWITCH
I	7	BATTERY
VIII	14	BRAKE FLUID LEVEL SWITCH
VIII	28	BRAKE FLUID LEVEL WARNING LIGHT
IV	5	BRAKE LIGHT, LEFT
IV	12	BRAKE LIGHT, RIGHT
VI	6	BRAKE LIGHT SWITCH
VI	24	BRAKE PAD CONTACT, FRONT, LEFT
VI	22	BRAKE PAD CONTACT, FRONT, RIGHT
VI	20	BRAKE PAD CONTACT, REAR, LEFT
VI	20	BRAKE PAD CONTACT, REAR, RIGHT
VIII	31	BRAKE PADS WARNING LIGHT
VIII	32	BRAKE WARNING LIGHT
VIII	25	CENTRAL WARNING LIGHT
VIII	23	CENTRAL WARNING LIGHT - RESET BUTTON
VIII	10	CENTRAL WARNING UNIT
IX	5	CIGARETTE LIGHTER, FRONT
IX	6	CIGARETTE LIGHTER, REAR
VII	17	CLEANING WATER LEVEL SENDER UNIT
VIII	16	CLEANING WATER LEVEL WARNING LIGHT
IX	2	CLOCK
IX	13	CLUTCH PEDAL SWITCH (TEMPOSTAT)
III	10	CONCEALING HEADLIGHT MOTOR
III	13	CONCEALING HEADLIGHT RELAY
VII	18	COOLANT LEVEL SENDER UNIT
VIII	12	COOLANT LEVEL WARNING LIGHT
VIII	13	COOLANT TEMPERATURE INDICATOR
VII	12	COOLANT TEMPERATURE SENDER UNIT
VIII	24	COOLANT TEMPERATURE WARNING LIGHT
VII	11	COOLING FAN MOTOR, AC
VII	11	COOLING FAN RELAY, AC
VII	2	DEFROSTER RELAY
II	13	DIMMER/HEAD LIGHT FLASHER SWITCH
I	15	DISTRIBUTOR
V	22	DOOR SWITCH, LEFT
V	24	DOOR SWITCH, RIGHT
VII	8	ELECTROMAGNETIC CLUTCH FOR AC
III	20	EMERGENCY FLASHER SWITCH
III	9	ENGINE COMPARTMENT LIGHT
II	21	FOG LIGHT, LEFT
III	1	FOG LIGHT RELAY
II	24	FOG LIGHT, RIGHT
III	1	FOG LIGHT SWITCH
VII	6	FRESH AIR BLOWER MOTOR
VII	3	FRESH AIR BLOWER RELAY
VII	4	FRESH AIR BLOWER, RESISTOR UNIT
VII	5	FRESH AIR BLOWER SWITCH
VIII	15	FUEL GAUGE
I	20	FUEL PUMP
I	20	FUEL PUMP RELAY
VII	19	FUEL SENDER UNIT


Part	Current-track	Description
III	1	1
II	13	2
III	7	3
III	2	4
IX	5	5
IV	17	6
V	4	7
XI	15	8
IV	15	9
IV	5	10
IX	2	11
VIII	26	12
	13	(free)
X	4	14
V	8	15
VII	11	16
VII	3	17
IX	25	FUSE (RADIO)
I	6	GENERATOR
VIII	37	GENERATOR CHARGE INDICATOR LIGHT
V	26	GLOVE COMPARTMENT LIGHT
V	26	GLOVE COMPARTMENT LIGHT SWITCH
III	24	HAZARD/TURN SIGNAL FLASHER
III	12	HEADLIGHT CONTROL RELAY
II	14	HEADLIGHT DIMMER RELAY
II	15	HEADLIGHT, LEFT
III	10	HEADLIGHT RELAY
II	17	HEADLIGHT, RIGHT
III	18	HEADLIGHT SAFETY RELAY
IV	26	HEADLIGHT WASHER PUMP
IV	25	HEADLIGHT WASHER RELAY
VII	1	HEATER CONTROL ASSEMBLY
IX	1	HEATER CONTROL ASSEMBLY LIGHT
VIII	39	HIGH BEAM INDICATOR LIGHT
IX	16	HORN
IX	18	HORN CONTACT
IX	16	HORN RELAY
I	15	IGNITION COIL
II	7	IGNITION/STARTER SWITCH
VIII	8	INSTRUMENT CLUSTER ILLUMINATION
IX	2	INSTRUMENT CLUSTER ILLUMINATION, POTENTIOMETER
V	2	INTENSIVE CLEANER PUMP
V	2	INTENSIVE CLEANER PUMP RELAY
V	3	INTENSIVE CLEANER PUMP SWITCH
V	20	INTERIOR LIGHT, FRONT
V	17	INTERIOR LIGHT, REAR
IV	24	INTERVAL WIPING, POTENTIOMETER
IV	20	INTERVAL WIPING, RELAY
V	30	KEY WARNING BUZZER CONTACT
IV	8	LAMP CONTROL UNIT
III	7	LICENCE PLATE LIGHT
II	8	LIGHT SWITCH
X	3	LONGITUDINAL SEAT ADJUSTMENT, MOTOR
X	5	LONGITUDINAL SEAT ADJUSTMENT, SWITCH
IX	21	LOUDSPEAKER, FRONT, LEFT
IX	24	LOUDSPEAKER, FRONT, RIGHT
IX	20	LOUDSPEAKER, REAR, LEFT
IX	26	LOUDSPEAKER, REAR, RIGHT
VIII	14	LOW FUEL WARNING LIGHT
VII	8	LOW PRESSURE SWITCH, AC
V	19	MAKE-UP MIRROR ILLUMINATION
VIII	20	MILEAGE RESET, SOLENOID
VIII	20	MILEAGE RESET SWITCH
VIII	36	OIL LEVEL INDICATOR LIGHT
VII	14	OIL LEVEL SWITCH
VIII	27	OIL PRESSURE INDICATOR
VIII	33	OIL PRESSURE INDICATOR LIGHT
VII	15	OIL PRESSURE SENDER UNIT
VI	3	OUTSIDE MIRROR, LEFT
VI	5	OUTSIDE MIRROR, LEFT, SWITCH

Part	Current-track	Description
VIII	10	PARKING BRAKE CONTACT
VIII	34	PARKING BRAKE INDICATOR LIGHT
II	5	PARKING LIGHT CONTACT
VIII	11	PARKING LIGHT INDICATOR
II	20	PARKING LIGHT, LEFT
II	23	PARKING LIGHT, RIGHT
VI	9	POWER WINDOW MOTOR, LEFT
VI	12	POWER WINDOW MOTOR, RIGHT
VI	9	POWER WINDOW RELAY
VI	10	POWER WINDOW SWITCH, LEFT
VI	13	POWER WINDOW SWITCH, RIGHT
IX	23	RADIO
V	21	REAR LID SWITCH
IV	4	REAR LIGHT, LEFT
IV	9	REAR LIGHT, RIGHT
VIII	18	REAR LIGHTS WARNING LIGHT
V	14	REAR WINDOW DEFOGGER
V	14	REAR WINDOW DEFOGGER RELAY
V	11	REAR WINDOW DEFOGGER SWITCH
V	7	REAR WINDOW WIPER MOTOR
V	5	REAR WINDOW WIPER SWITCH
I	6	REGULATOR
I	13	RESISTOR
V	28	SEAT BELT CONTACT
V	30	SEAT BELT WARNING LIGHT
V	28	SEAT BELT WARNING SYSTEM RELAY
X	9	SEAT RAIL LIMIT SWITCH
X	6	SEAT RELAY
II	19	SIDE MARKER, FRONT LEFT
II	22	SIDE MARKER, FRONT RIGHT
IV	7	SIDE MARKER, REAR LEFT
IV	4	SIDE MARKER, REAR RIGHT
VI	18	SLIDING ROOF MOTOR
VI	16	SLIDING ROOF SWITCH
I	17	SPARK PLUG
IX	24	SPEAKER BALANCE
VIII	21	SPEEDOMETER
IX	14	SPEEDOMETER SENSOR
VII	8	SPEED RELAY, AC
I	8	STARTER
I	9	STARTER BLOCKING RELAY (CARS WITH AUTOMATIC TRANSMISSION ONLY)
I	11	START VALVE
VIII	17	STOP LIGHTS WARNING LIGHT
I	23	SUPPLEMENTARY AIR VALVE
VII	7	SUPPLEMENTARY AIR VALVE, AC
IX	27	SUPPRESSOR (RADIO)
VIII	26	TACHOMETER
VII	10	TEMPERATURE SWITCH, COOLANT
VII	7	TEMPERATURE SWITCH, EVAPORATOR
VII	9	TEMPERATURE SWITCH, REFRIGERANT
IX	11	TEMPOSTAT CONTROL UNIT
IX	11	TEMPOSTAT (CRUISE CONTROL), SWITCH
IX	13	TEMPOSTAT MOTOR
I	11	THERMO SWITCH FOR COLD START VALVE
I	19	TRANSISTOR IGNITION UNIT
III	14	TURN SIGNAL, FRONT, LEFT
IV	1	TURN SIGNAL, FRONT, RIGHT
VIII	23	TURN SIGNAL INDICATOR LIGHT
VIII	22	TURN SIGNAL INDICATOR LIGHT, (TRAILER)
III	17	TURN SIGNAL, REAR, LEFT
IV	3	TURN SIGNAL, REAR, RIGHT
III	22	TURN SIGNAL SWITCH
X	8	VERTICAL SEAT ADJUSTMENT, MOTOR
X	7	VERTICAL SEAT ADJUSTMENT, SWITCH
VIII	30	VOLTMETER
I	22	WARM UP REGULATOR
V	1	WIND SHIELD WASHER PUMP
IV	17	WIND SHIELD WIPER MOTOR
IV	20	WIND SHIELD WIPER SWITCH

WIRE CONNECTORS		
T1 - ONE-POLE		
A - NEAR TURN SIGNAL, LEFT		
B - NEAR TURN SIGNAL, RIGHT		
C - NEAR AC-COMPRESSOR		
D -		
E -		
F - NEAR FRESH AIR BLOWER		
G - NEAR GLOVE COMPARTMENT		
H - NEAR FUSE RELAY BOARD		
I - IN LEFT DOOR		
T2 - TWO-POLE		
A - BEHIND ACCELERATOR PEDAL		
C - BEHIND REAR BUMPER		
D - BEHIND SIDE COVERING, RIGHT		
E - NEAR LEFT BACKWHEEL		
F - NEAR RIGHT BACKWHEEL		
G - NEAR RIGHT FRONT WHEEL		
H - NEAR LEFT FRONT WHEEL		
I - NEAR DRIVER SEAT		
K - IN DRIVER SEAT		
L - IN DRIVER SEAT		
M - IN DRIVER SEAT		
N - IN DRIVER SEAT		
O - NEAR PASSENGER SEAT		
P - NEAR DRIVER SEAT		
Q - NEAR LEFT FOG LIGHT		
R - NEAR RIGHT FOG LIGHT		
U - NEAR LEFT SIDE MARKER		
V - NEAR RIGHT SIDE MARKER		
T4 - FOUR-POLE		
A - IN SPARE WHEEL WELL		
B - IN CONSOLE, RIGHT		
C - IN CONSOLE RIGHT		
D - IN CONSOLE RIGHT		
G - NEAR LEFT REAR LIGHTS		
H - NEAR RIGHT REAR LIGHTS		
T6 - SIX-POLE		
A - BEHIND SIDE COVERING, RIGHT		
B - IN REAR LID, RIGHT		
T7 - SEVEN-POLE		
A - BEHIND LUGGAGE COMPARTMENT COVERING LEFT		
B - BEHIND LUGGAGE COMPARTMENT COVERING RIGHT		
C - IN SPARE WHEEL WELL		
T8 - EIGHT-POLE		
A - IN DRIVER SEAT		
T12 - TWELVE-POLE		
A - IN DRIVER SEAT, LEFT		
B - IN FOOT WELL, PASSENGER SIDE		
T14 - FOURTEEN-POLE		
IN ENGINE COMPARTMENT, RIGHT		
GROUND TERMINALS		
① ON FRONT LOCK MEMBER, RIGHT		
② AT REAR OF WHEEL ARCH UNDERNEATH RIGHT REAR TRIM PANEL		
③ ON STEERING CONSOLE		
④ ON FRONT LOCK MEMBER, LEFT		
⑤ ON UPPER MOUNTING FOR FUSE/RELAY BOARD		
WIRE COLOURS		
BK - BLACK	GN - GREEN	BR - BROWN
WT - WHITE	YE - YELLOW	BL - BLUE
RE - RED	GR - GREY	VI - VIOLET


Current Flow Diagram Type 928 USA Model 79, Part I

POWER SUPPLY, STARTER
IGNITION
FUEL PUMP

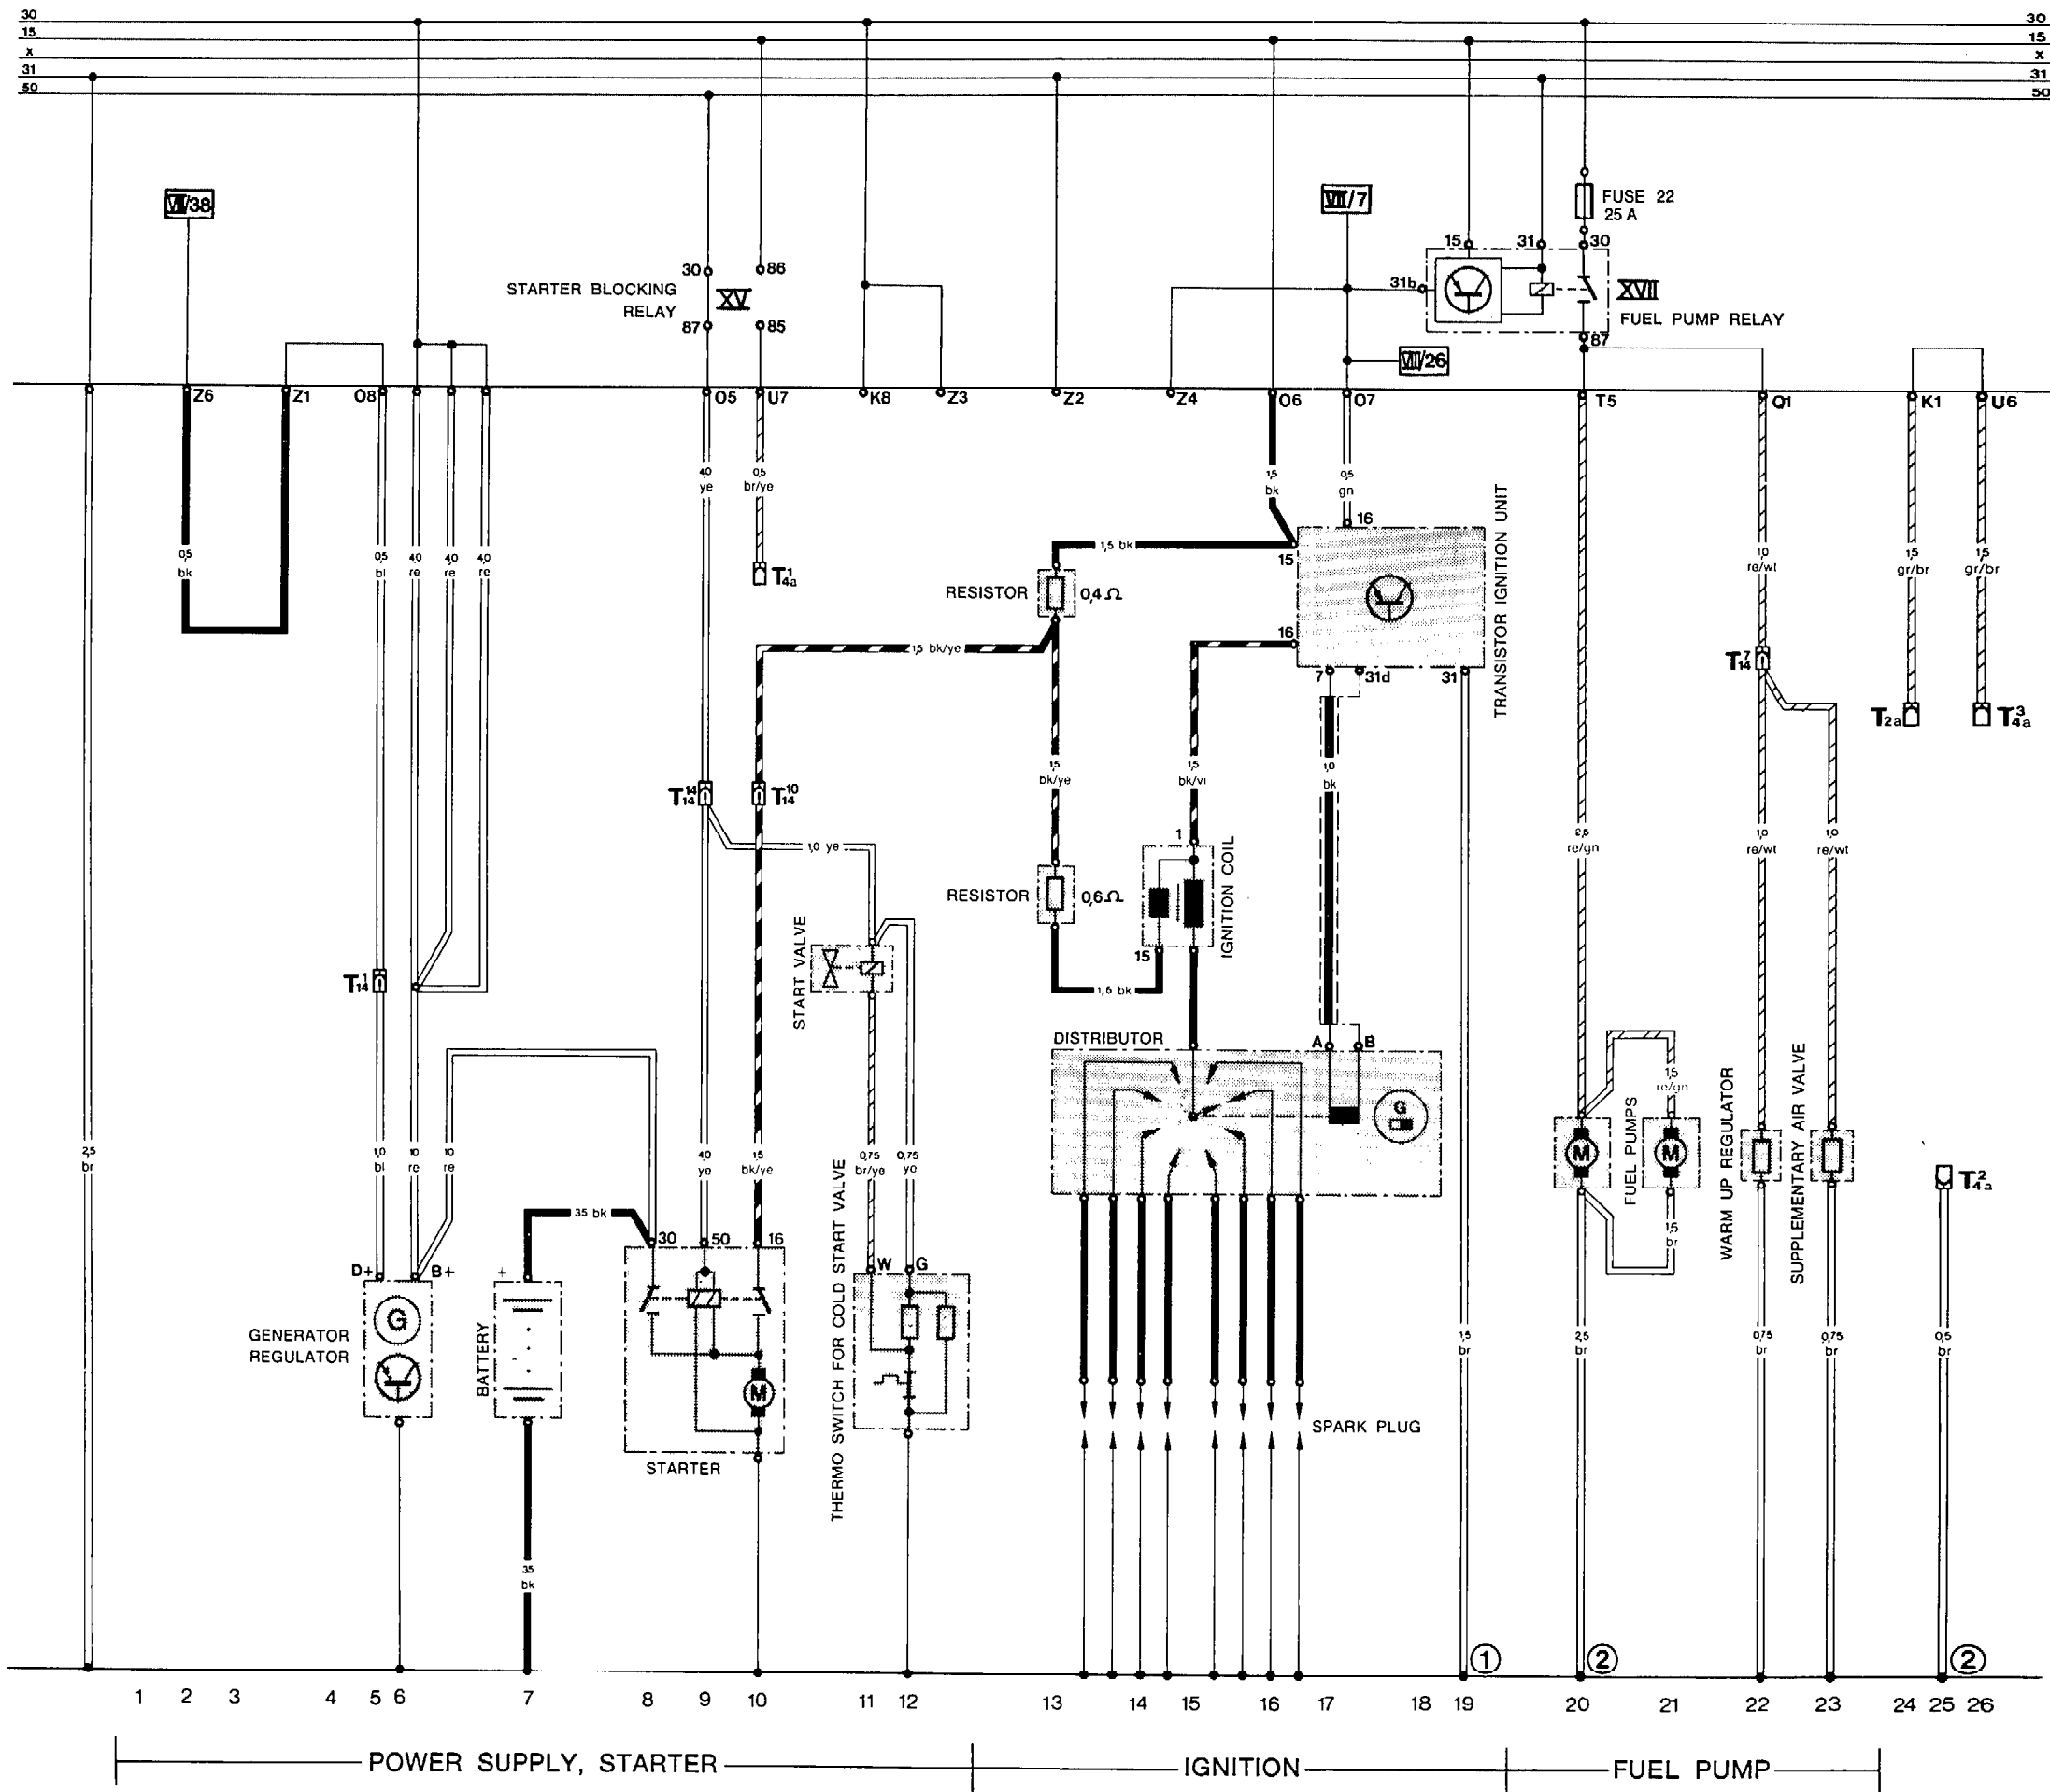


Current Flow Diagram Type 928 USA Model 79, Part II

IGNITION/STARTER SWITCH, LIGHT SWITCH
HEADLIGHT, PARKING LIGHT

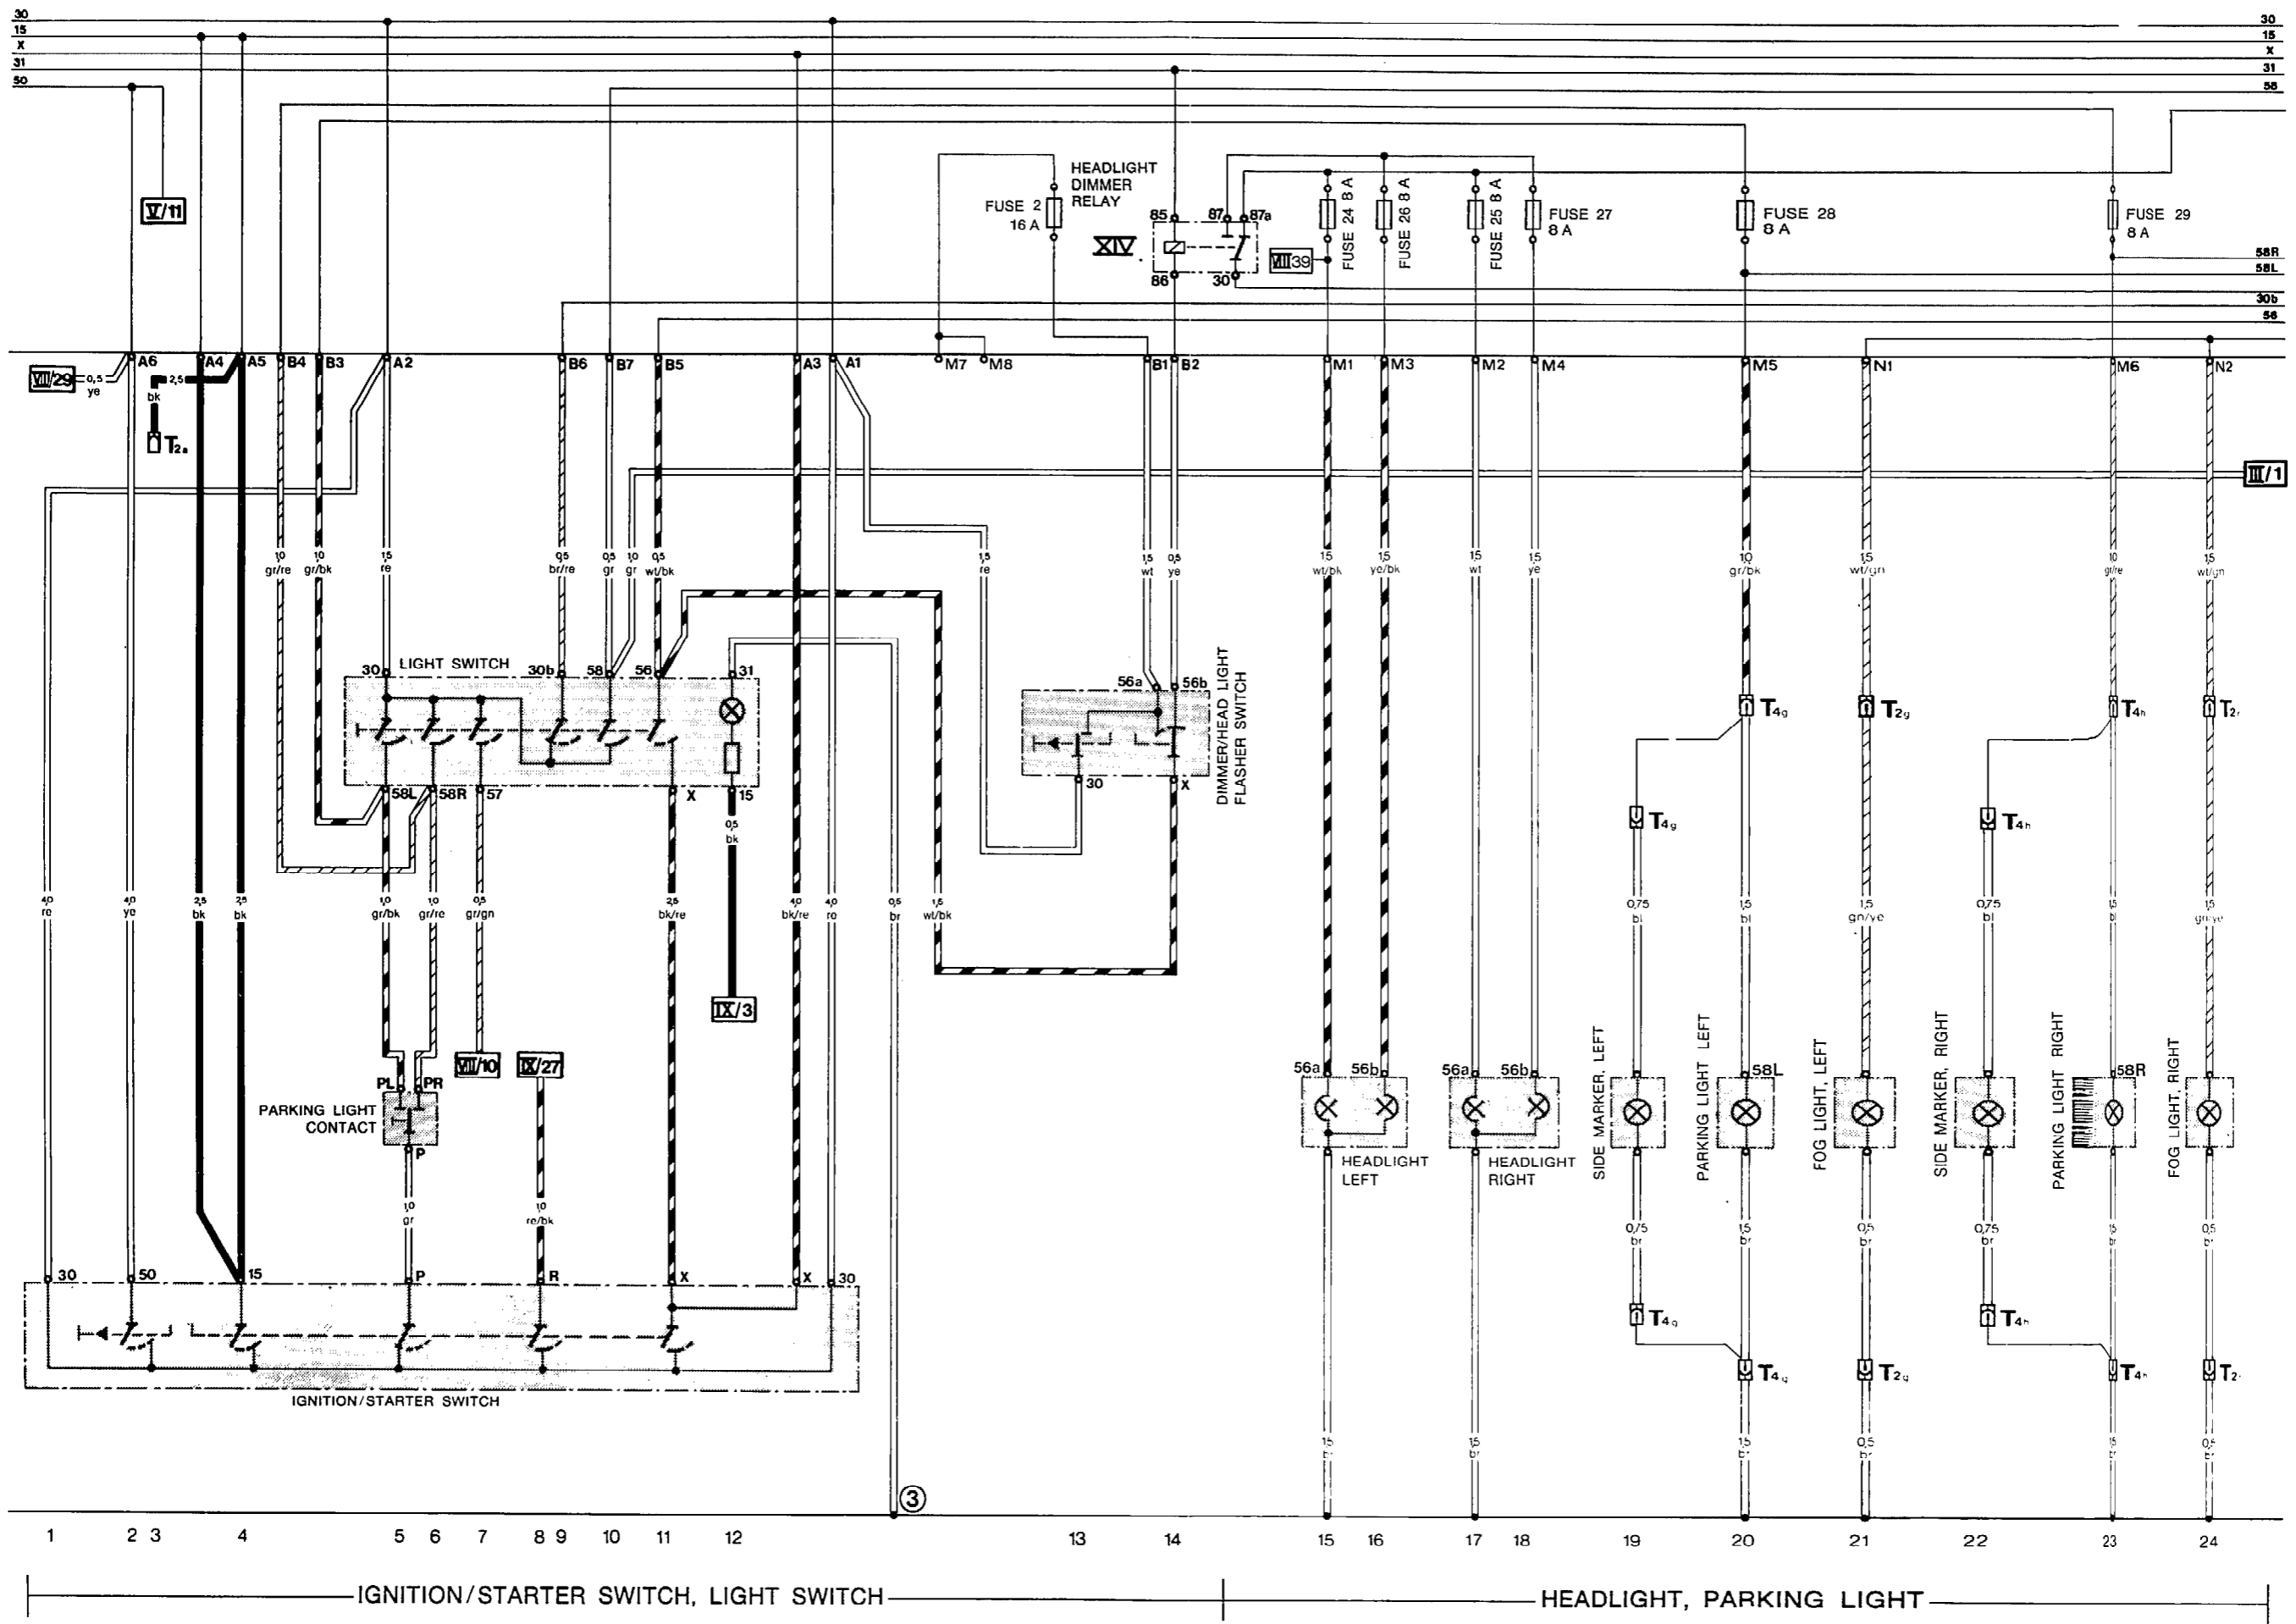

Current Flow Diagram Type 928 USA Model 79, Part III


FOG LIGHT, LICENSE PLATE LIGHT
CONCEALED HEADLIGHT
FRONT TURN SIGNAL
HAZARD FLASHER

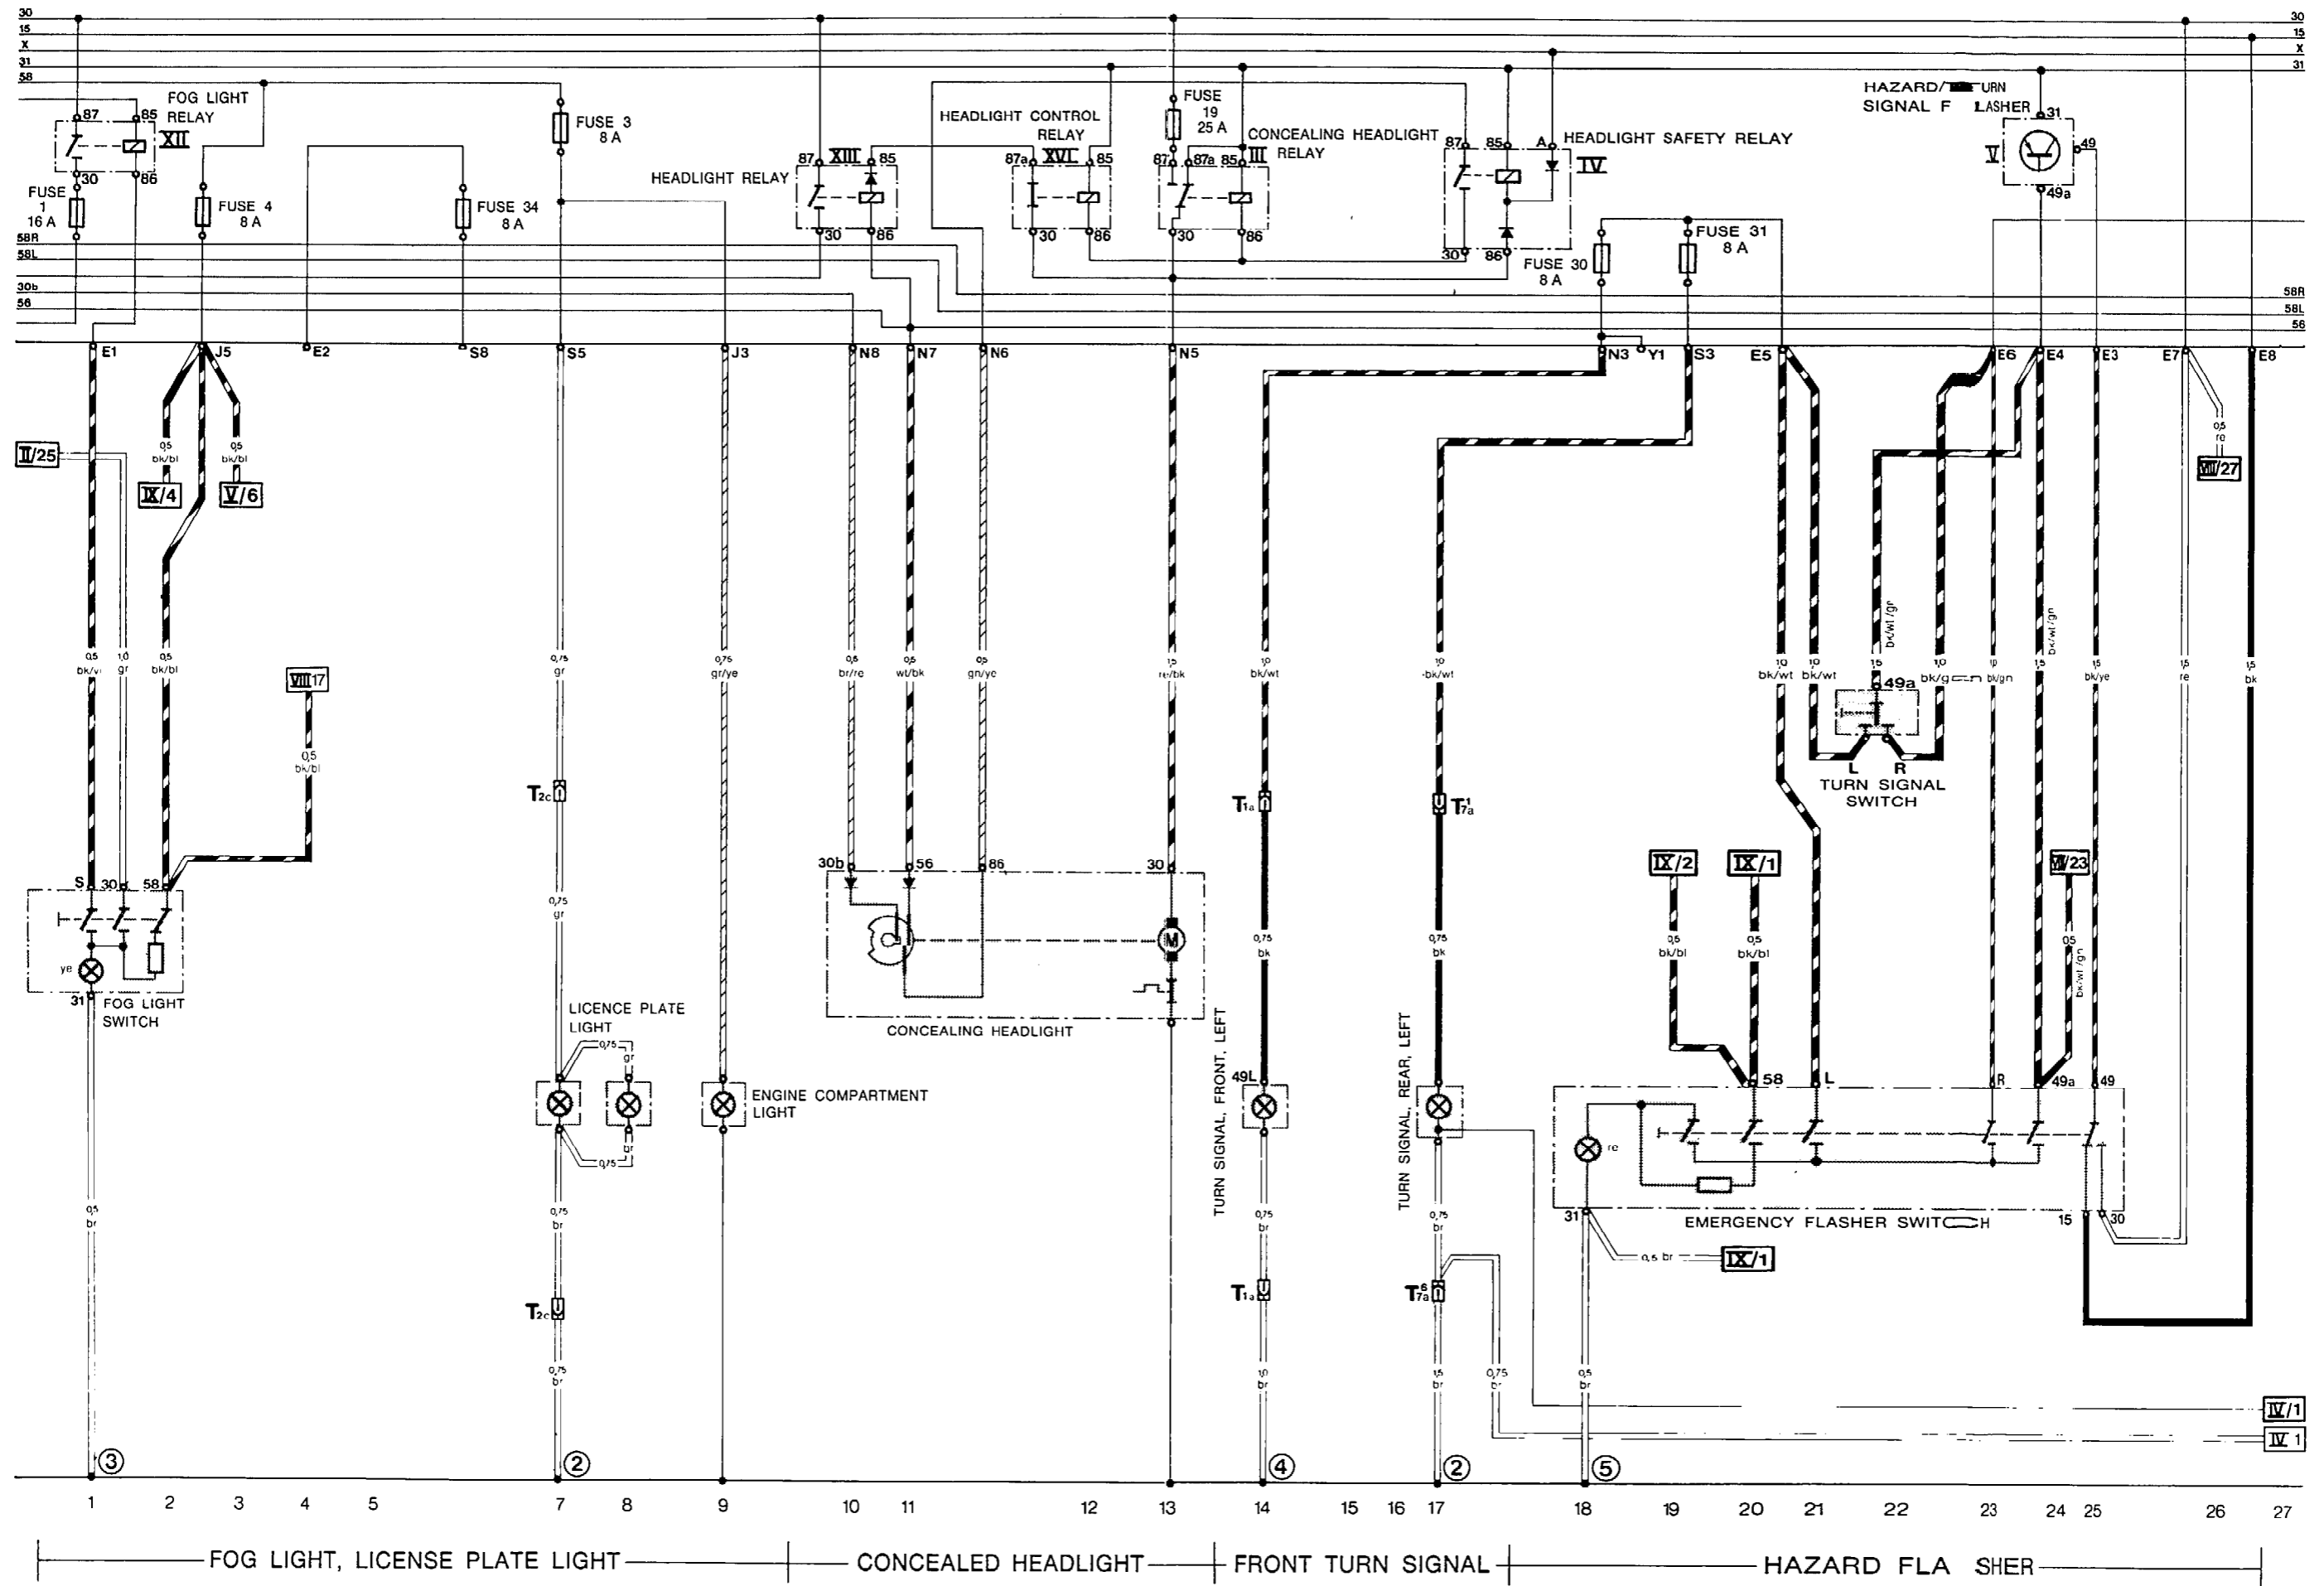

③ — FOG LIGHT, LICENSE PLATE LIGHT — ② — CONCEALED HEADLIGHT — ④ — FRONT TURN SIGNAL — ⑤ — HAZARD FLASHER

Current Flow Diagram Type 928 USA Model 79, Part IV

REAR LIGHTS, LAMP CONTROL UNIT
WINDSHIELD WIPER

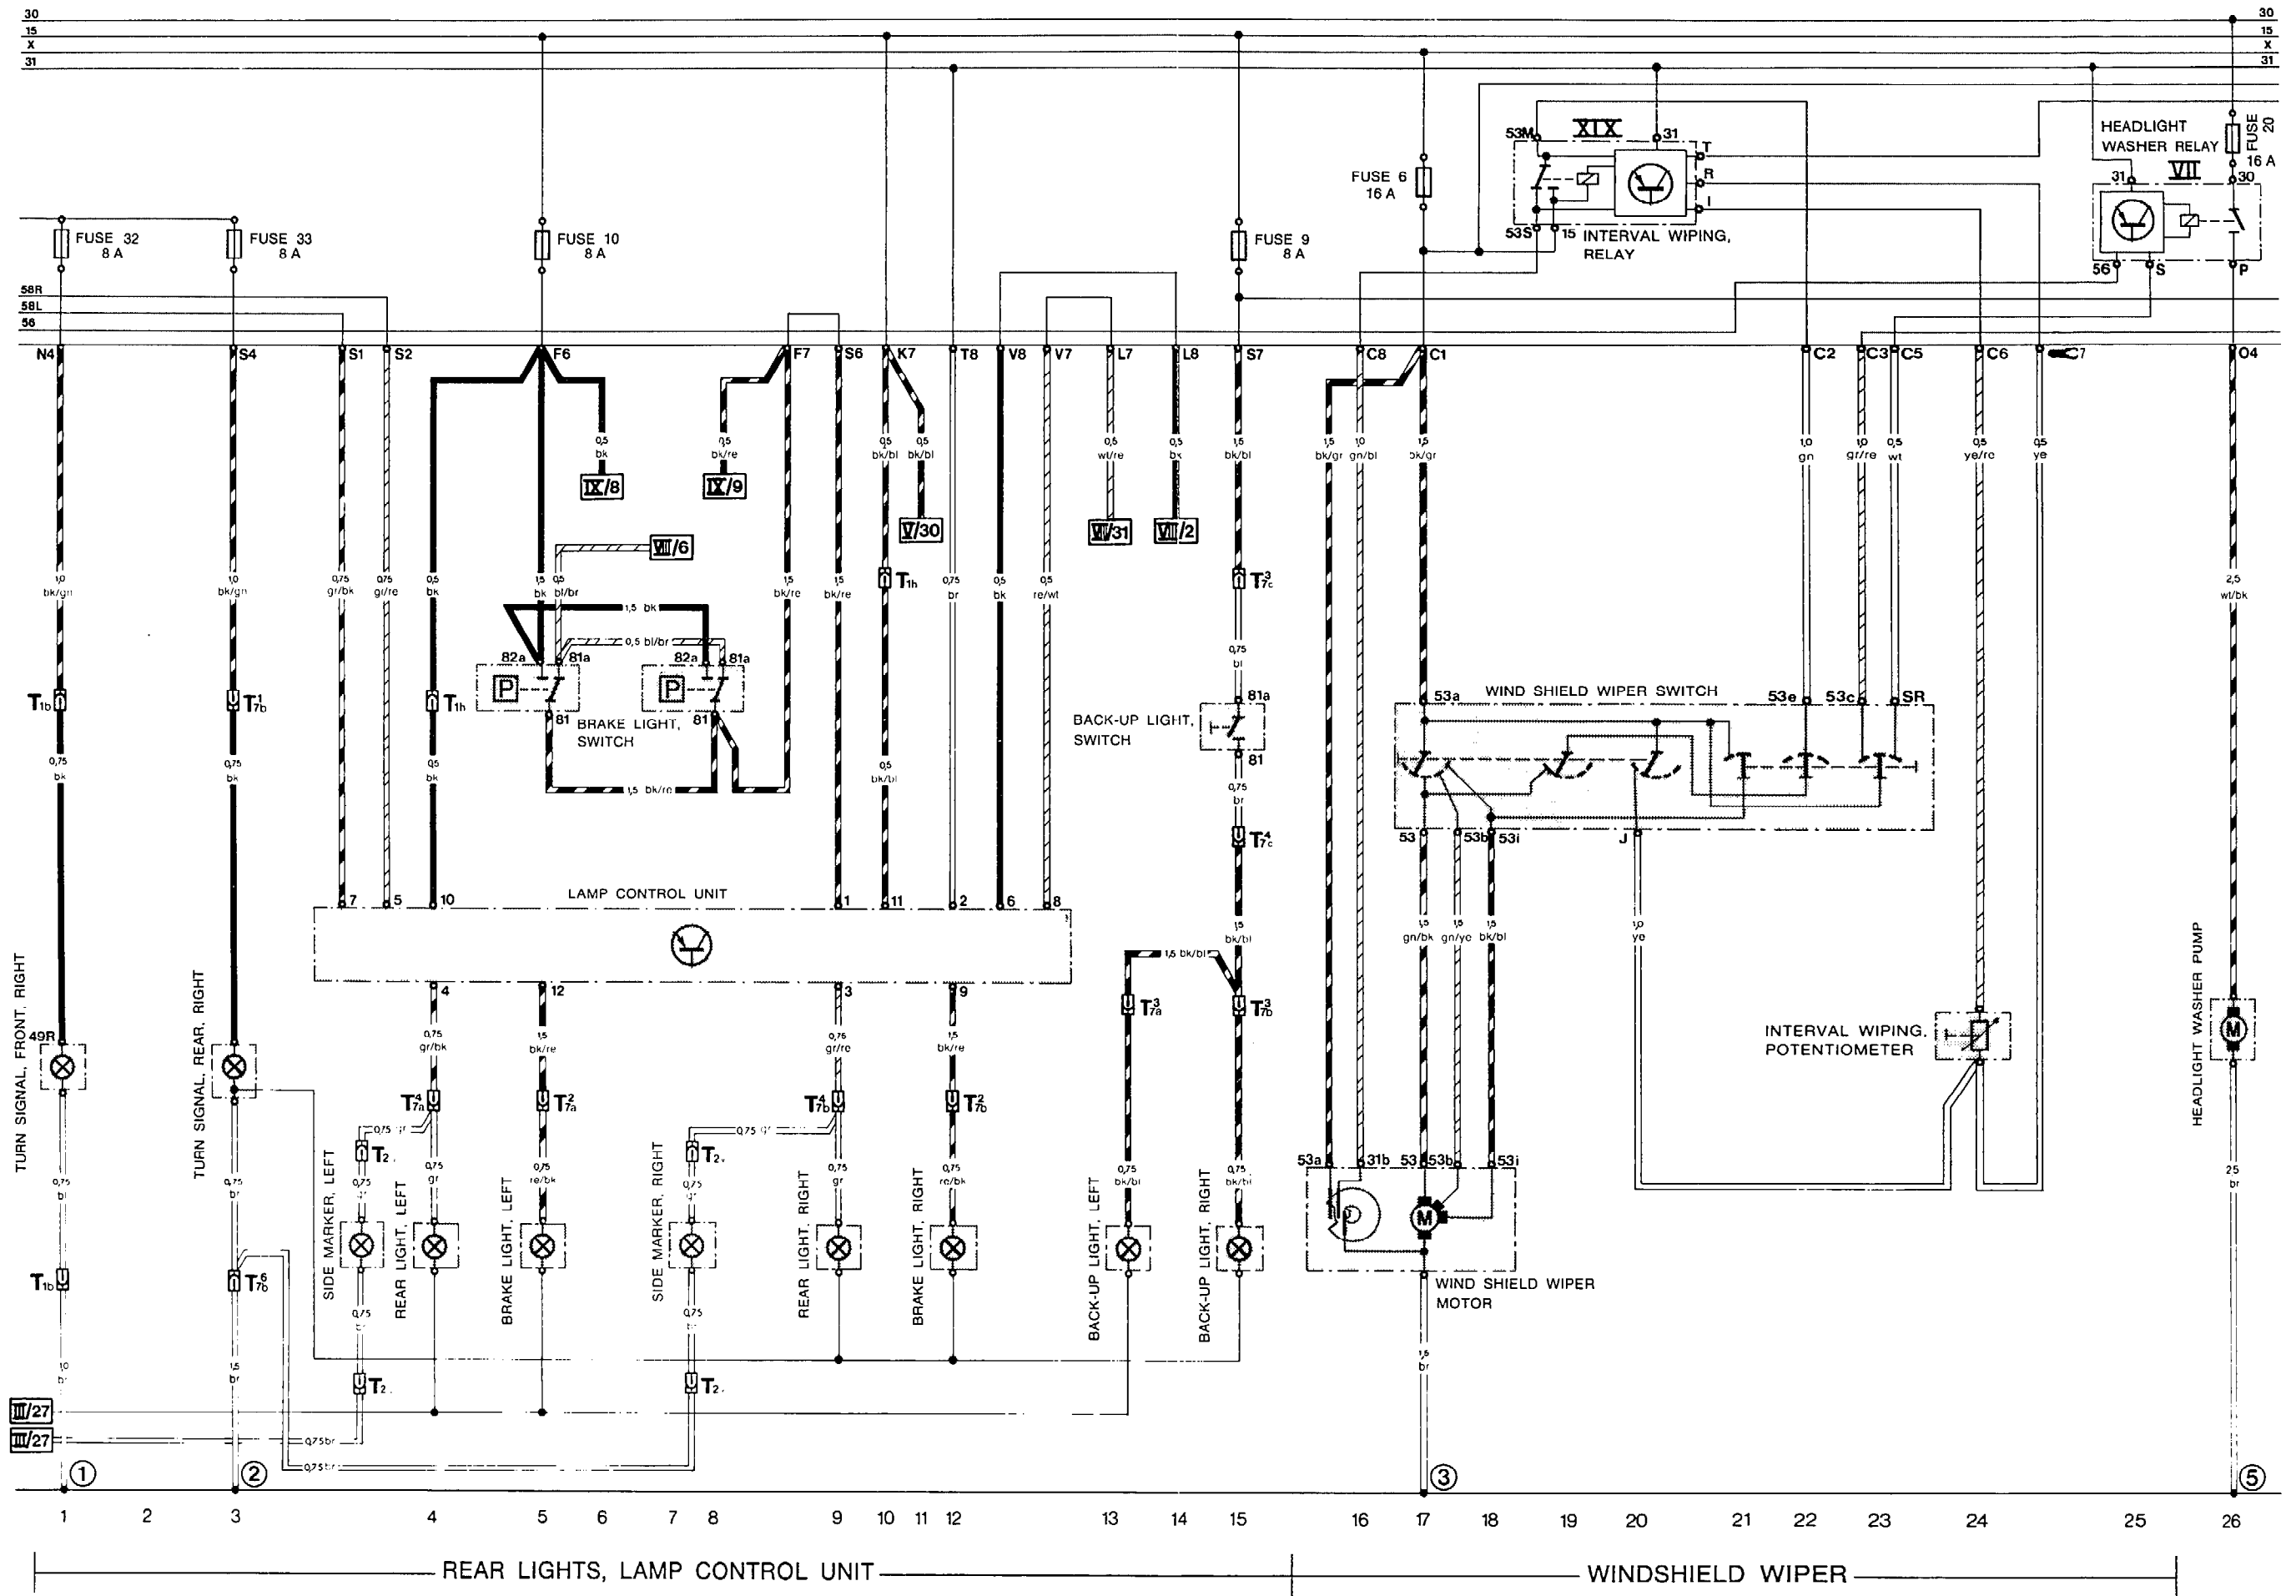


Current Flow Diagram Type 928 USA Model 79, Part V

WASHER PUMPS
REAR WINDOW WIPER
REAR WINDOW DEFOGGER
INTERIOR LIGHT
SEAT BELT




Current Flow Diagram Type 928 USA Model 79, Part V

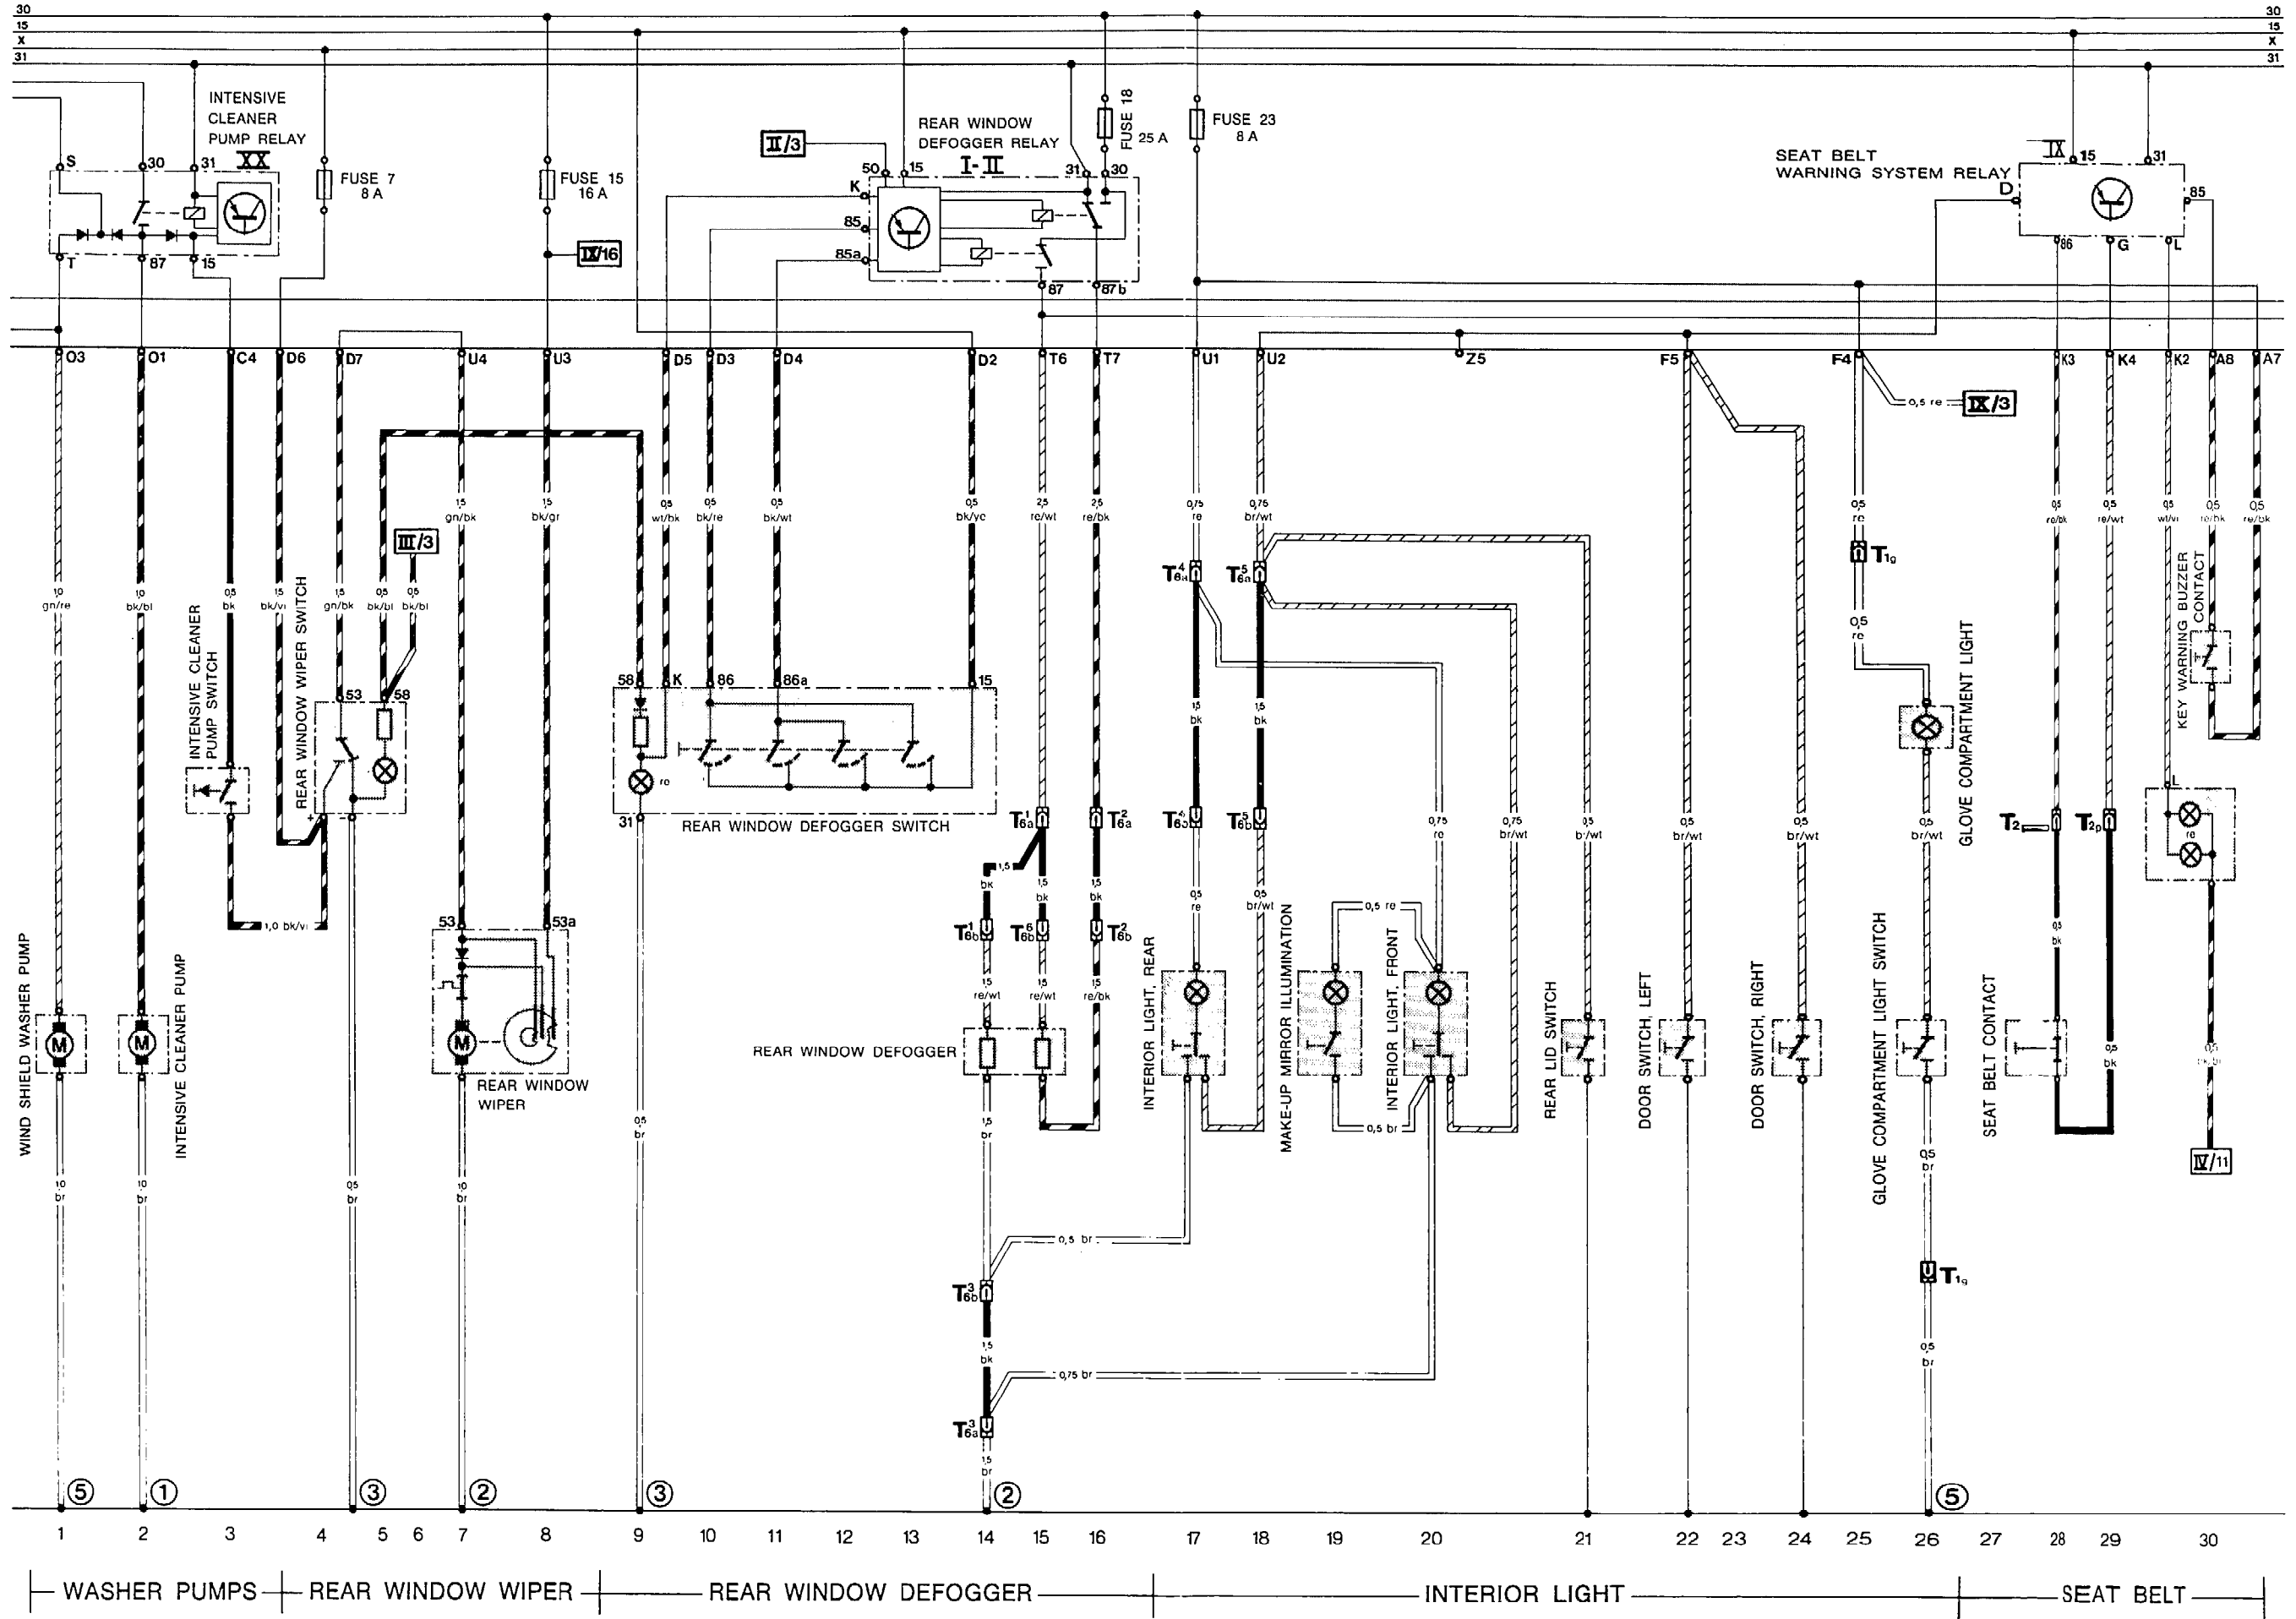


Current Flow Diagram Type 928 USA Model 79, Part VI

OUTSIDE MIRROR
POWER WINDOWS
SLIDING ROOF
BRAKE PADS

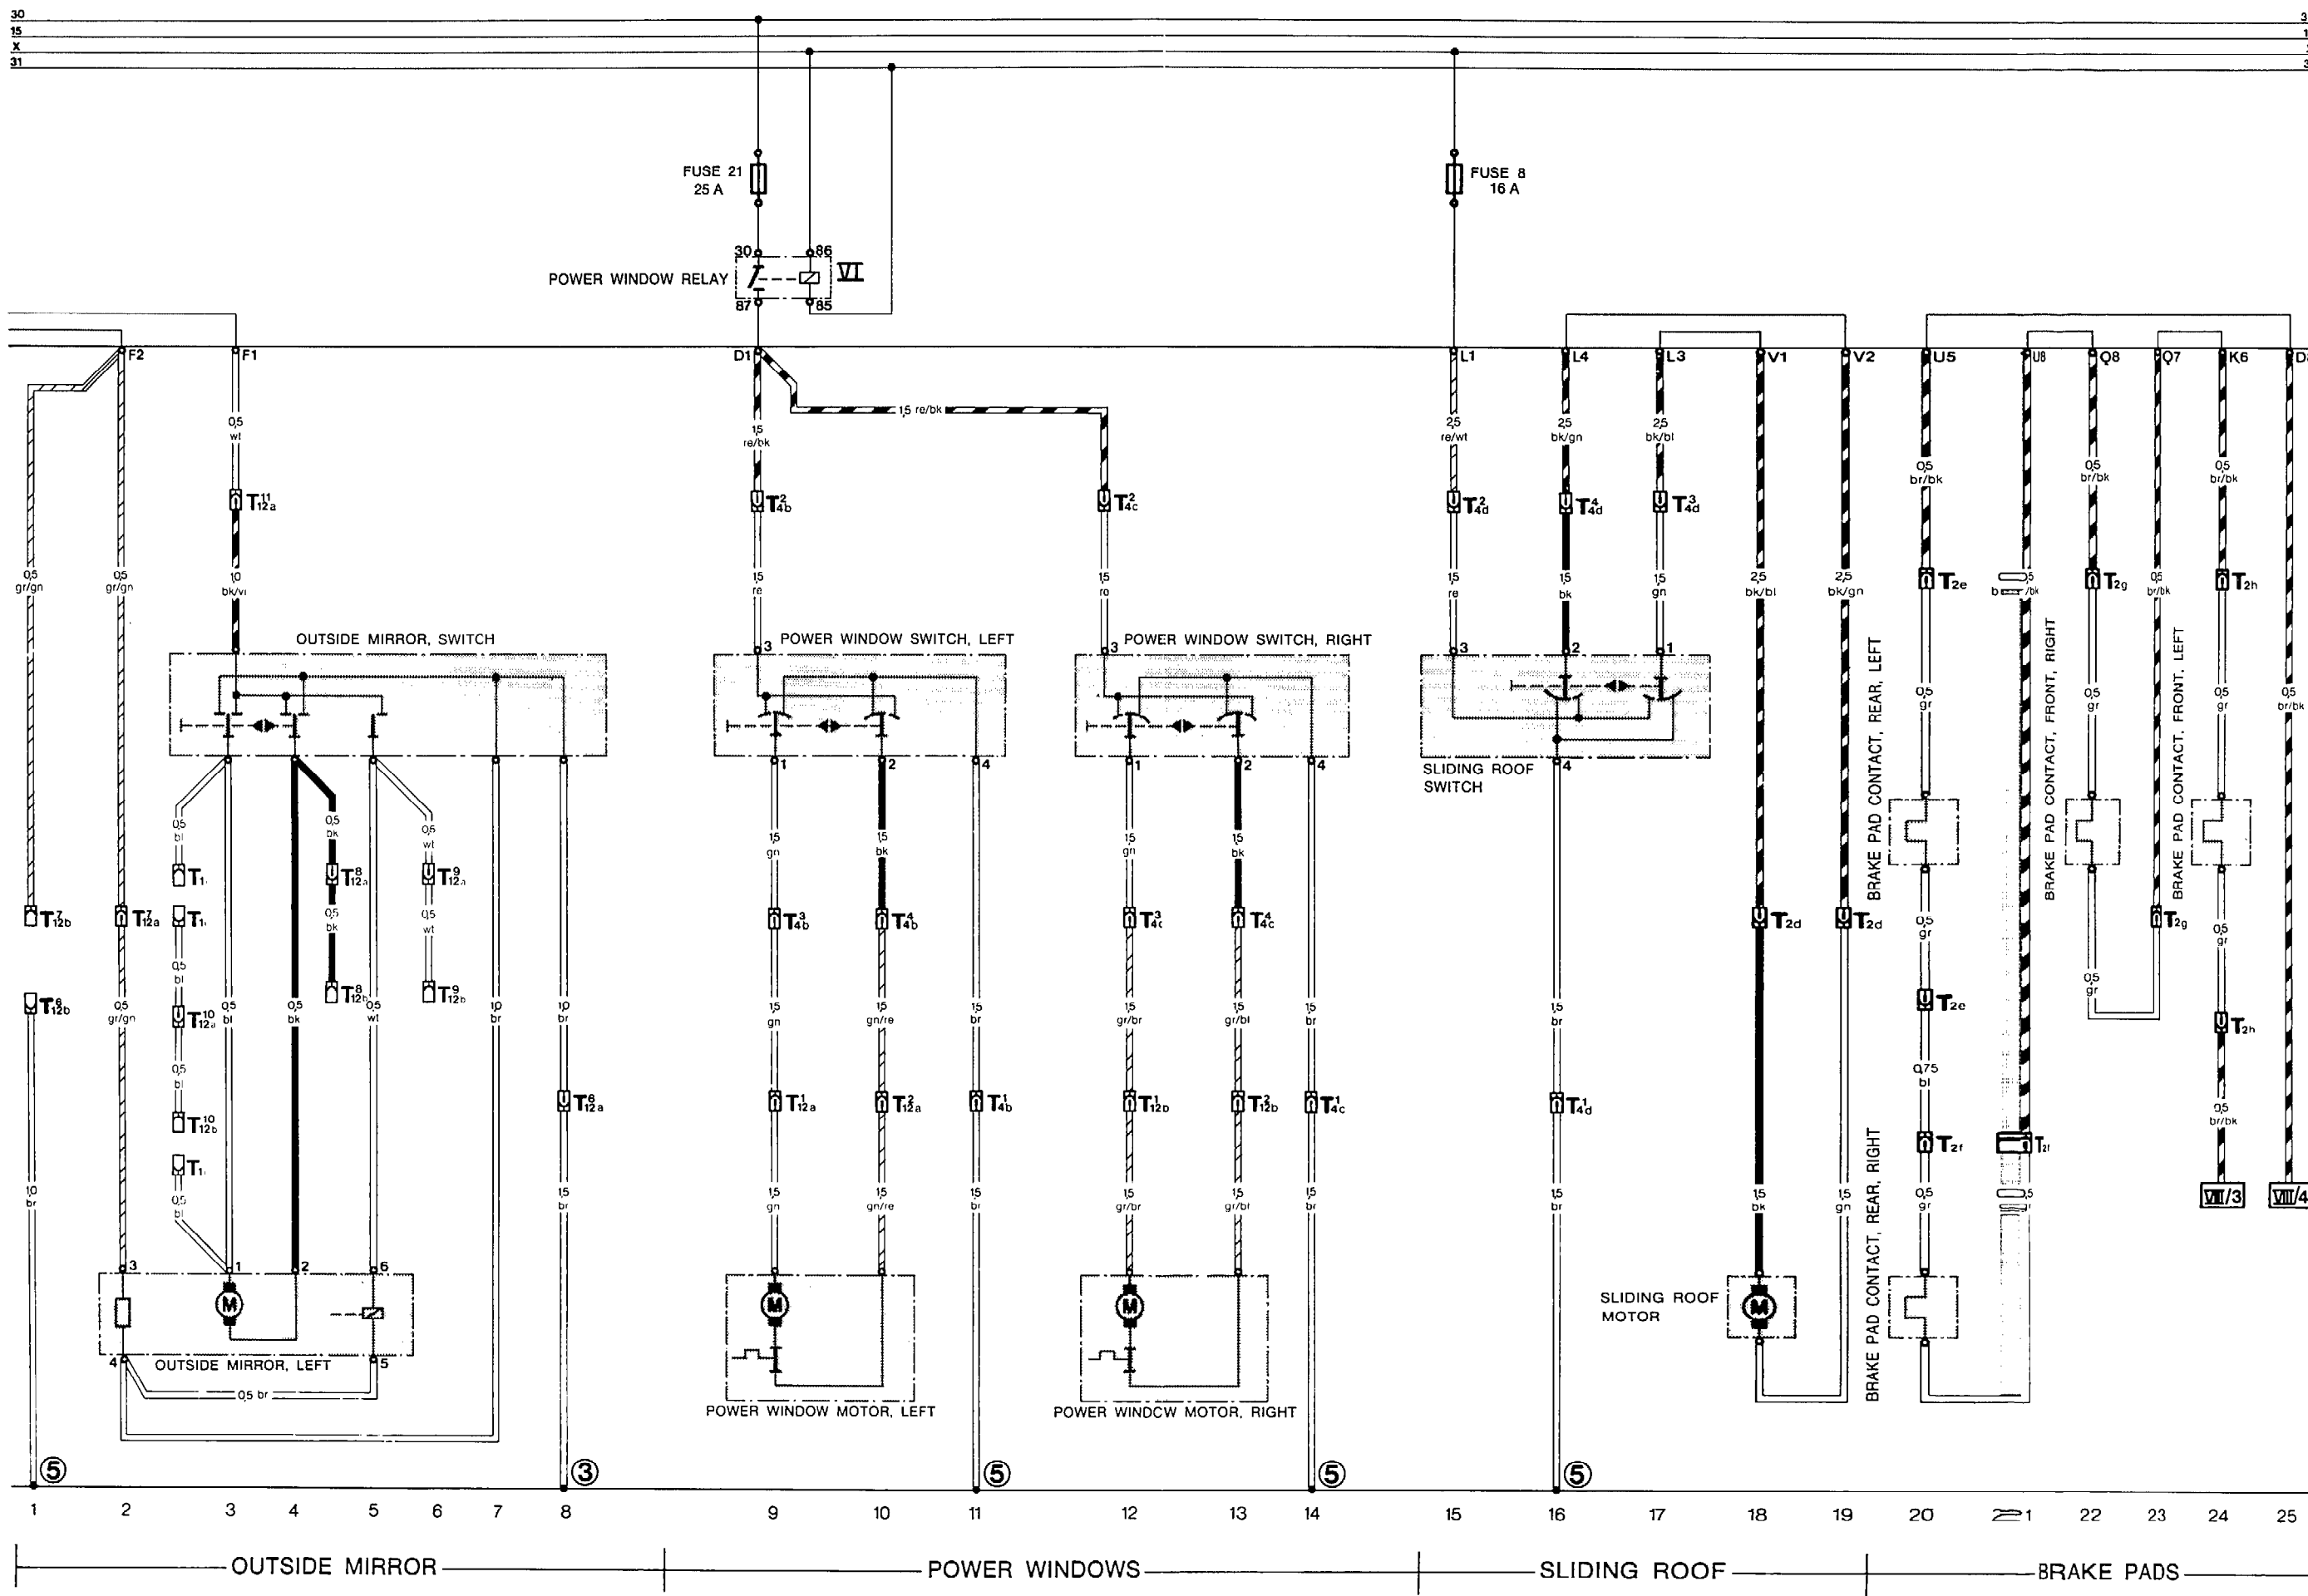


Current Flow Diagram Type 928 USA Model 79, Part VI

FRESH AIR BLOWER
AIR CONDITIONER
SENDER UNITS

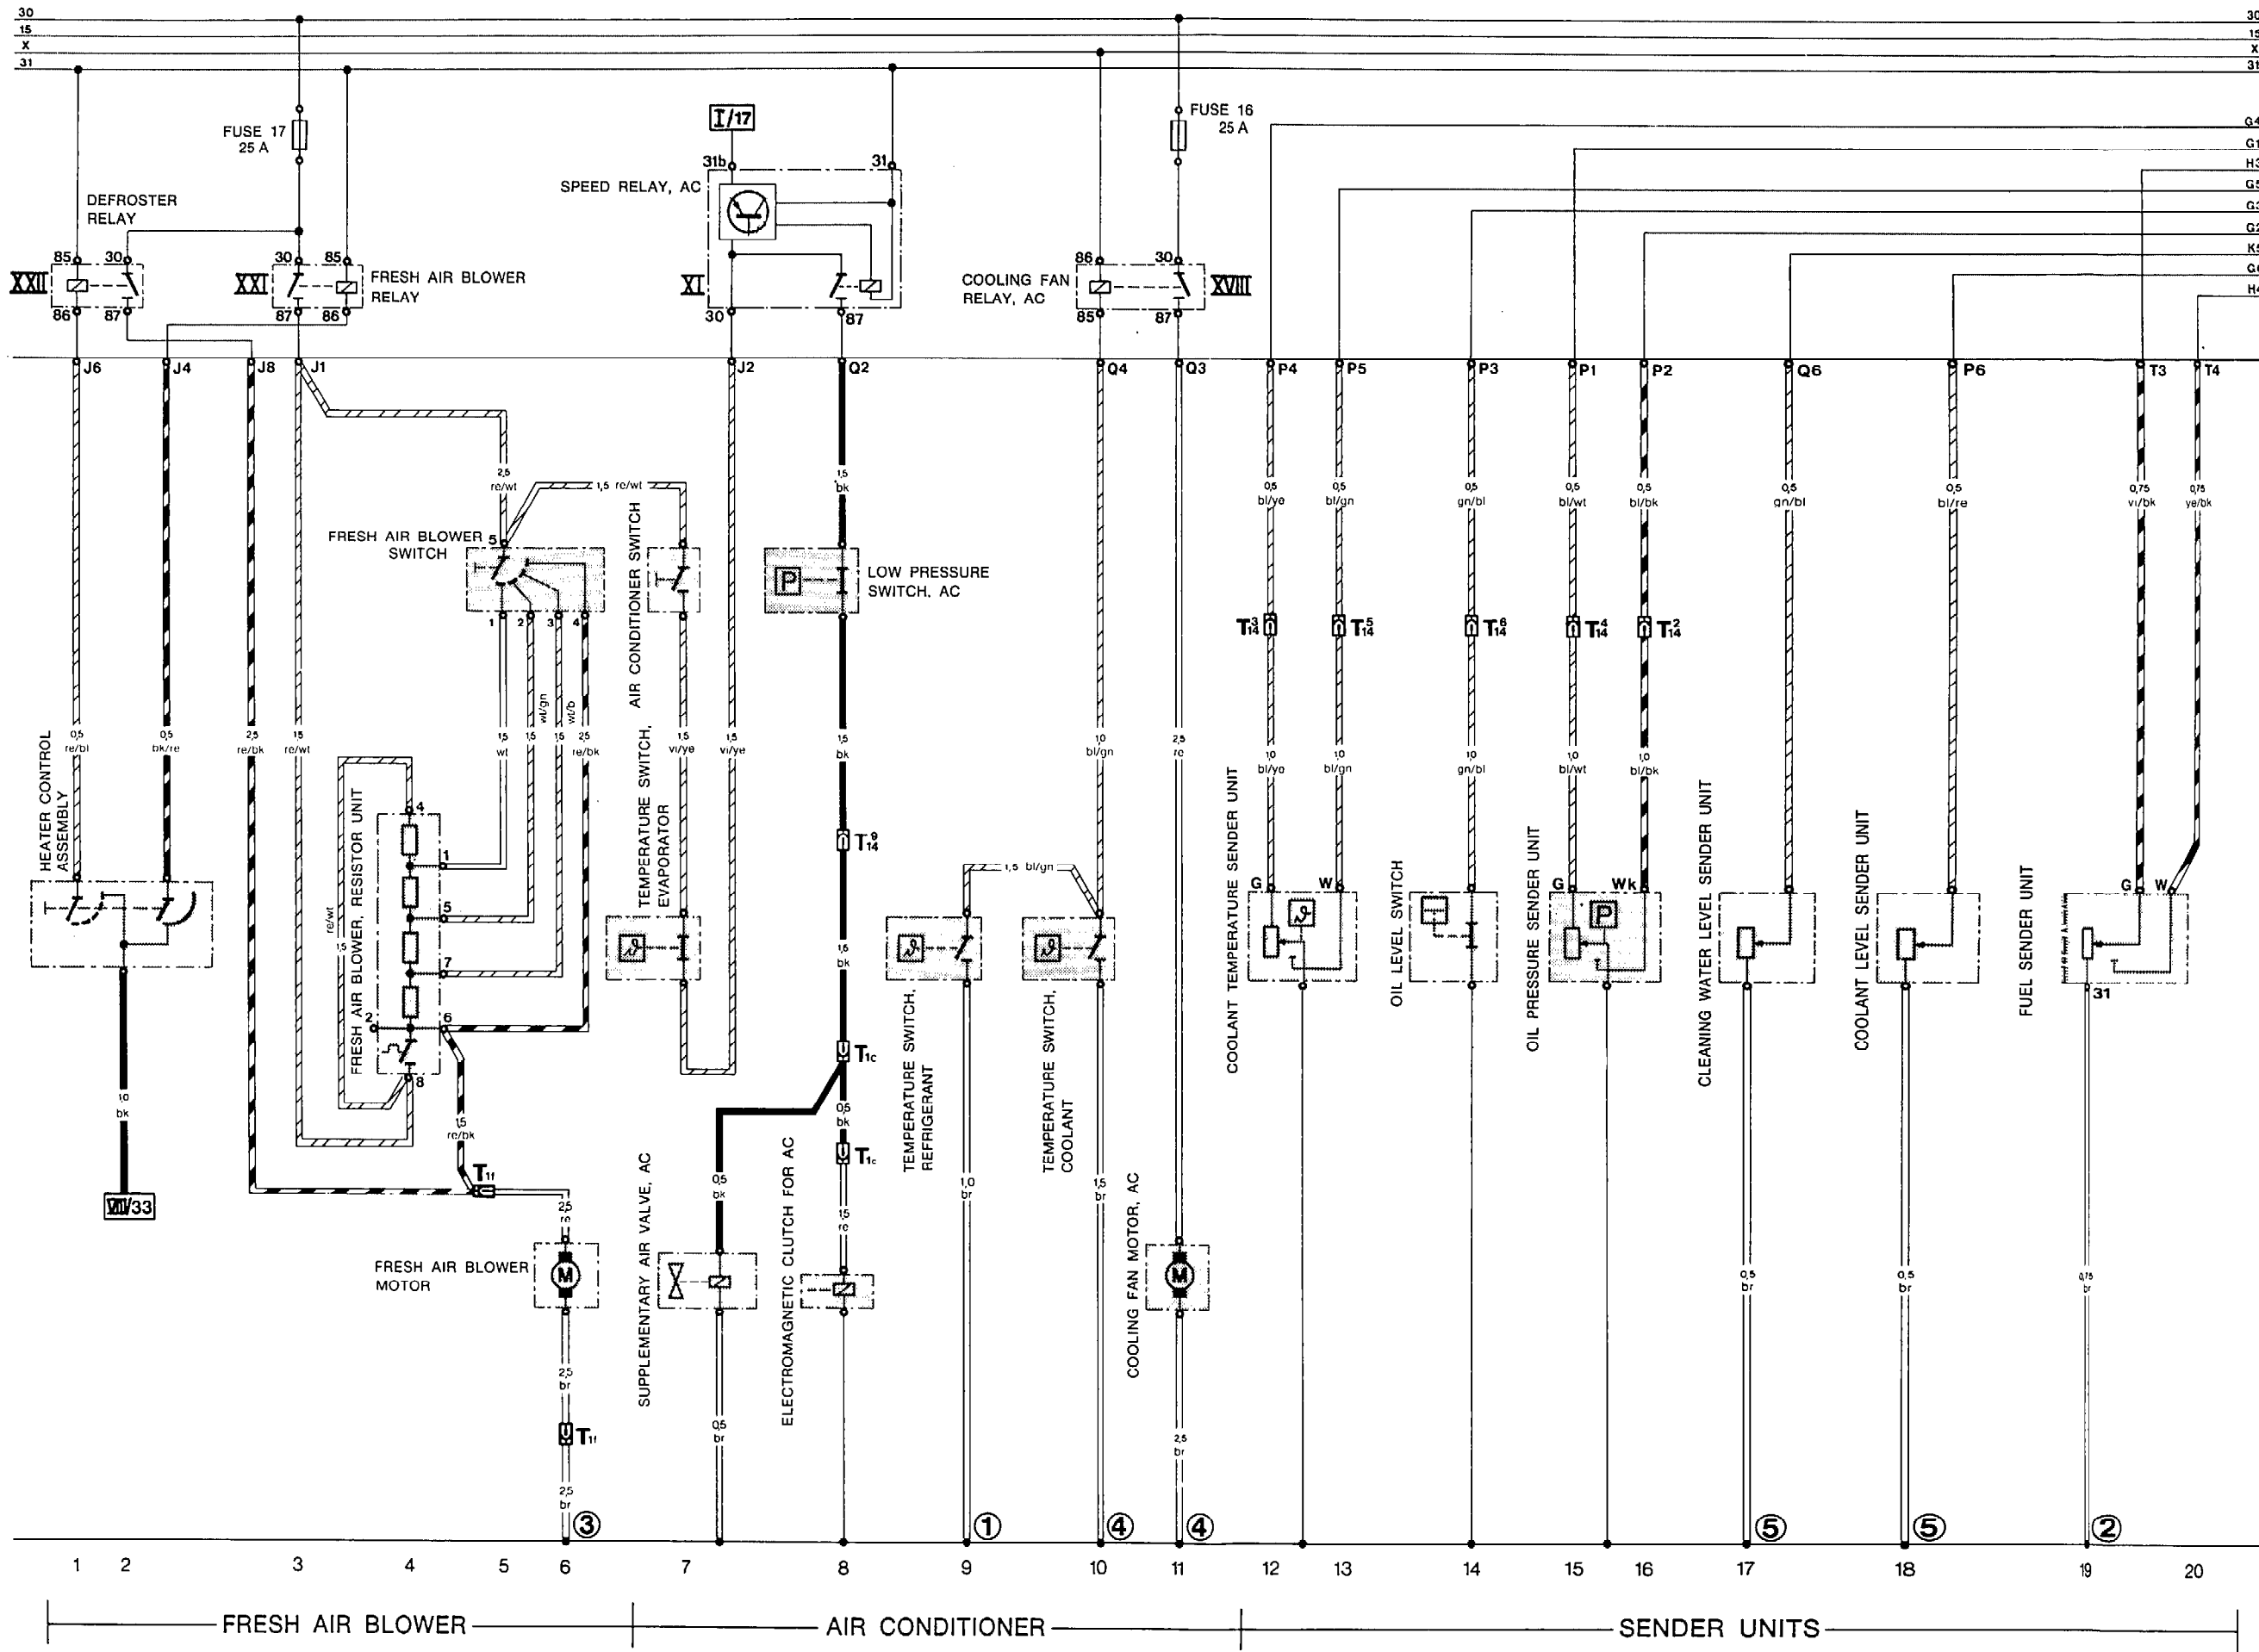

Current Flow Diagram Type 928 USA Model 79, Part VIII

CENTRAL WARNING UNIT, INSTRUMENT CLUSTER

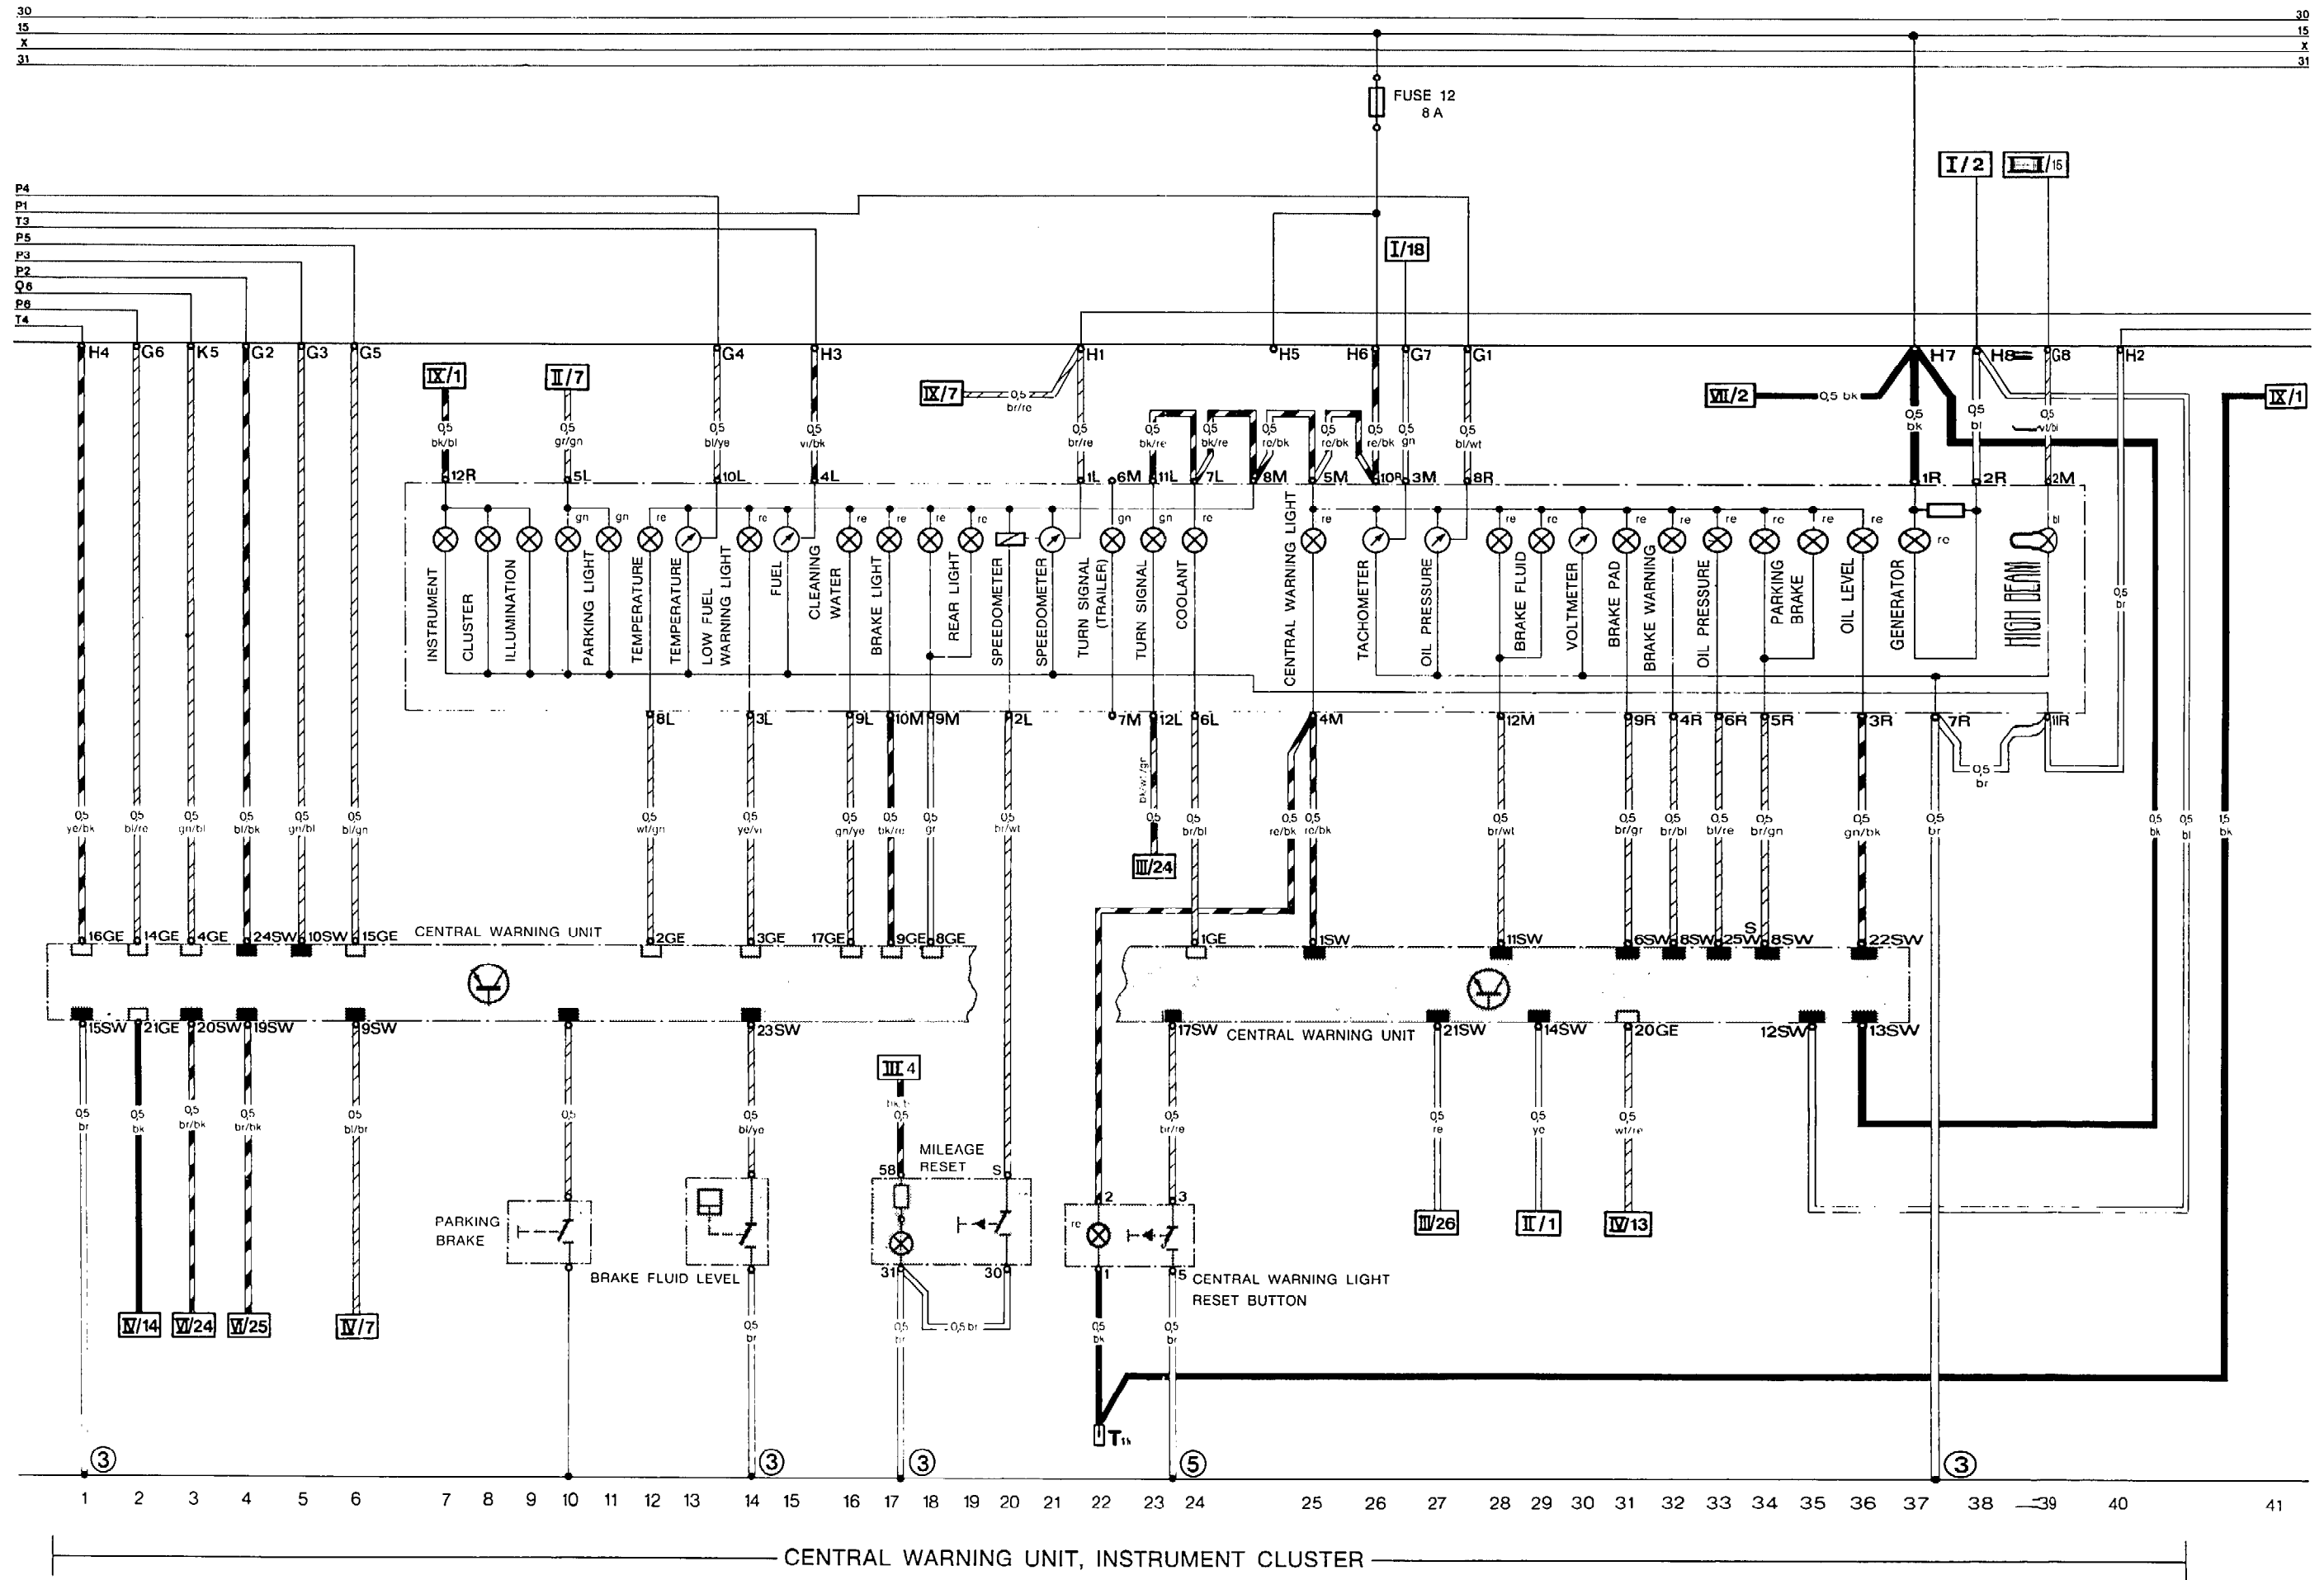


CENTRAL WARNING UNIT, INSTRUMENT CLUSTER

Current Flow Diagram Type 928 USA Model 79, Part IX

CLOCK
CIGARETTE LIGHTER
TEMPOSTAT (CRUISE CONTROL)
HORNS
RADIO

1

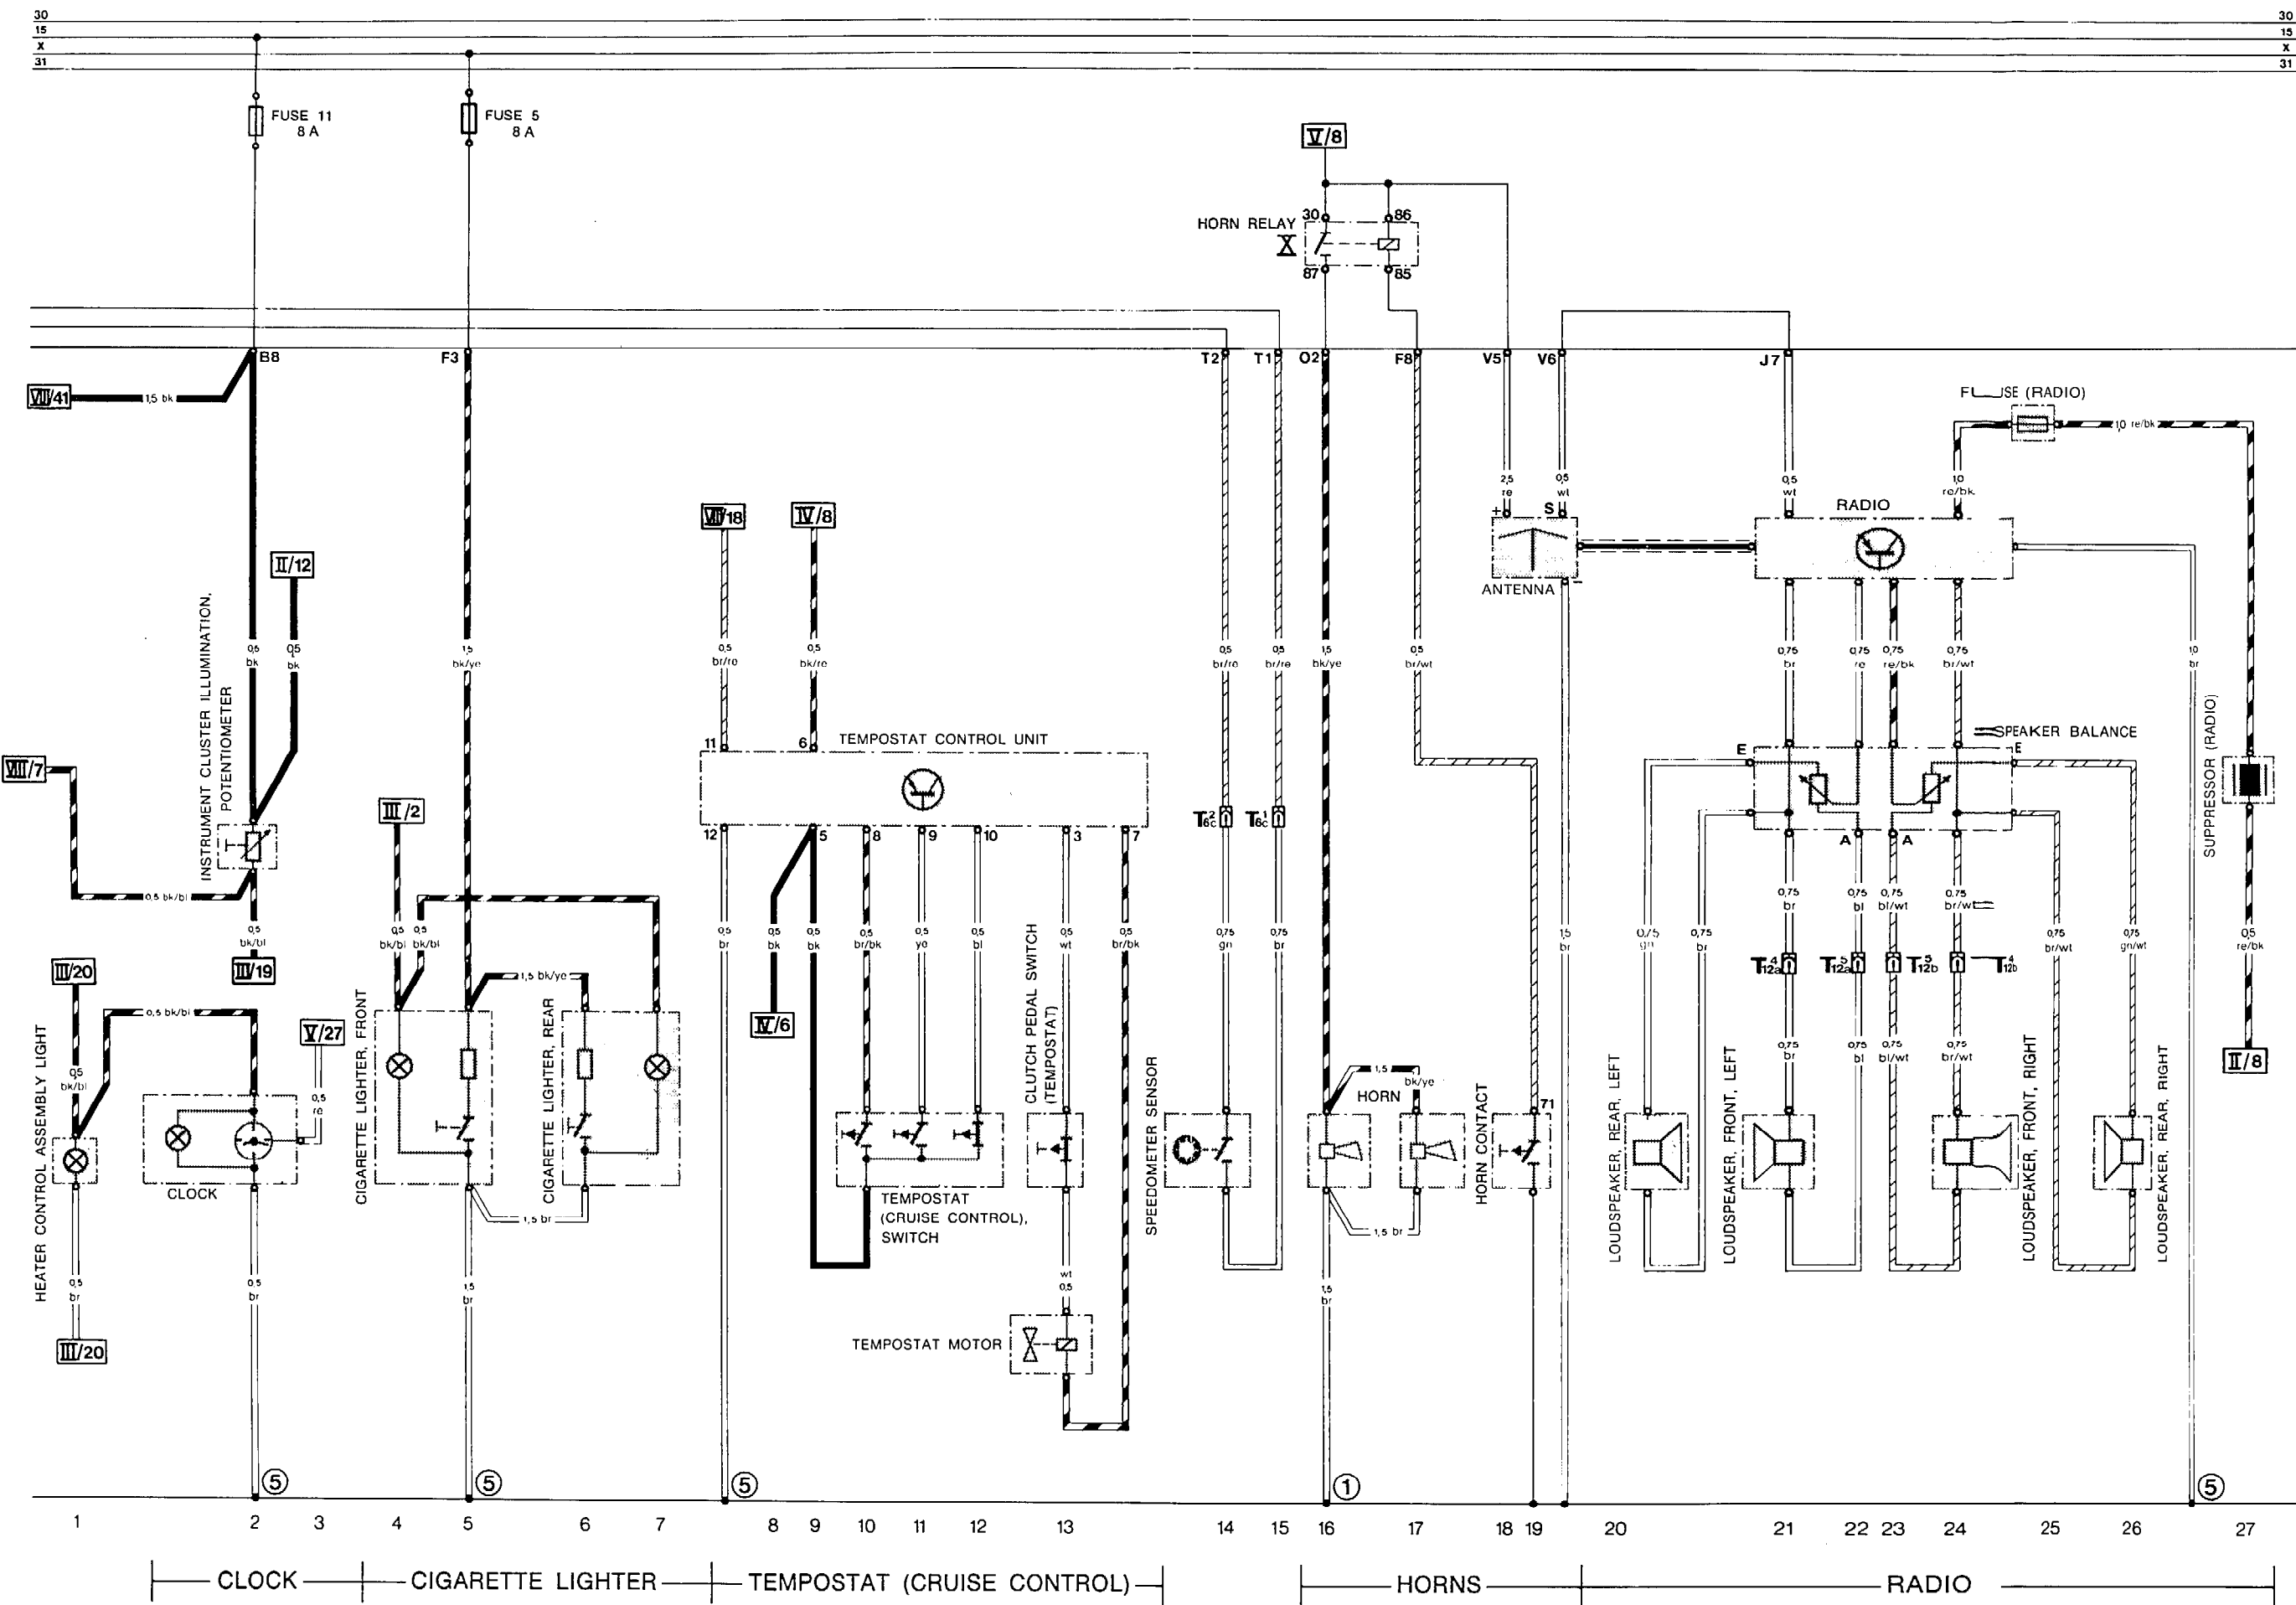

Current Flow Diagram Type 928 USA Model 79, Part X

97

Wiring

30	30
15	15
X	X
31	31

