

[Your 928 Wish List](#)

[Login](#) You have 0 item(s) in your [928 Shopping Cart](#)


**83-84 Fuse/Relay Chart** [←](#) [→](#)

**928 FUSE & RELAY CHARTS BY YEAR**

[77-79](#) - [80](#) - [81](#) - [82](#) - [85-86](#) - [87-88](#) - [89](#) - [90](#) - [91](#) - [92-95](#)

**83-84 Fuse/Relay Chart**

Note : [Blue](#) text on this page are clickable links to the actual relay/fuse name or number displayed

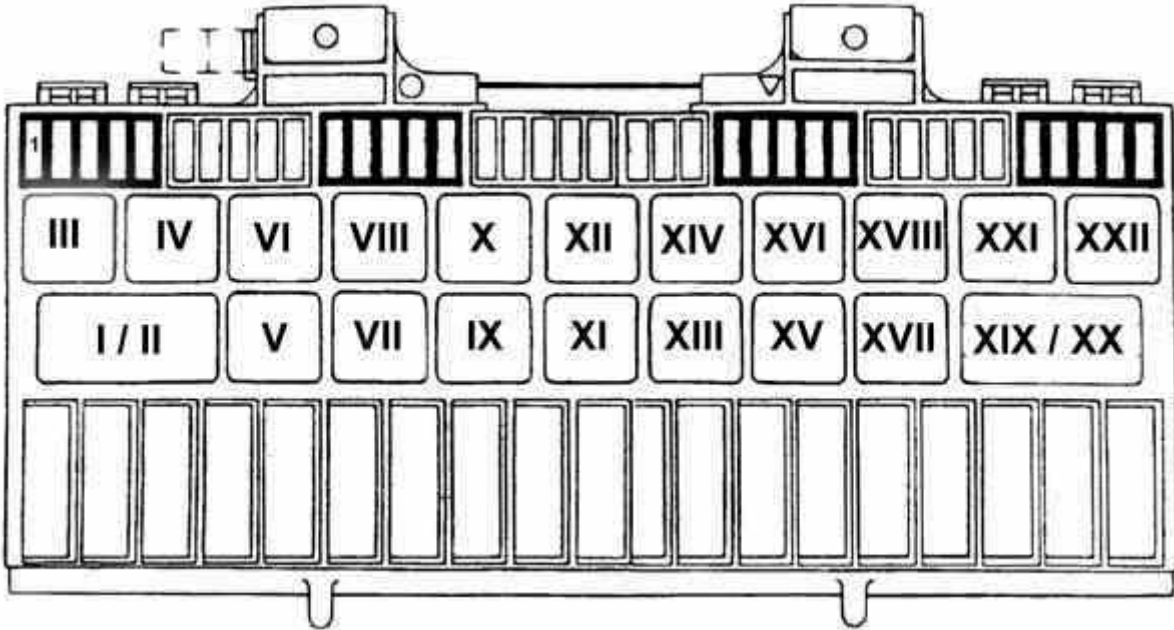

<b>83-84 Relays</b>		
Position	Description	Part#
<b>I-II</b>	Rear Defroster	<a href="#">928.615.115.00</a>
<b>III</b>	US/Not used -Euro/Window Winder	<a href="#">141.951.253.B</a>
<b>IV</b>	Alarm (US 84 Only)	<a href="#">141.951.253.B</a>
<b>V</b>	Indicator(turn) Flasher	<a href="#">1H0.953.227</a>
<b>VI</b>	Window Winder	<a href="#">928.615.116.00</a>
<b>VII</b>	Headlamp Washers	<a href="#">928.618.111.00</a>
<b>VIII</b>	Not Used	
<b>IX</b>	Kick-Down Relay - Auto	<a href="#">928.618.109.00</a>
<b>IX</b>	Kick-Down BRIDGE - 5-Speed	<a href="#">928.615.125.01</a>

<b>X</b>	Twin-Tone Horns	141.951.253.B
<b>XI</b>	<b>Not Used</b>	
<b>XII</b>	Foglights	928.615.117.02
<b>XIII</b>	Intermittent Wiper Delay	993.615.101.00
<b>XIV</b>	<i>Start-Relay (auto)</i>	141.951.253.B
<b>XIV</b>	<i>Start-Bridge (manual)</i>	928.612.473.00
<b>XV</b>	<i>Intensive Washers</i>	928.618.113.01
<b>XVI</b>	Fuel Injection	928.615.119.00
<b>XVII</b>	Fuel Pump	928.615.113.01
<b>XVIII</b>	A/C Condensor Fan	141.951.253.B
<b>XIX-XX</b>	Combination Headlight	928.618.107.02
<b>XXI</b>	Fresh Air (HVAC) Blower	141.951.253.B
<b>XXII</b>	Defroster	141.951.253.B

**Relays Not Located in Fuse/Relay Panel**

<b>Description</b>	<b>Location</b>	<b>Part #</b>
Seat Belt / Chime	Inside Center Console Under Radio	928.618.102.03
Rear Window Wiper	Behind Tool Kit Cover - Drivers Side	928.618.104.00

**83-84 Fuses**

<b>#</b>	<b>Description</b>	<b>AMP</b>
1	Fog Lights	16
2	Driving Lights(Euro)	16
3	License Plate Light,Engine Comp. Lt	8
4	Instrument Lights,Ashtray Light, Switch Lights	8
5	Cigarette Lighter	8
6	Windshield Wipers, Int.Washers	16

7	Stop Light, Cruise Control, Bulb Test	8
8	Sunroof	16
9	Air Conditioner, Backup Light, Mirror Motors, Rear Wiper	8
10	Not used	
11	Instrument, Clock, Light Switch Lamp	8
12	Instruments and Indicator Lamps	8
13	Fuel Pump, Warm-up Reg, Aux Air-Valve	16
14	Electric Seat Motors	25
15	Horns, Antenna, Rear Wiper Return	16
16	A/C Condenser Fan	25
17	Fresh Air Blower	25
18	Rear Defroster, Mirror Heaters	25
19	Headlight Motor	25
20	Headlight Washers	16
21	Window Motors, Central Lock System*	25
22	Not used	
23	Inside Lights, Clock, Tailgate Release	8
24	High Beam - Left	8
25	High Beam - Right	8
26	Low Beam - Left	8
27	Low Beam - Right	8
28	Parking Lights - Left	8
29	Parking Lights - Right	8
30	Turn Signal - Front/Left	8
31	Turn Signal - Rear/Left	8

32	Turn Signal - Front/Right	8
33	Turn Signal - Front/Right	8
34	Rear Fog Light (Euro)	8

\* Note: There are two [400ma Fuses](#) clipped at the very top (and slightly behind) of the Fuse/Relay Panel for the Central Door Locks

Fuses are counted from Left to Right 1-34 across the top of the Fuse/Relay Panel

Please feel free to copy\*, download\* and use the Fuse/Relay Charts and Technical Info located on our "928 Fuse/Relay Charts and Technical Info" pages . They were created to aid you in your repair and trouble shooting projects and are provided as a added service from us for you and your 928 !

\*Note: Copying and/or downloading the pages on this website is allowed for personal use only, no commercial copying or downloading is permitted without prior approval from 928 Specialists.



[Top of Page](#)

[Your 928 Wish List](#)

[Login](#) You have **0** item(s) in your [928 Shopping Cart](#)

**928 SPECIALISTS ONLINE STORE**

Copyright © 1998-2018 928GT, LLC All Rights Reserved