

# Current Flow Diagram

## Type 928 S USA Model 83

### WIRE CONNECTORS

#### T1 - ONE-POLE

- A - NEAR TURN SIGNAL LEFT
- B - NEAR TURN SIGNAL RIGHT
- C - NEAR AC-COMPRESSOR
- F - NEAR FRESH AIR BLOWER
- G - NEAR GLOVE COMPARTMENT
- H - NEAR FUSE/RELAY BOARD
- I - IN TUNNEL
- K - NEAR FUEL PUMP

#### T2 - TWO-POLE

- A - BEHIND ACCELERATOR PEDAL
- C - BEHIND REAR BUMPER
- D - NEAR LEFT BACKWHEEL
- E - NEAR RIGHT BACKWHEEL
- F - NEAR RIGHT FRONT WHEEL
- G - NEAR LEFT FRONT WHEEL
- H - NEAR DRIVER SEAT
- I - NEAR PASSENGER SEAT
- K - NEAR DRIVER SEAT
- Q - NEAR LEFT FOG LIGHT
- R - NEAR RIGHT FOG LIGHT
- U - NEAR LEFT SIDE MARKER
- V - NEAR RIGHT SIDE MARKER
- W - NEAR FUSE/RELAY BOARD

#### T4 - FOUR-POLE

- A - IN SPARE WHEEL WELL
- B - IN CONSOLE, RIGHT
- C - IN CONSOLE RIGHT
- D - IN CONSOLE
- E - IN CONSOLE
- F - IN CONSOLE
- G - NEAR RIGHT FRONT WHEEL
- H - NEAR LEFT FRONT WHEEL

#### T6 - SIX-POLE

- A - BEHIND SIDE COVERING, RIGHT
- B - IN REAR LID, RIGHT
- C - IN SPARE WHEEL WELL
- D - IN CONSOLE

#### T7 - SEVEN-POLE

- A - BEHIND LUGGAGE COMPARTMENT COVERING LEFT
- B - BEHIND LUGGAGE COMPARTMENT COVERING RIGHT

#### T14 - FOURTEEN-POLE

IN ENGINE COMPARTMENT, RIGHT

#### T18 - EIGHTEEN-POLE

- A - IN FOOT WELL, DRIVER SIDE
- B - IN FOOT WELL, PASSENGER SIDE


### GROUND TERMINALS

- ① ON FRONT LOCK MEMBER, RIGHT
- ② AT REAR OF WHEEL ARCH UNDERNEATH RIGHT REAR TRIM PANEL
- ③ ON STEERING CONSOLE
- ④ ON FRONT LOCK MEMBER, LEFT
- ⑤ ON UPPER MOUNTING FOR FUSE/RELAY BOARD
- ⑥ ON FRONT WALL


### WIRE COLOURS

- |            |             |             |
|------------|-------------|-------------|
| BK - BLACK | GN - GREEN  | BR - BROWN  |
| WT - WHITE | YE - YELLOW | BL - BLUE   |
| RE - RED   | GR - GREY   | VI - VIOLET |


### Relay Socket Terminals

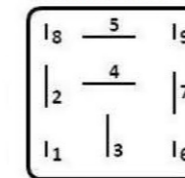


### Plug Terminals Y-Z

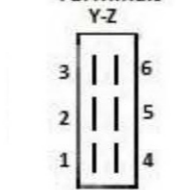

### A-H, J-N, O-X

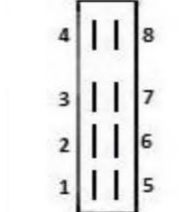

### CENTRAL ELECTRICAL SYSTEM Mod. 83

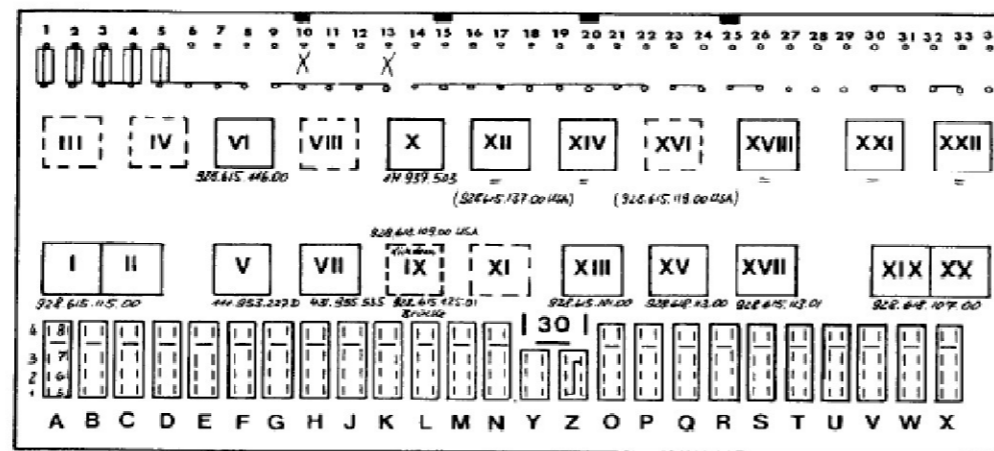

NOTE: There is no "I" Plug!

### Fuse allocation

- |  |                                      |
|--|--------------------------------------|
| 1 - Fog light  | 17 - Fresh air blower                |
| 2 - Suppl. main beam (not USA)                                   | 18 - Rear window heater              |
| 3 - Engine compartment number plate light                        | 19 - Headlight motor                 |
| 4 - Instruments, ashtray light                                   | 20 - Headlight washer                |
| 5 - Cigar lighter  | 21 - Window lifts, central locking   |
| 6 - Screenwiper  | 22 - Fuel pump, suppl. air valve     |
| 7 - Brake light, Tempostat                                       | 23 - Interior lighting, clock        |
| 8 - Sun roof   | 24 - L. H. main beam                 |
| 9 - Air con., mirror adjust., reversing light, rear window wiper | 25 - R. H. main beam                 |
| 10 - Spare   | 26 - L. H. dipped beam               |
| 11 - Ackn. button, light switch lighting                         | 27 - R. H. dipped beam               |
| 12 - Instrument warning lights                                   | 28 - L. H. parking light             |
| 13 - Spare   | 29 - R. H. parking light             |
| 14 - Electr. seat adjustment                                     | 30 - L. H. front direction indicator |
| 15 - Fanfare, electr. aerial, rear window wiper park             | 31 - L. H. rear direction indicator  |
| 16 - Suppl. fan  | 32 - R. H. front direction indicator |
|  | 33 - R. H. rear direction indicator  |
|  | 34 - Rear fog guard lamp             |


### Relay allocation

- I - II - Rear window heater
- III - Spare
- IV - Spare
- V - Flasher unit
- VI - Window lifts, central locking
- VII - Headlight washer
- VIII - Spare
- IX - Kickdown (USA auto. transmission only)
- X - Fanfare
- XI - Spare
- XII - Fog light (USA headlight flasher)
- XIII - Wiper interval
- XIV - Starter relay
- XV - Suppl. washer pump
- XVI - L-Jetronic (USA only)
- XVII - Fuel pump, suppl. air valve
- XVIII - Suppl. fan
- XIX - Lighting combination relay
- XX - Fresh air blower
- XXI - Defroster

Note:  
Time-lag relay is under center console,  
rear window wiper relay is next to rear wiper motor.

Fuses 10 and 13 are spare.

- 30 = + Direct From Battery
- 15 = + With key on Ignition
- X = + With key on Accessory
- 31 = - Direct to Battery

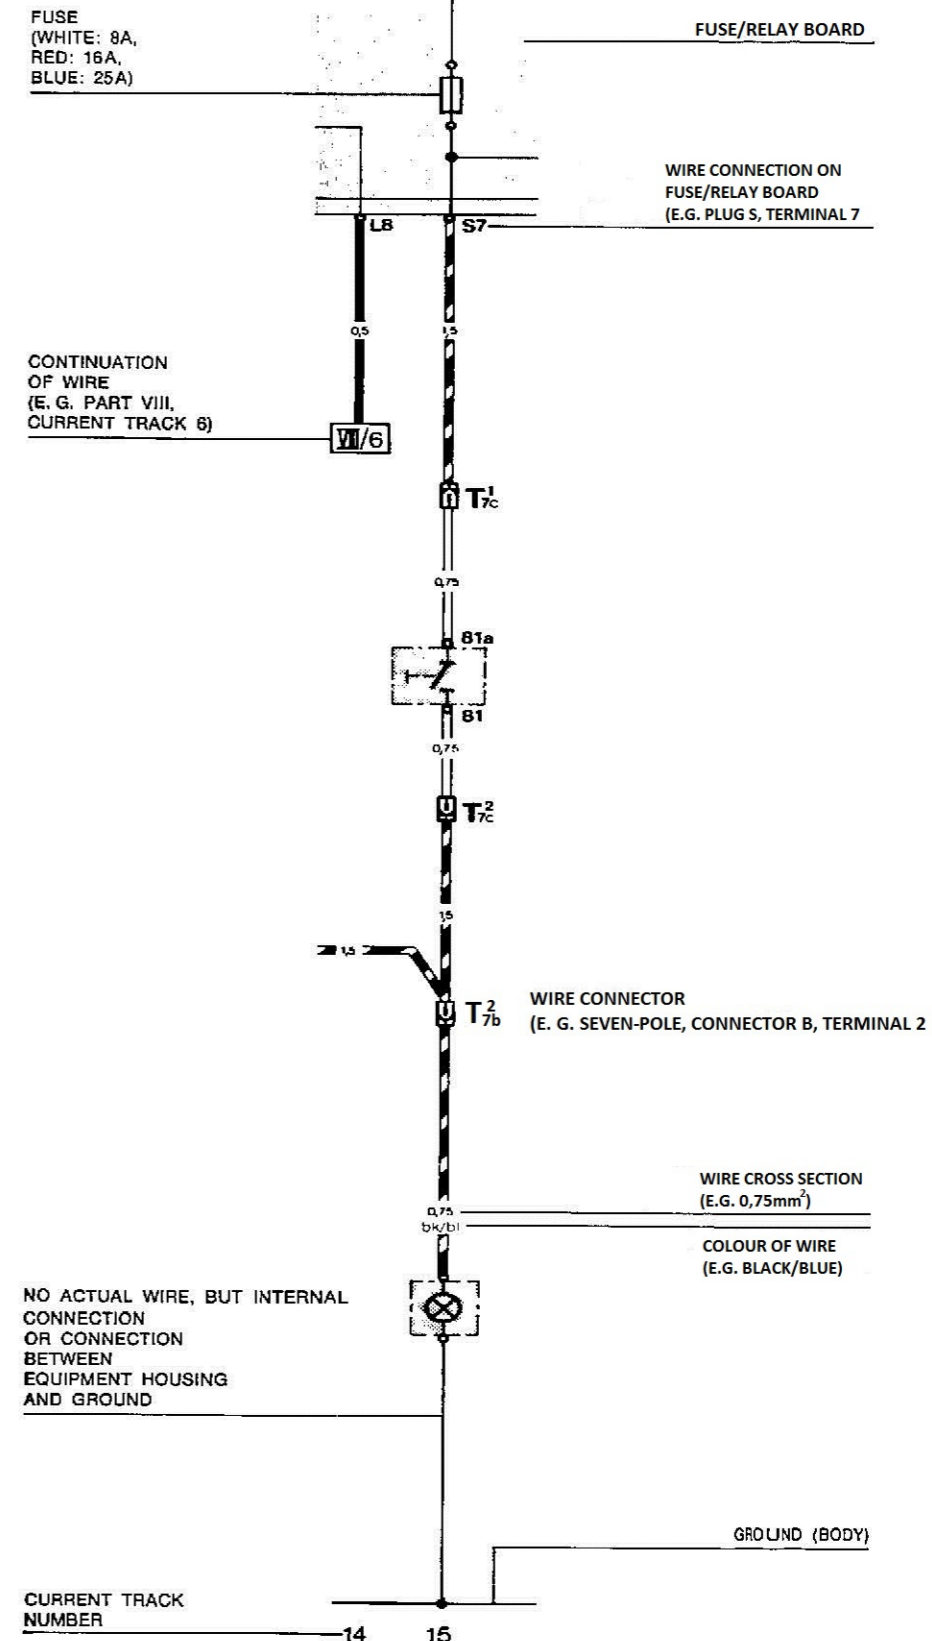

CURRENT TRACK NUMBER

WIRE CROSS SECTION (E.G. 0,75mm<sup>2</sup>)

COLOUR OF WIRE (E.G. BLACK/BLUE)

NO ACTUAL WIRE, BUT INTERNAL CONNECTION OR CONNECTION BETWEEN EQUIPMENT HOUSING AND GROUND

GROUND (BODY)