

Current Flow Diagram Type 928, 928 S Model 80

	PART I	POWER SUPPLY, STARTER IGNITION FUEL PUMP
	PART II	IGNITION/STARTER SWITCH, LIGHT SWITCH HEADLIGHT
12 +110 +10w 60+60w +12	PART III	PARKING LIGHT FOG LIGHT, LICENSE PLATE LIGHT HEADLIGHT, PARKING LIGHT FRONT TURN SIGNAL HAZARD FLASHER
12w	PART IV	REAR LIGHTS, LAMP CONTROL UNIT WINDSHIELD WIPER
	PART V	WASHER PUMPS REAR WINDOW WIPER REAR WINDOW DEFOGGER INTERIOR LIGHT CENTRAL LOCKING SYSTEM
	PART VI	DOOR LIGHT SEAT BELT OUTSIDE MIRROR POWER WINDOWS BRAKE PADS
	PART VII	AUTOMATIC AIR CONDITIONER (OPTIONAL FOR 928)
	PART VIII	AUTOMATIC AIR CONDITIONER (OPTIONAL FOR 928) SENDER UNITS
15w	PART IX	CENTRAL WARNING UNIT, INSTRUMENT CLUSTER
	PART X	CLOCK CIGARETTE LIGHTER TEMPOSTAT (CRUISE CONTROL) HORNS RADIO

Current Flow Diagram

Type 928, 928 S Model 80

WIRE CONNECTORS

T1 - ONE-POLE

- A - NEAR SUPPLEMENTARY HEAD LIGHT LEFT
- B - NEAR SUPPLEMENTARY HEAD LIGHT RIGHT
- C - NEAR AC-COMPRESSOR
- D - IN FENDER FRONT, RIGHT
- E - IN FENDER FRONT, LEFT
- F - NEAR FRESH AIR BLOWER
- G - NEAR GLOVE COMPARTMENT
- H - NEAR FUSE/RELAY BOARD
- I - IN CENTER CONSOLE
- K - NEAR FUEL PUMP

T2 - TWO-POLE

- A - BEHIND ACCELERATOR PEDAL
- B - BEHIND REAR BUMPER
- C - BEHIND REAR BUMPER
- D - NEAR LEFT BACKWHEEL
- E - NEAR RIGHT BACKWHEEL
- F - NEAR RIGHT FRONT WHEEL
- G - NEAR LEFT FRONT WHEEL
- H - NEAR DRIVER SEAT
- I - NEAR PASSENGER SEAT
- K - NEAR DRIVER SEAT

T4 - FOUR-POLE

- A - IN SPARE WHEEL WELL
- B - IN CONSOLE, RIGHT
- C - IN CONSOLE RIGHT
- D - IN CONSOLE
- E - IN CONSOLE
- F - IN CONSOLE

T6 - SIX-POLE

- A - BEHIND SIDE COVERING, RIGHT
- B - IN REAR LID, RIGHT
- C - IN SPARE WHEEL WELL
- D - IN CONSOLE

T7 - SEVEN-POLE

- A - BEHIND LUGGAGE COMPARTMENT COVERING LEFT
- B - BEHIND LUGGAGE COMPARTMENT COVERING RIGHT

T18 - EIGHTEEN-POLE

- A - IN FOOT WELL, DRIVER SIDE
- B - IN FOOT WELL, PASSENGER SIDE

T14 - FOURTEEN-POLE


- IN ENGINE COMPARTMENT, RIGHT

GROUND TERMINALS

- ① ON FRONT LOCK MEMBER, RIGHT
- ② AT REAR OF WHEEL ARCH UNDERNEATH RIGHT REAR TRIM PANEL
- ③ ON STEERING CONSOLE
- ④ ON FRONT LOCK MEMBER, LEFT
- ⑤ ON UPPER MOUNTING FOR FUSE/RELAY BOARD
- ⑥ ON FRONT WALL

WIRE COLOURS


- | | | |
|------------|-------------|-------------|
| BK - BLACK | GN - GREEN | BR - BROWN |
| WT - WHITE | YE - YELLOW | BL - BLUE |
| RE - RED | GR - GREY | VI - VIOLET |

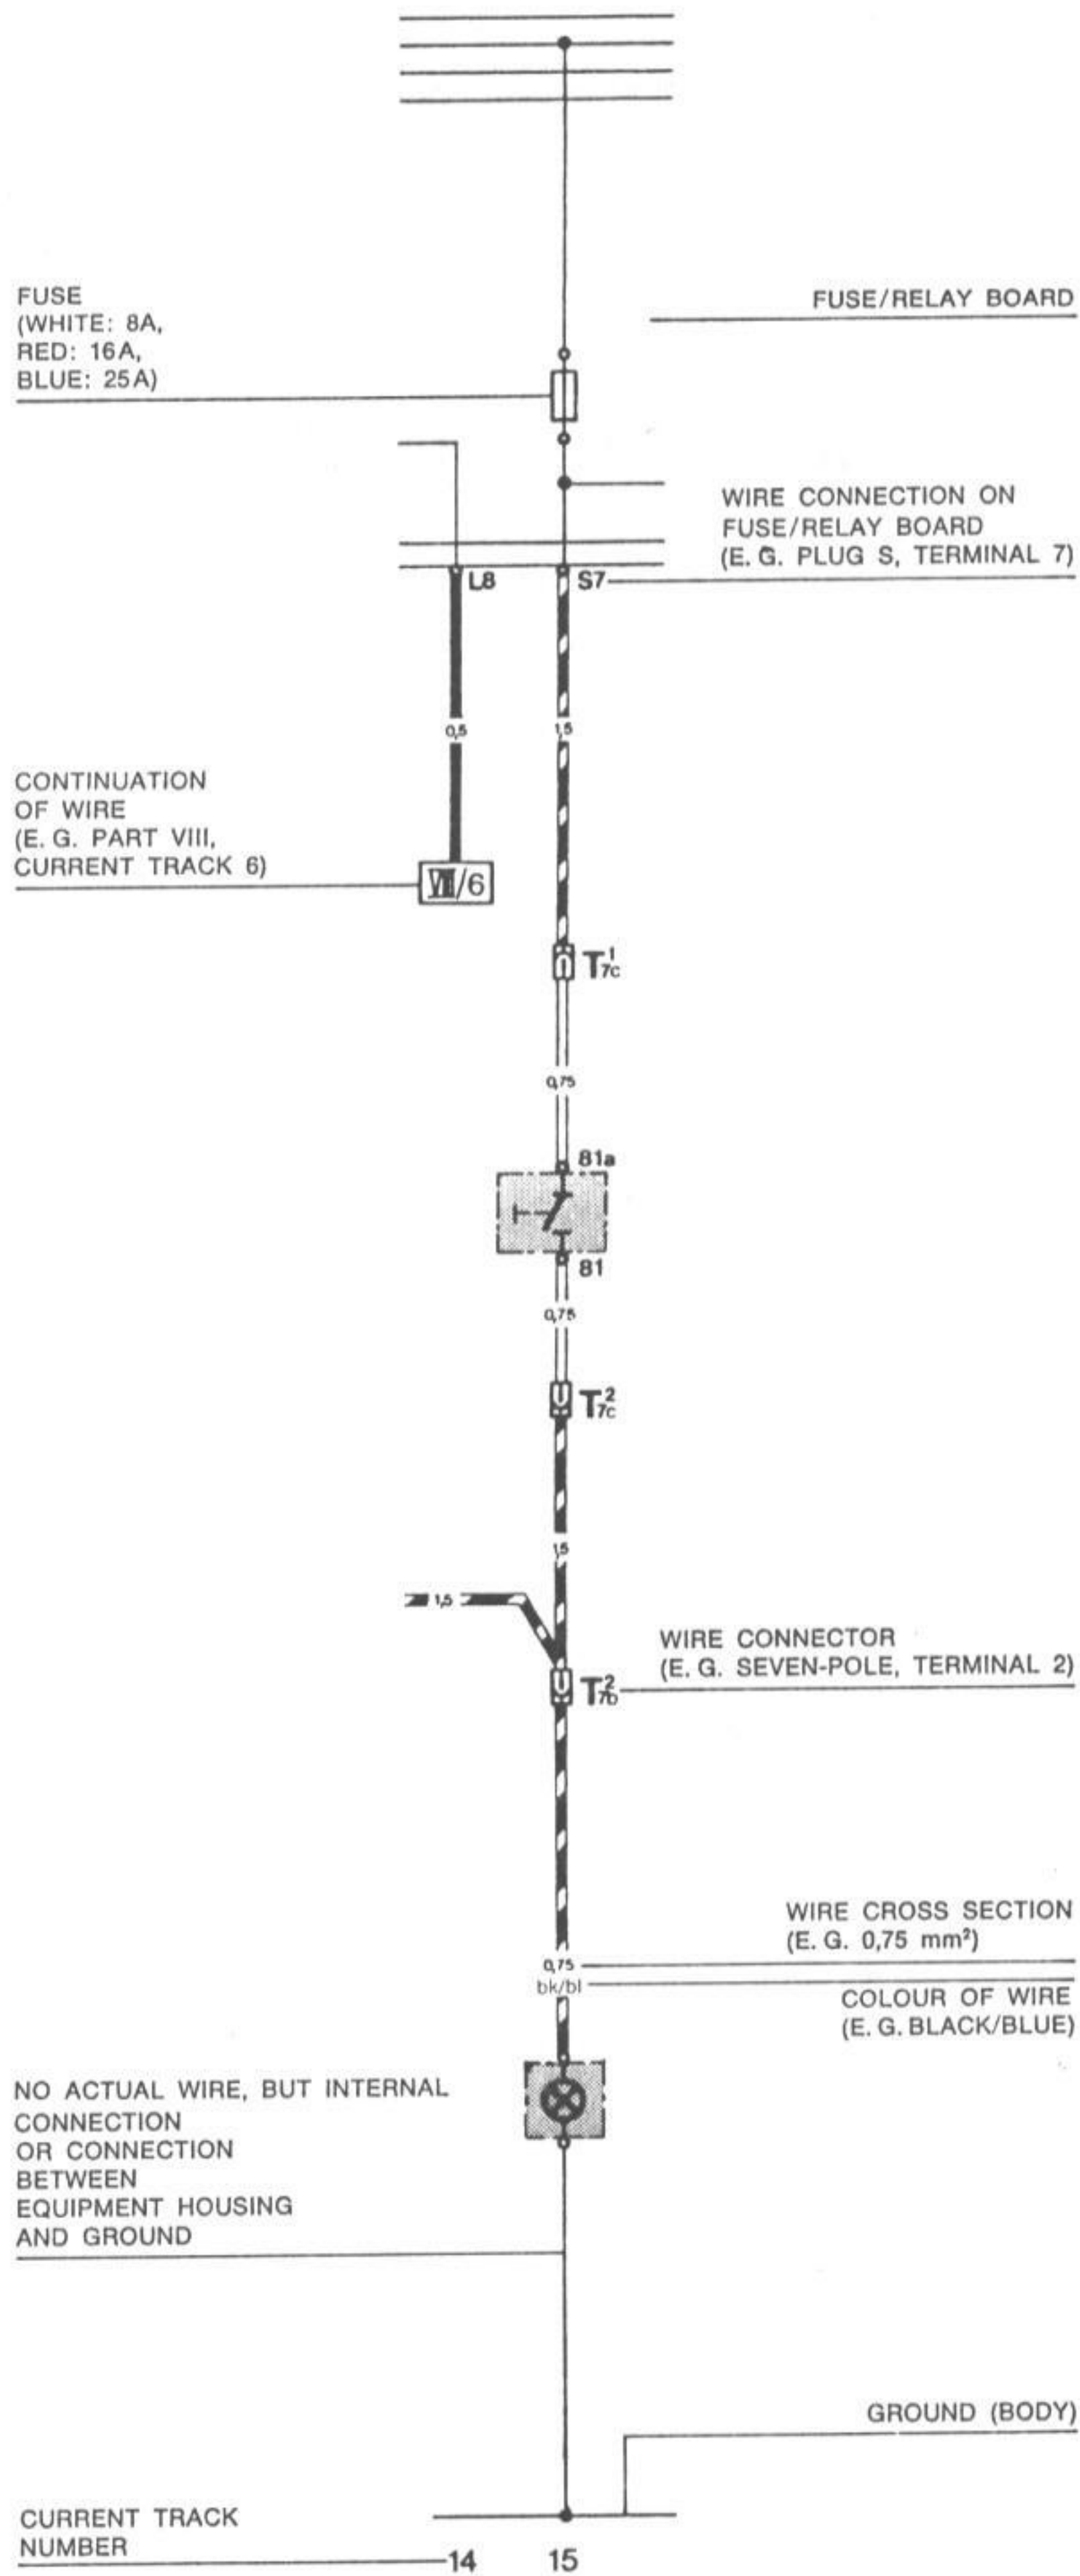

Current Flow Diagram Type 928, 928 S Model 80 Part I

POWER SUPPLY, STARTER
IGNITION
FUEL PUMP


Current Flow Diagram Type 928, 928 S Model 80 Part I

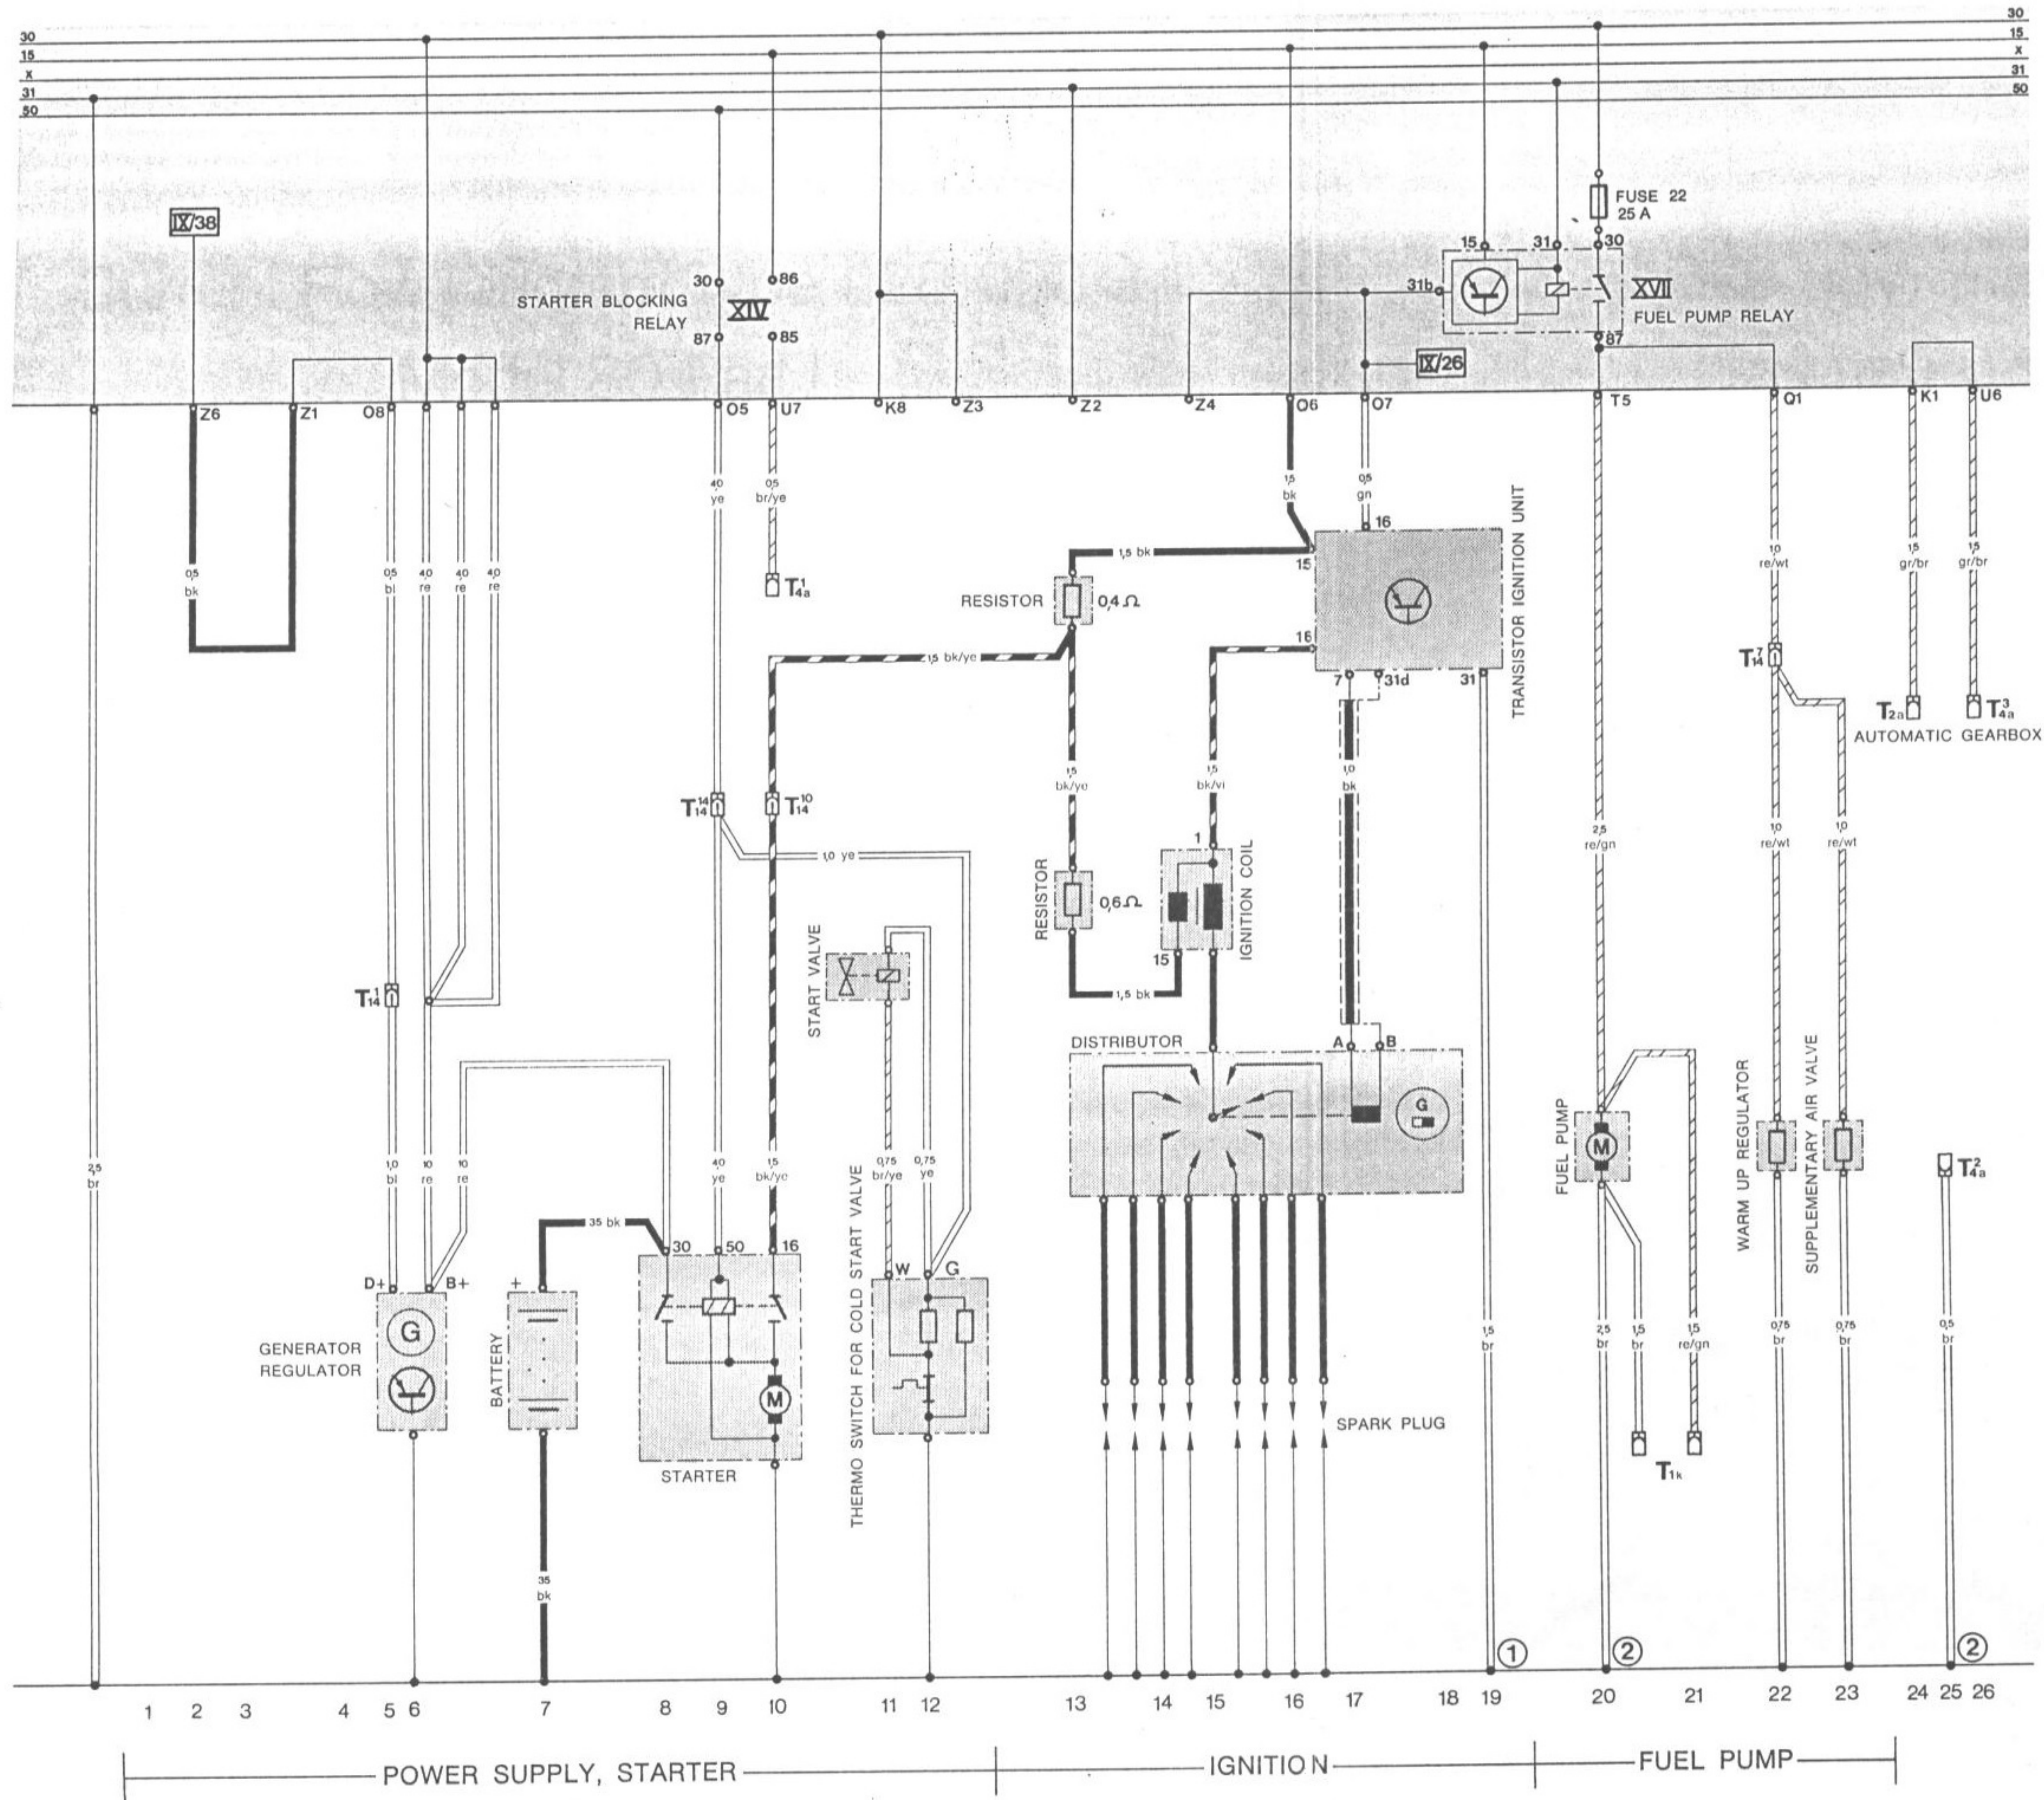

Current Flow Diagram Type 928, 928 S Model 80 Part II

IGNITION/STARTER SWITCH, LIGHT SWITCH
HEADLIGHT


Current Flow Diagram Type 928, 928 S Model 80 Part II

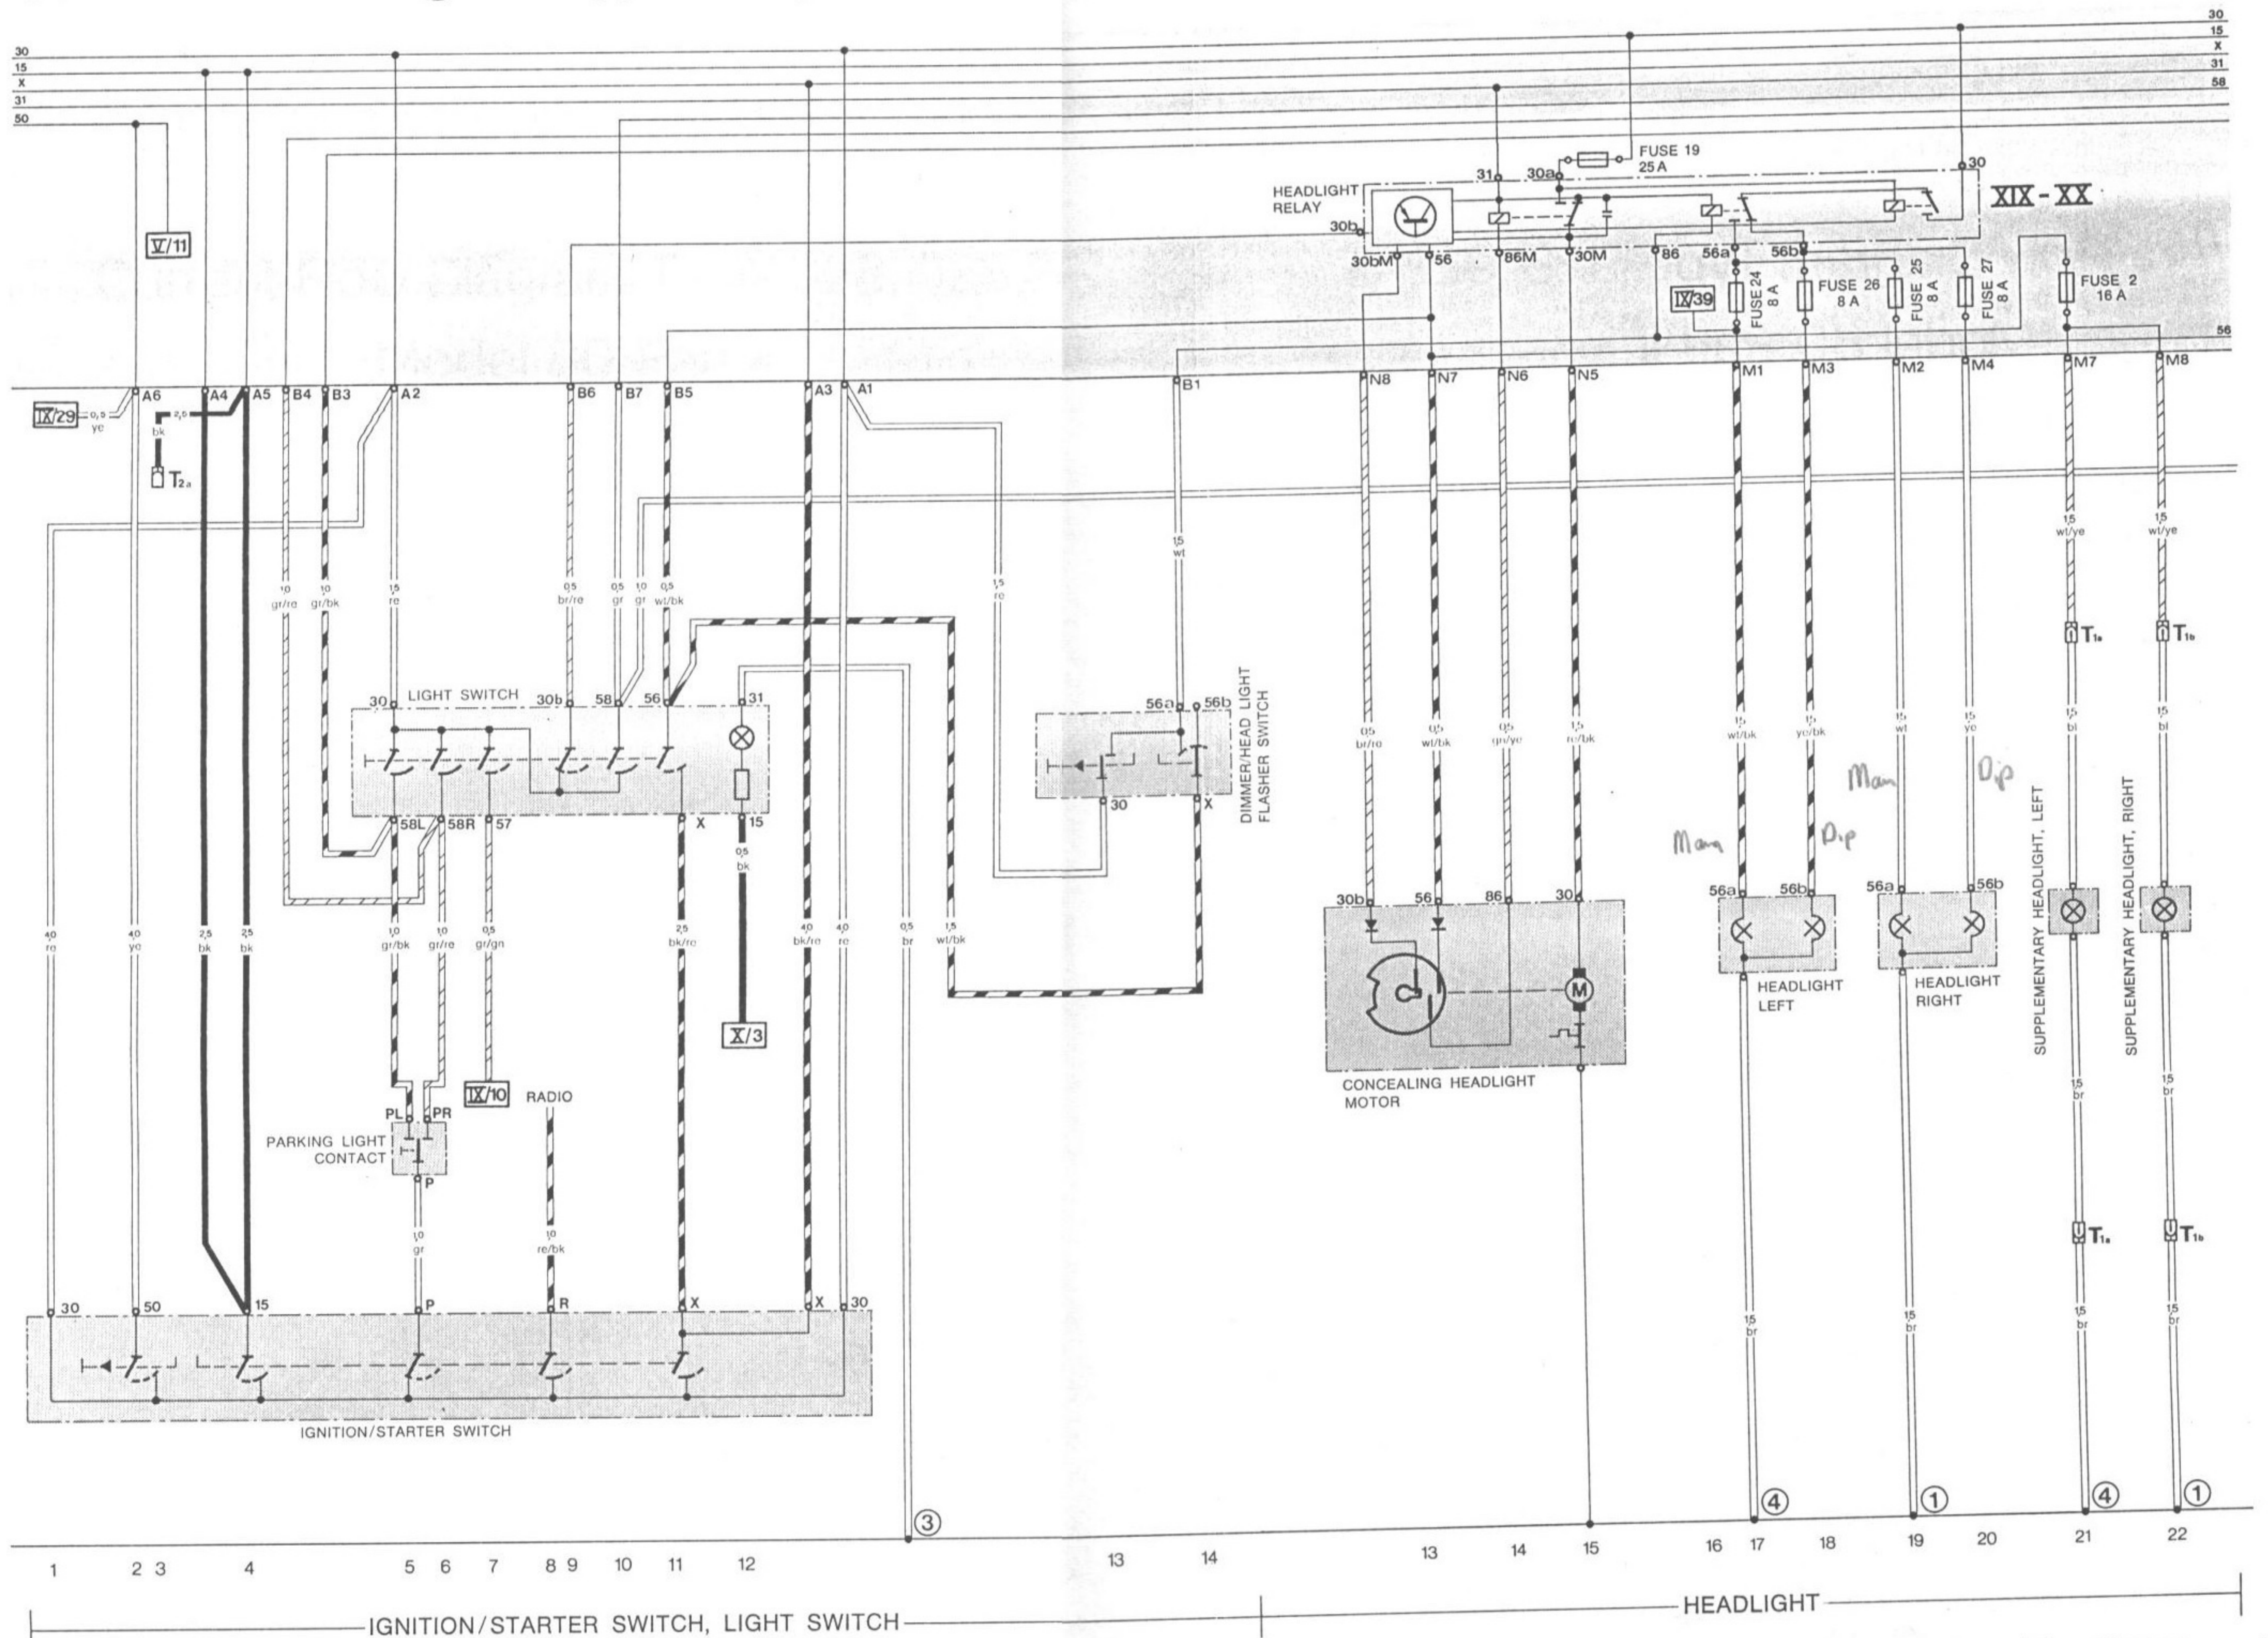

Current Flow Diagram Type 928, 928 S Model 80 Part III

HEADLIGHT, PARKING LIGHT
FOG LIGHT, LICENSE PLATE LIGHT
FRONT TURN SIGNAL
HAZARD FLASHER


Current Flow Diagram Type 928, 928 S Model 80 Part III

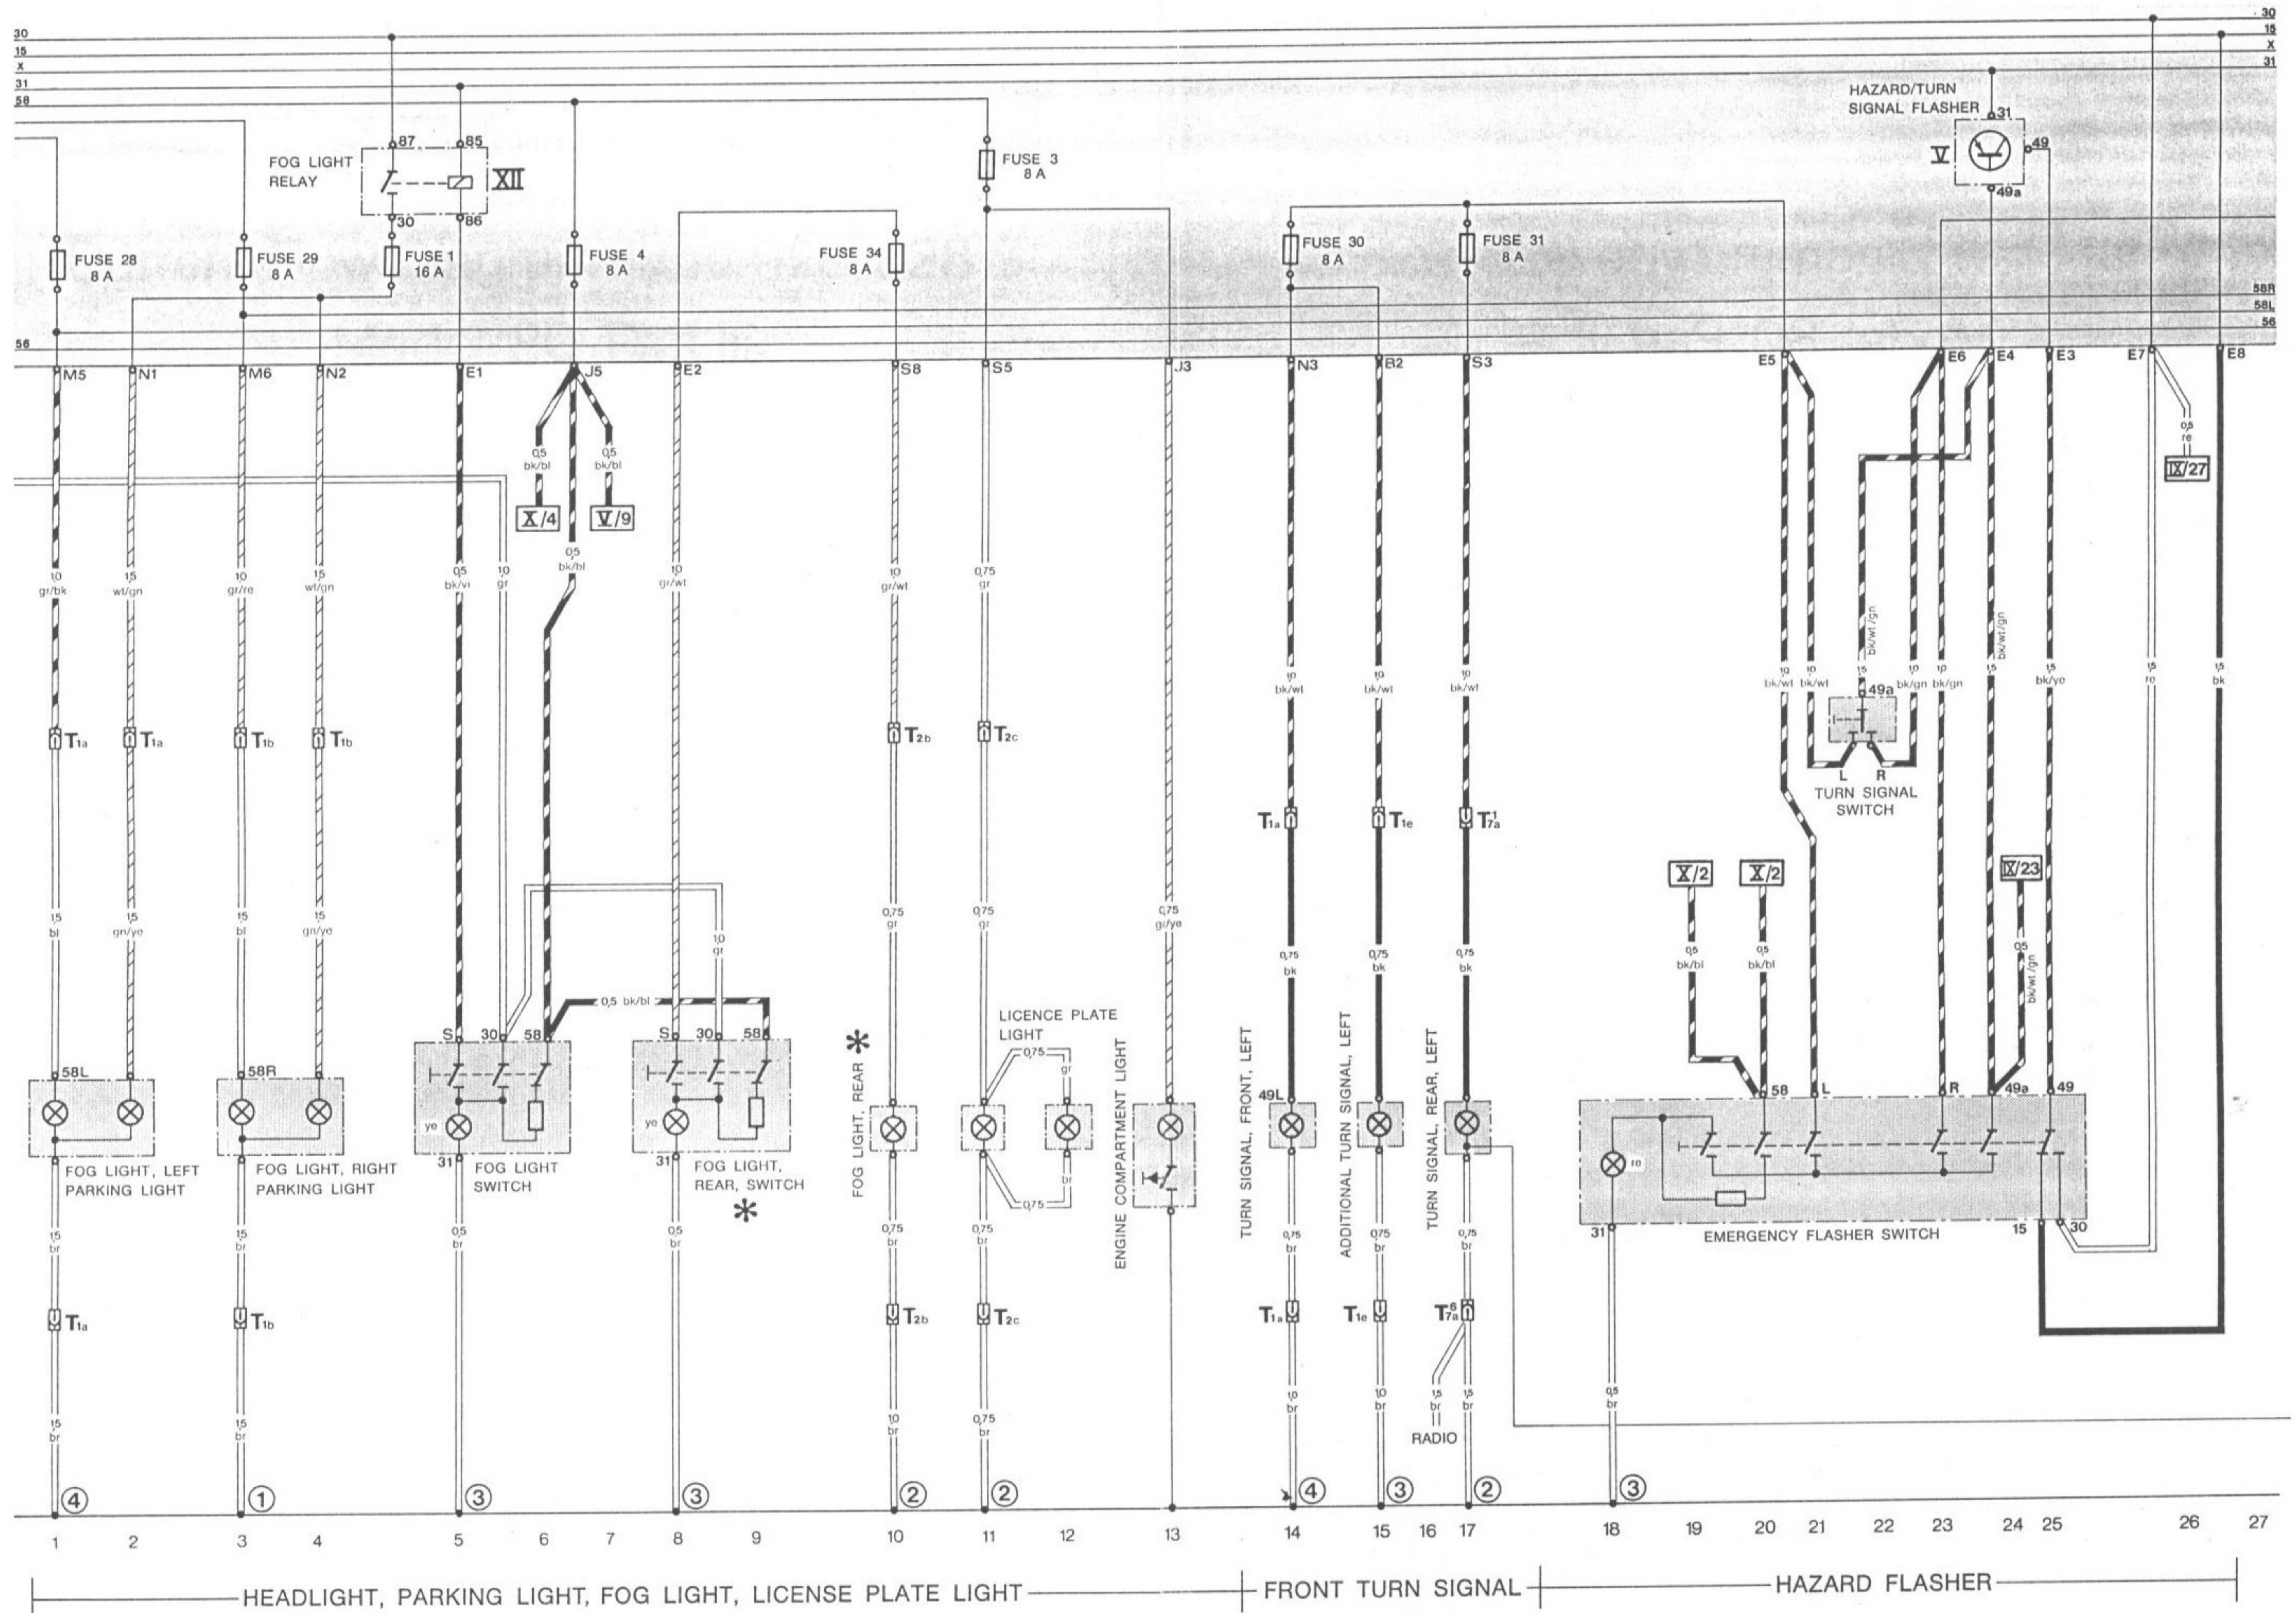

Current Flow Diagram Type 928, 928 S Model 80 Part IV

REAR LIGHTS, LAMP CONTROL UNIT
WINDSHIELD WIPER


Current Flow Diagram Type 928, 928 S Model 80 Part IV

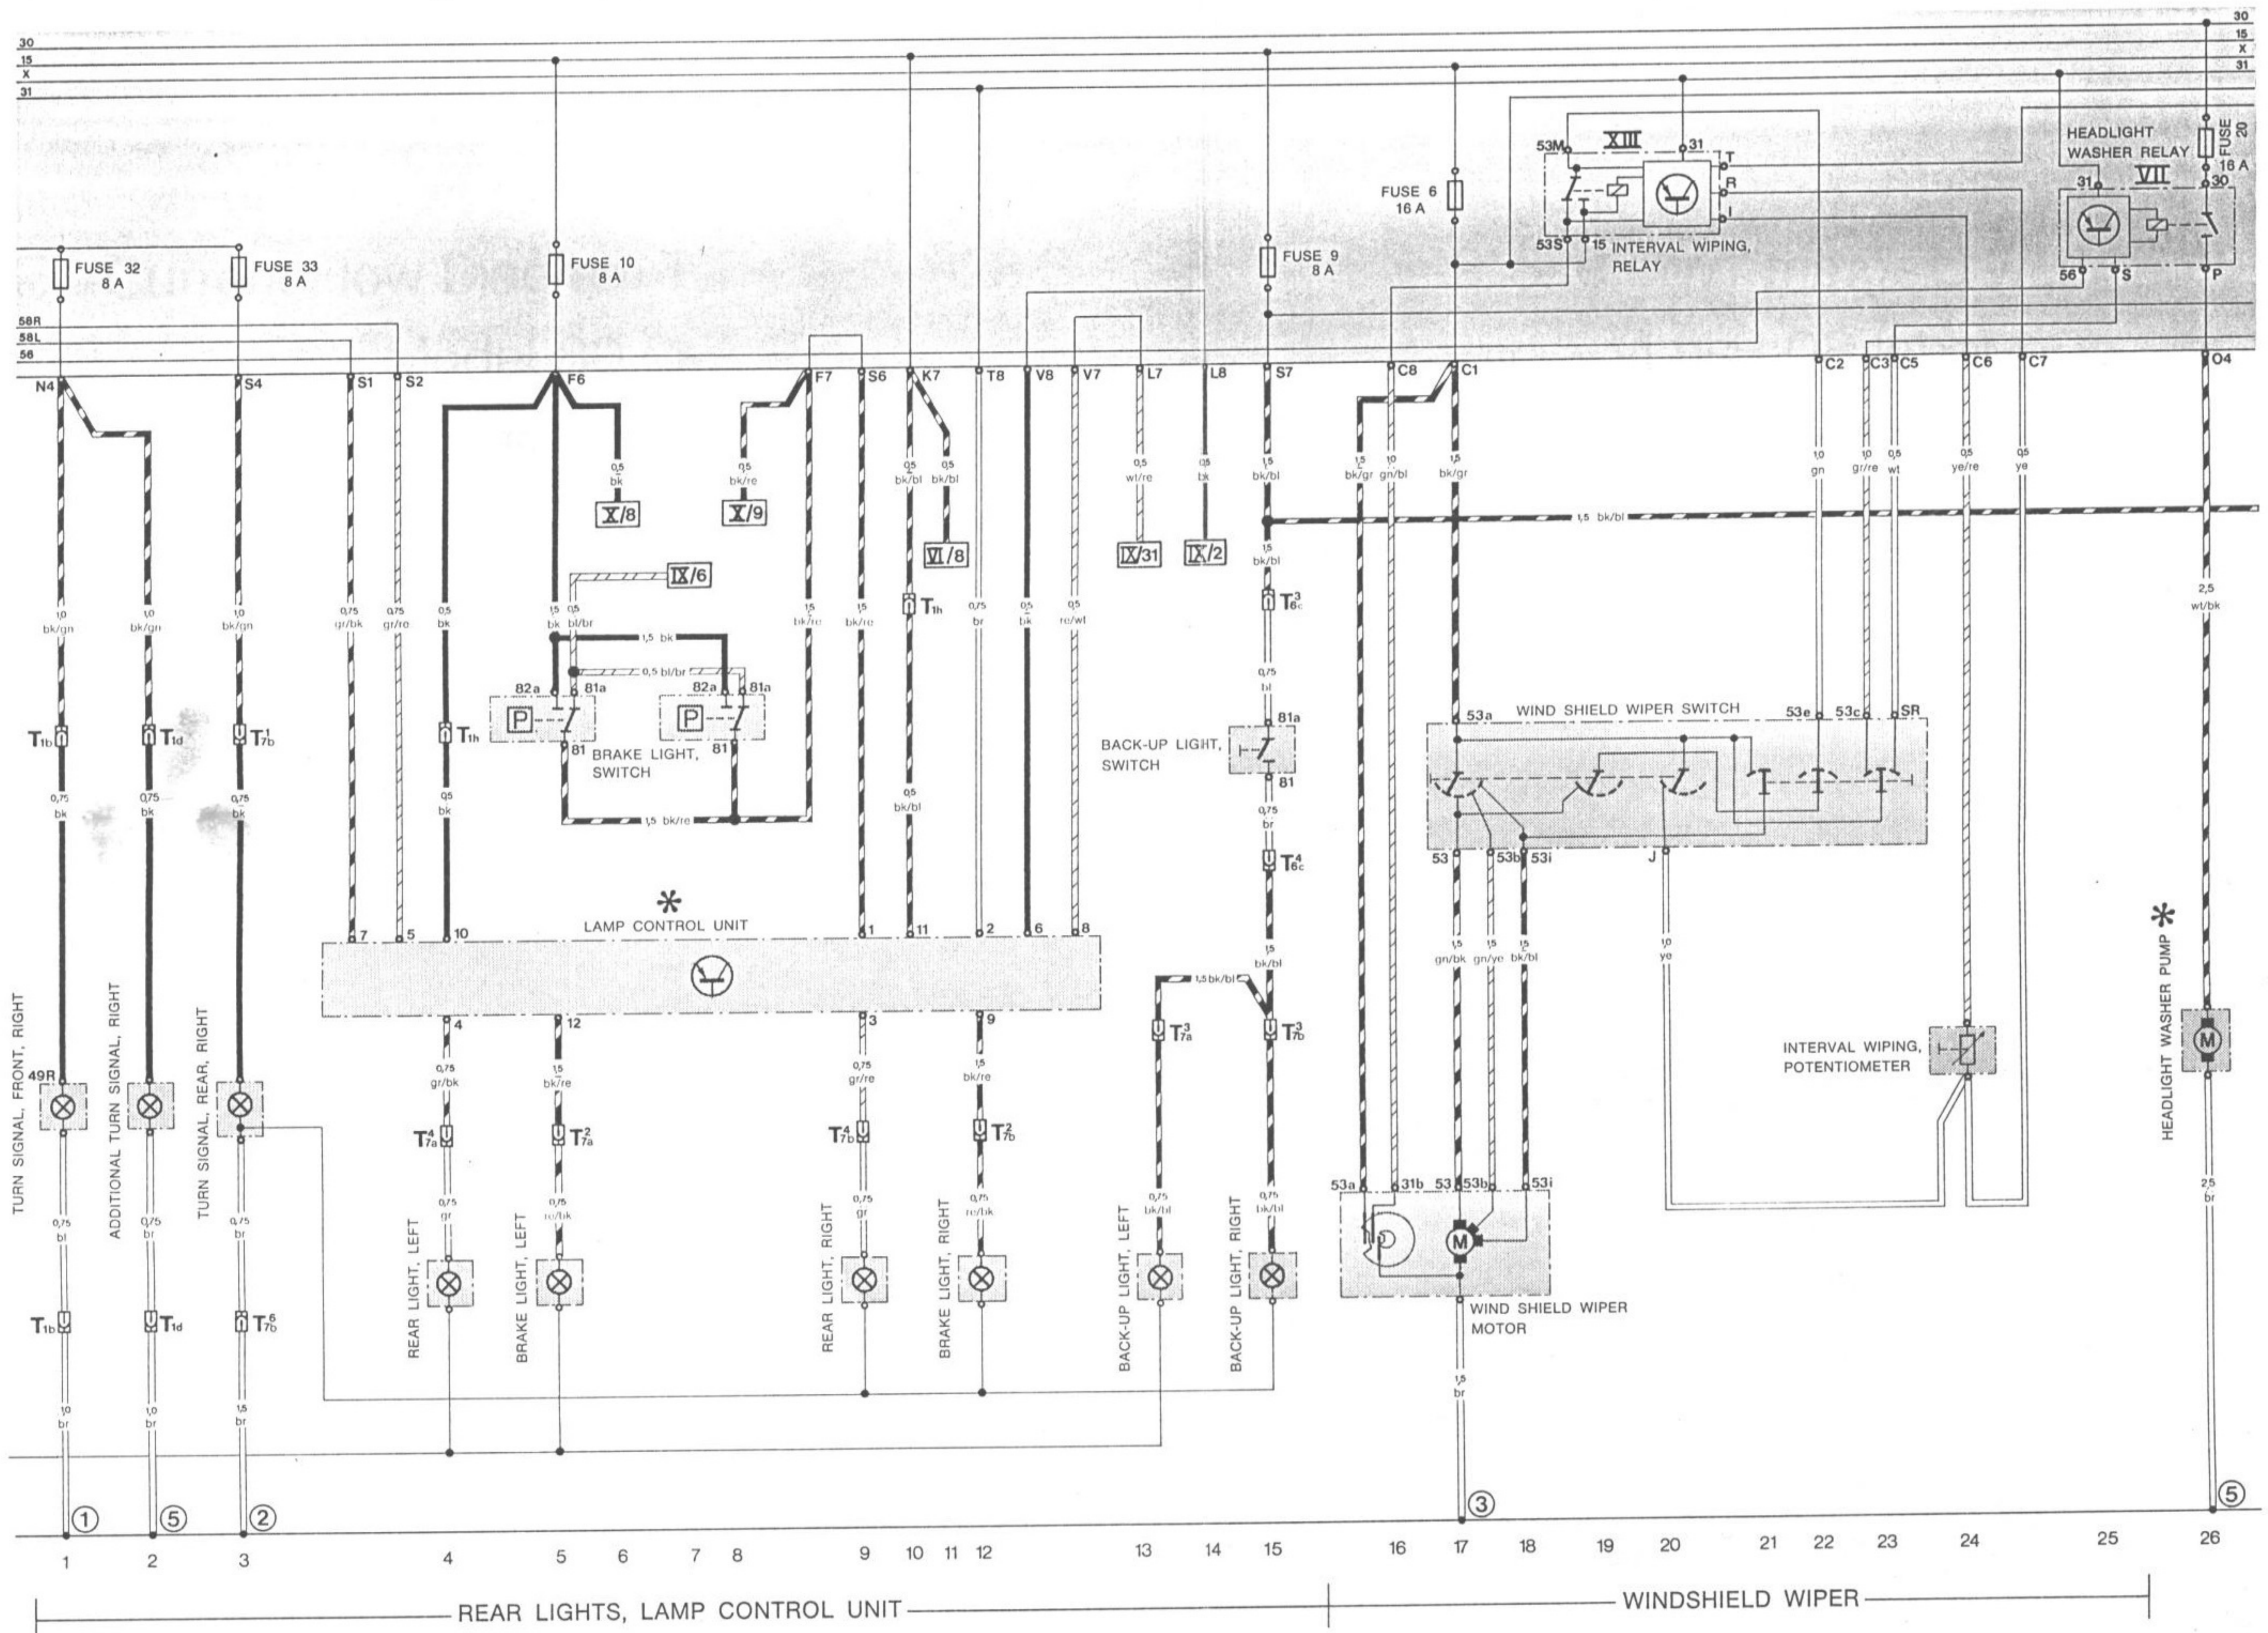

Current Flow Diagram Type 928, 928 S Model 80 Part V

WASHER PUMPS
REAR WINDOW WIPER
REAR WINDOW DEFOGGER
INTERIOR LIGHT
CENTRAL LOCKING SYSTEM


Current Flow Diagram Type 928, 928 S Model 80 Part V

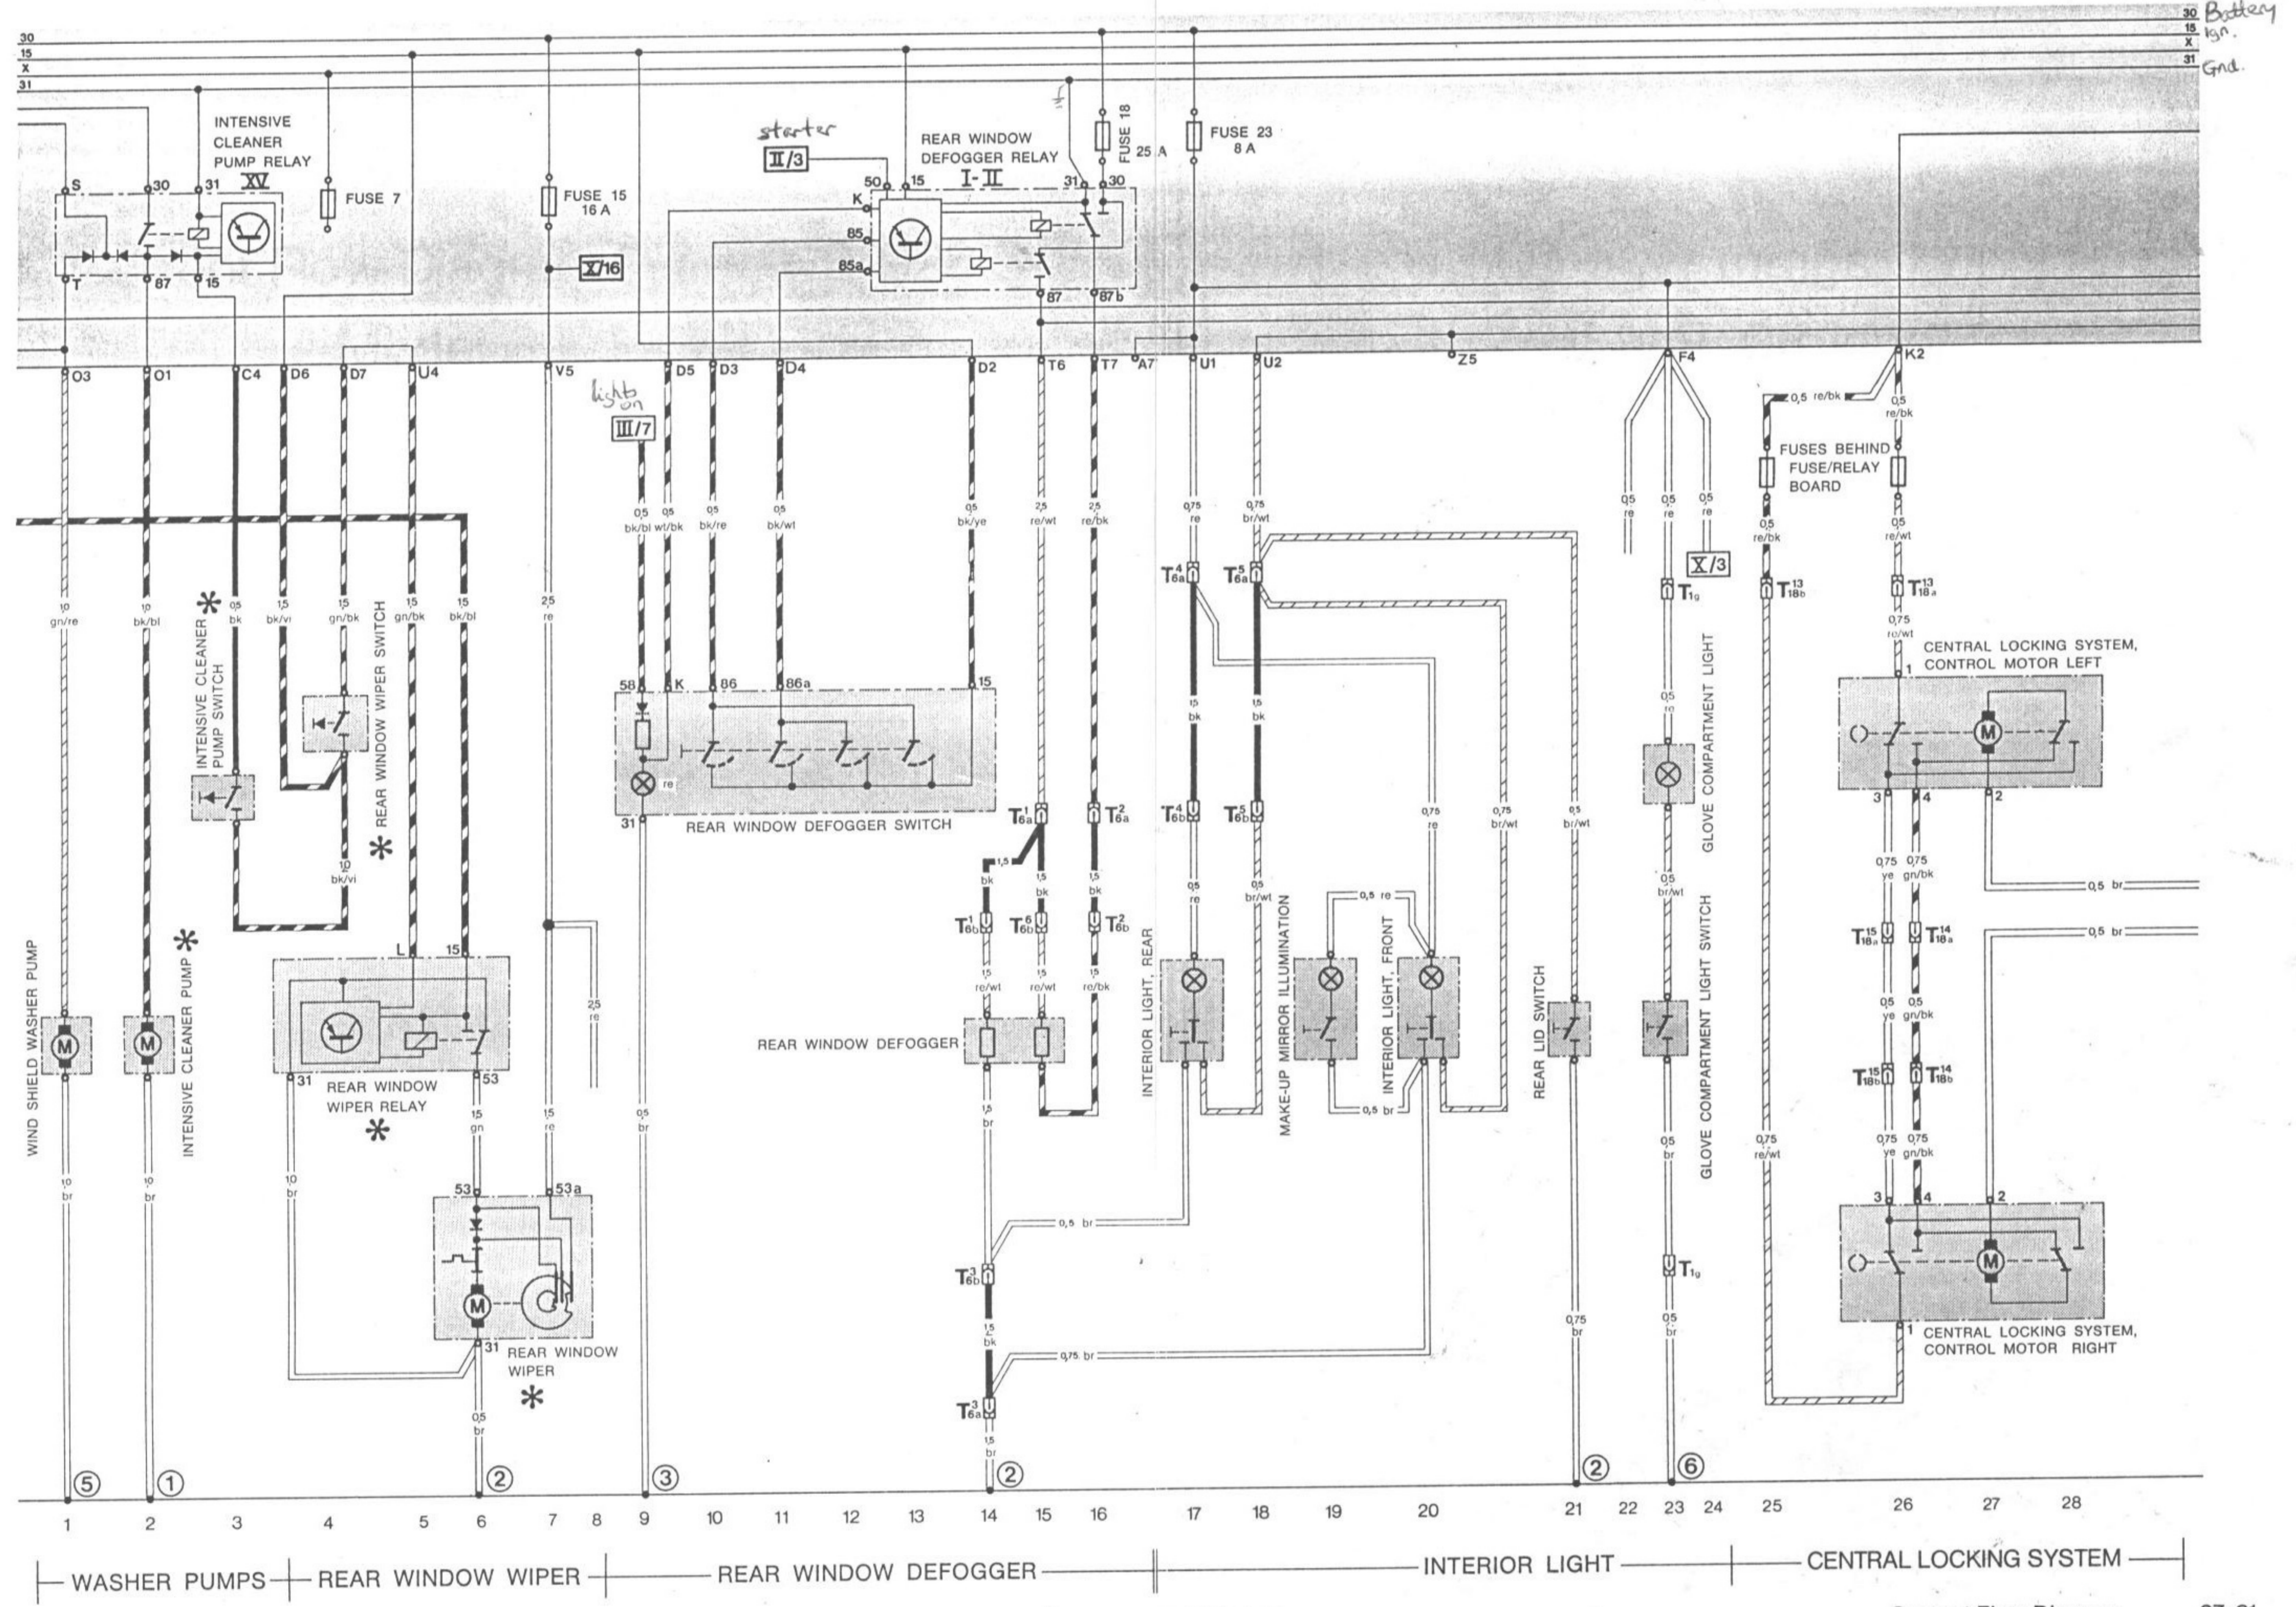

Current Flow Diagram Type 928 Model 80 Part VI

DOOR LIGHT
SEAT BELT
OUTSIDE MIRROR
POWER WINDOWS
BRAKE PADS


Current Flow Diagram Type 928, 928 S Model 80 Part VI

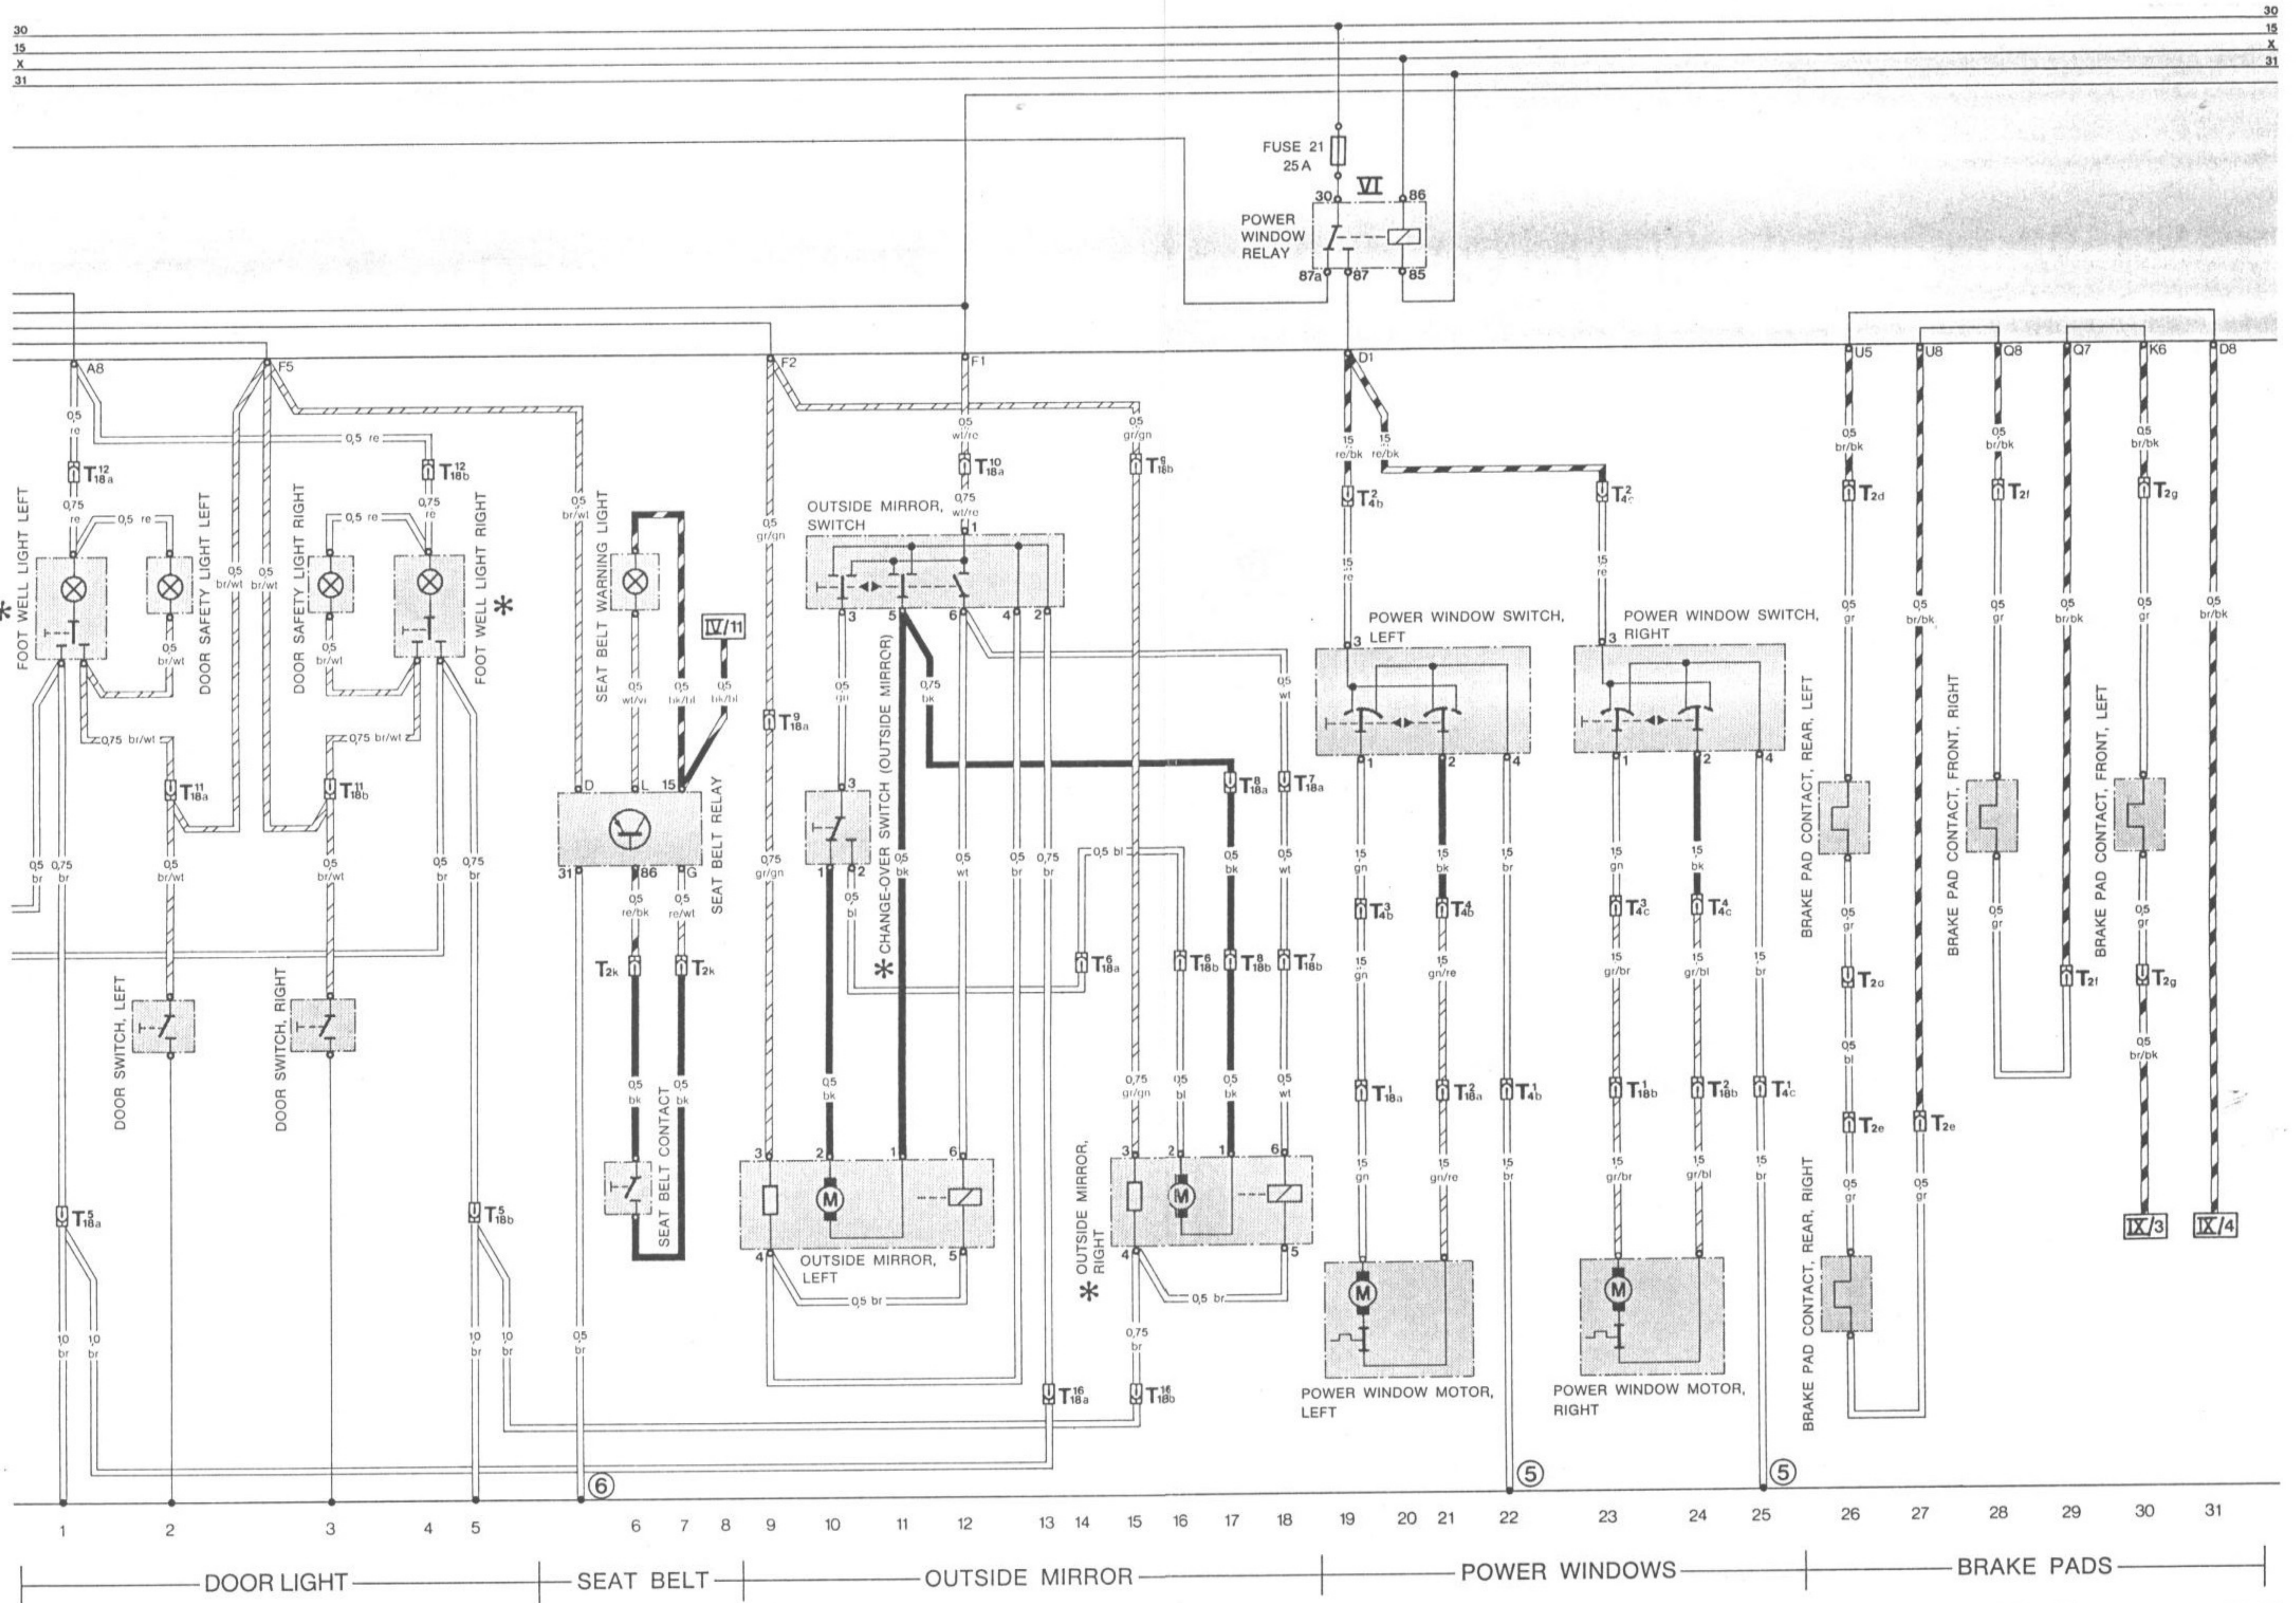

Current Flow Diagram Type 928, 928 S Model 80 Part VI

AUTOMATIC AIR CONDITIONER (OPTIONAL FOR 928)

Current Flow Diagram Type 928, 928 S Model 80 Part VII

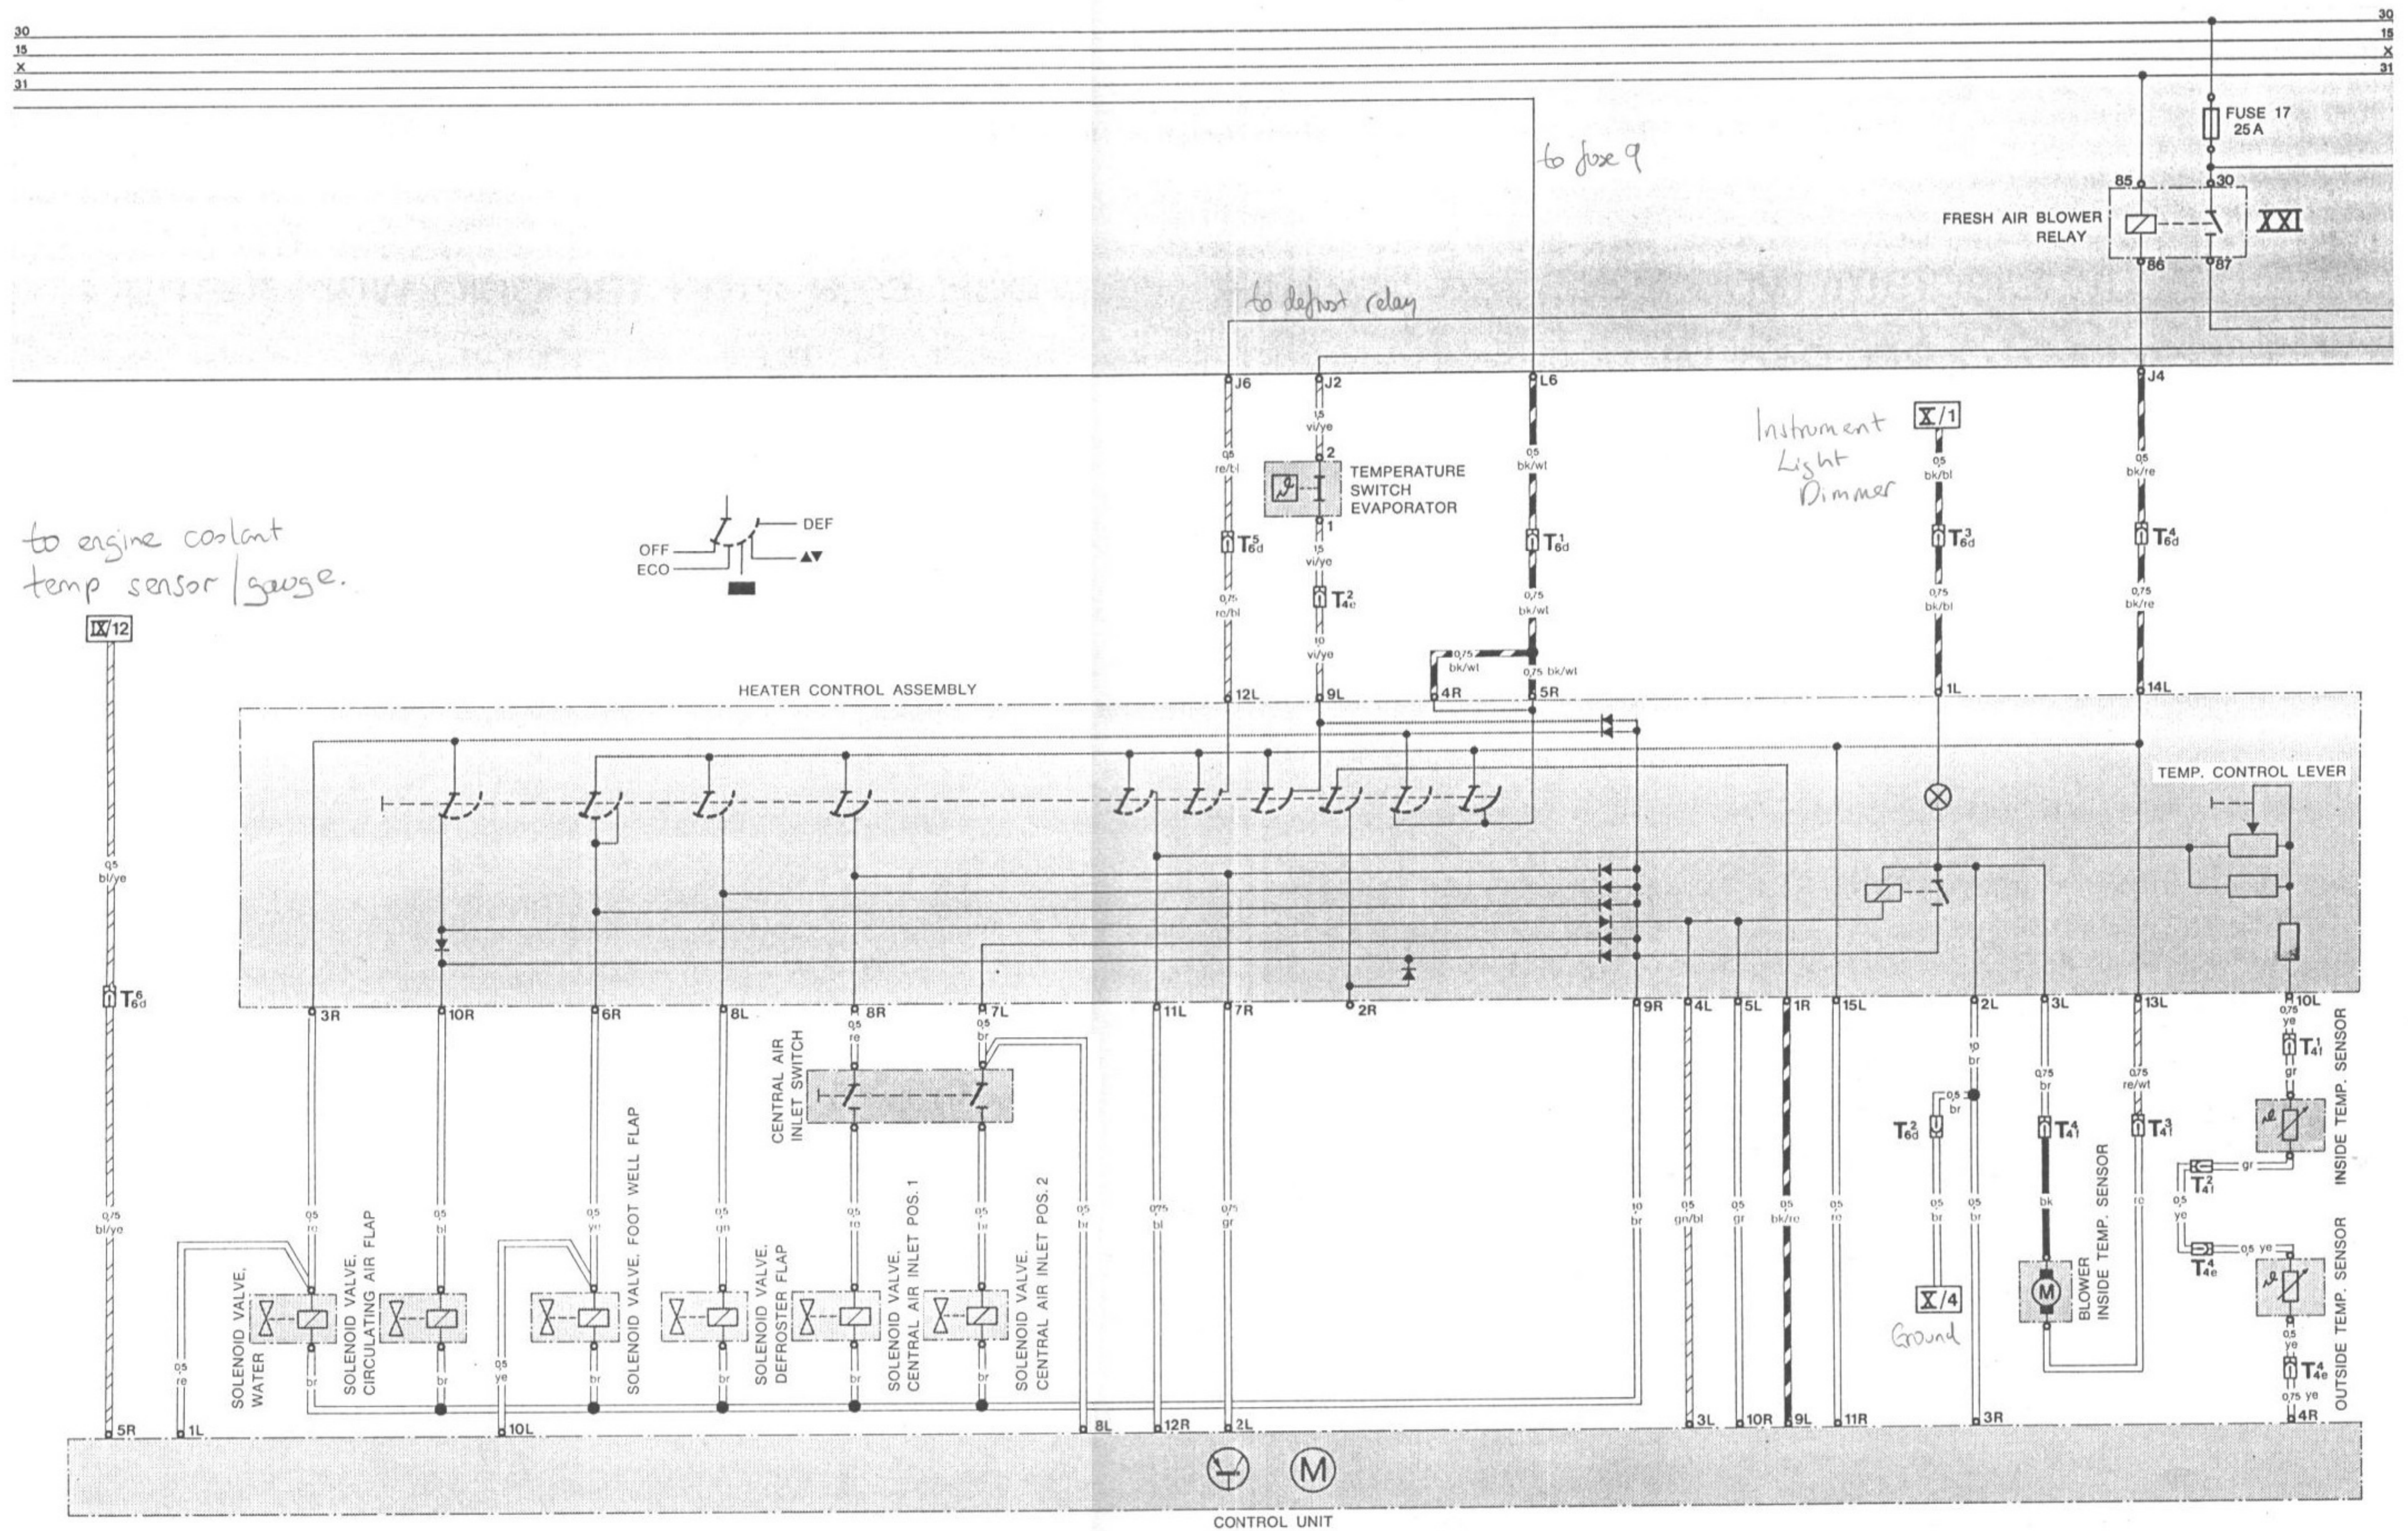

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23


AUTOMATIC AIR CONDITIONER (OPTIONAL FOR 928)

Current Flow Diagram Type 928, 928 S Model 80 Part VIII

AUTOMATIC AIR CONDITIONER (OPTIONAL FOR 928)

SENDER UNITS

Current Flow Diagram Type 928, 928 S Model 80 Part VIII

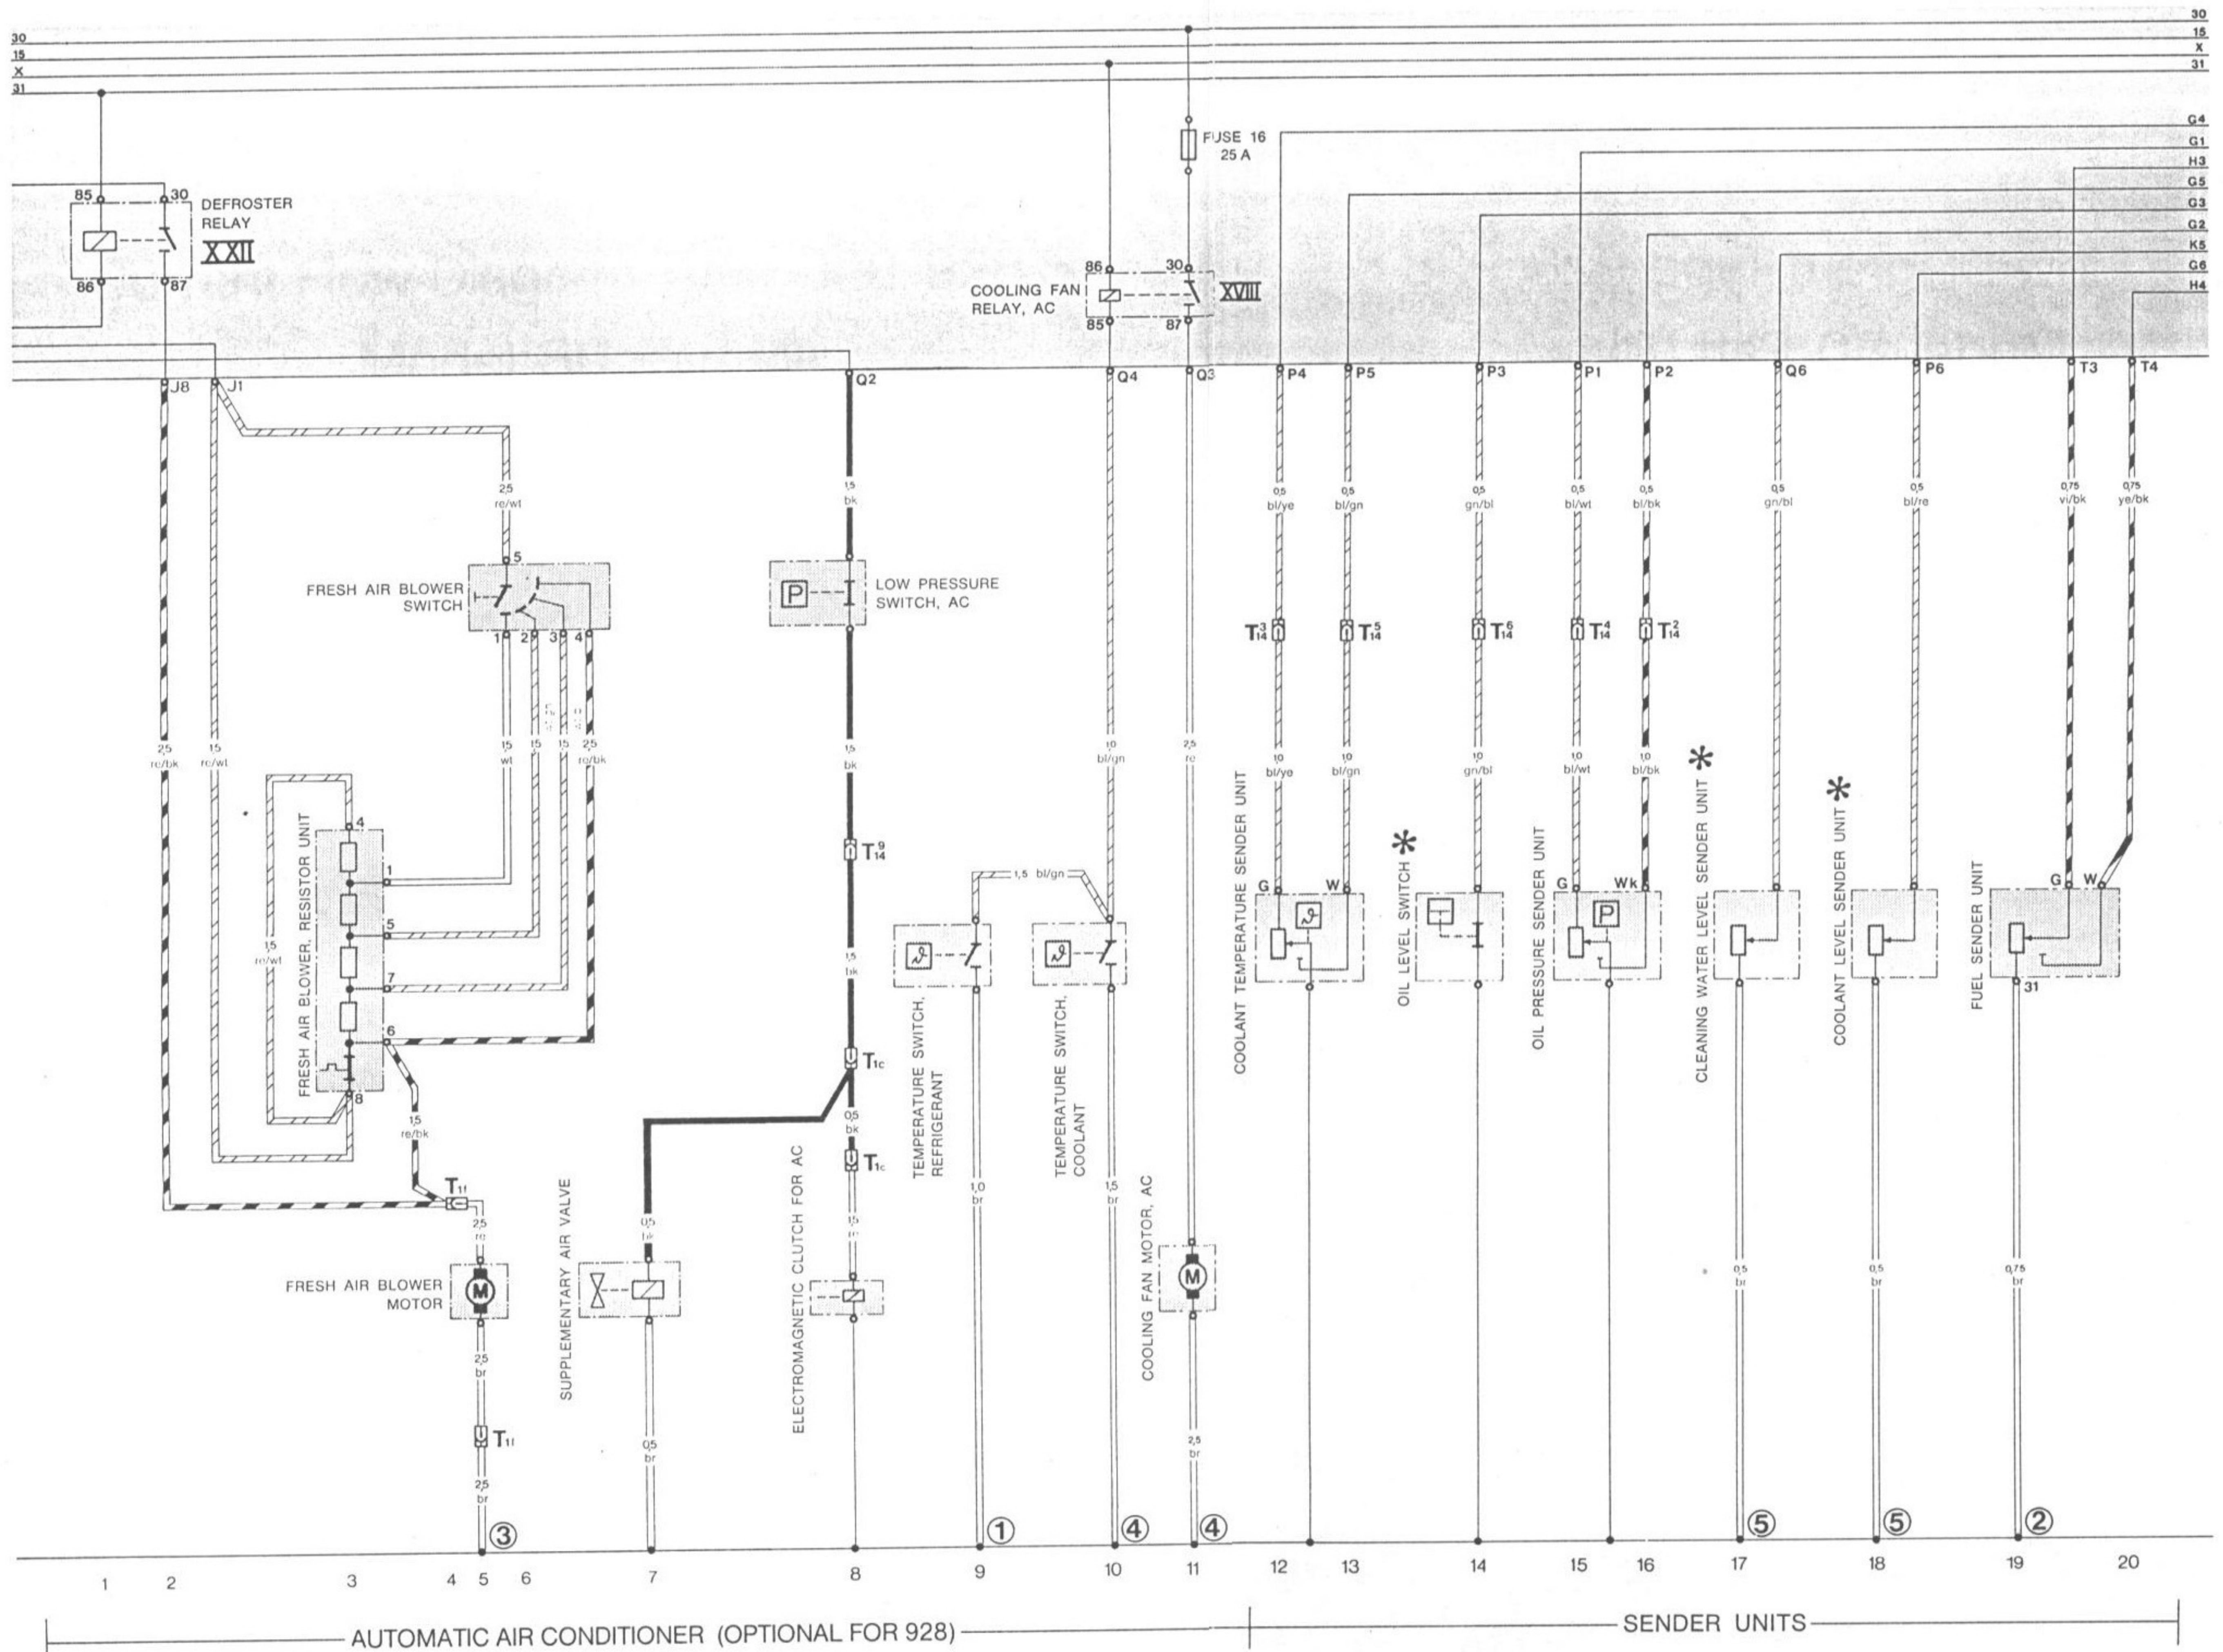


* OPTIONAL FOR 928

Current Flow Diagram Type 928, 928 S Model 80 Part IX

CENTRAL WARNING UNIT, INSTRUMENT CLUSTER

Current Flow Diagram Type 928, 928 S Model 30 Part IX

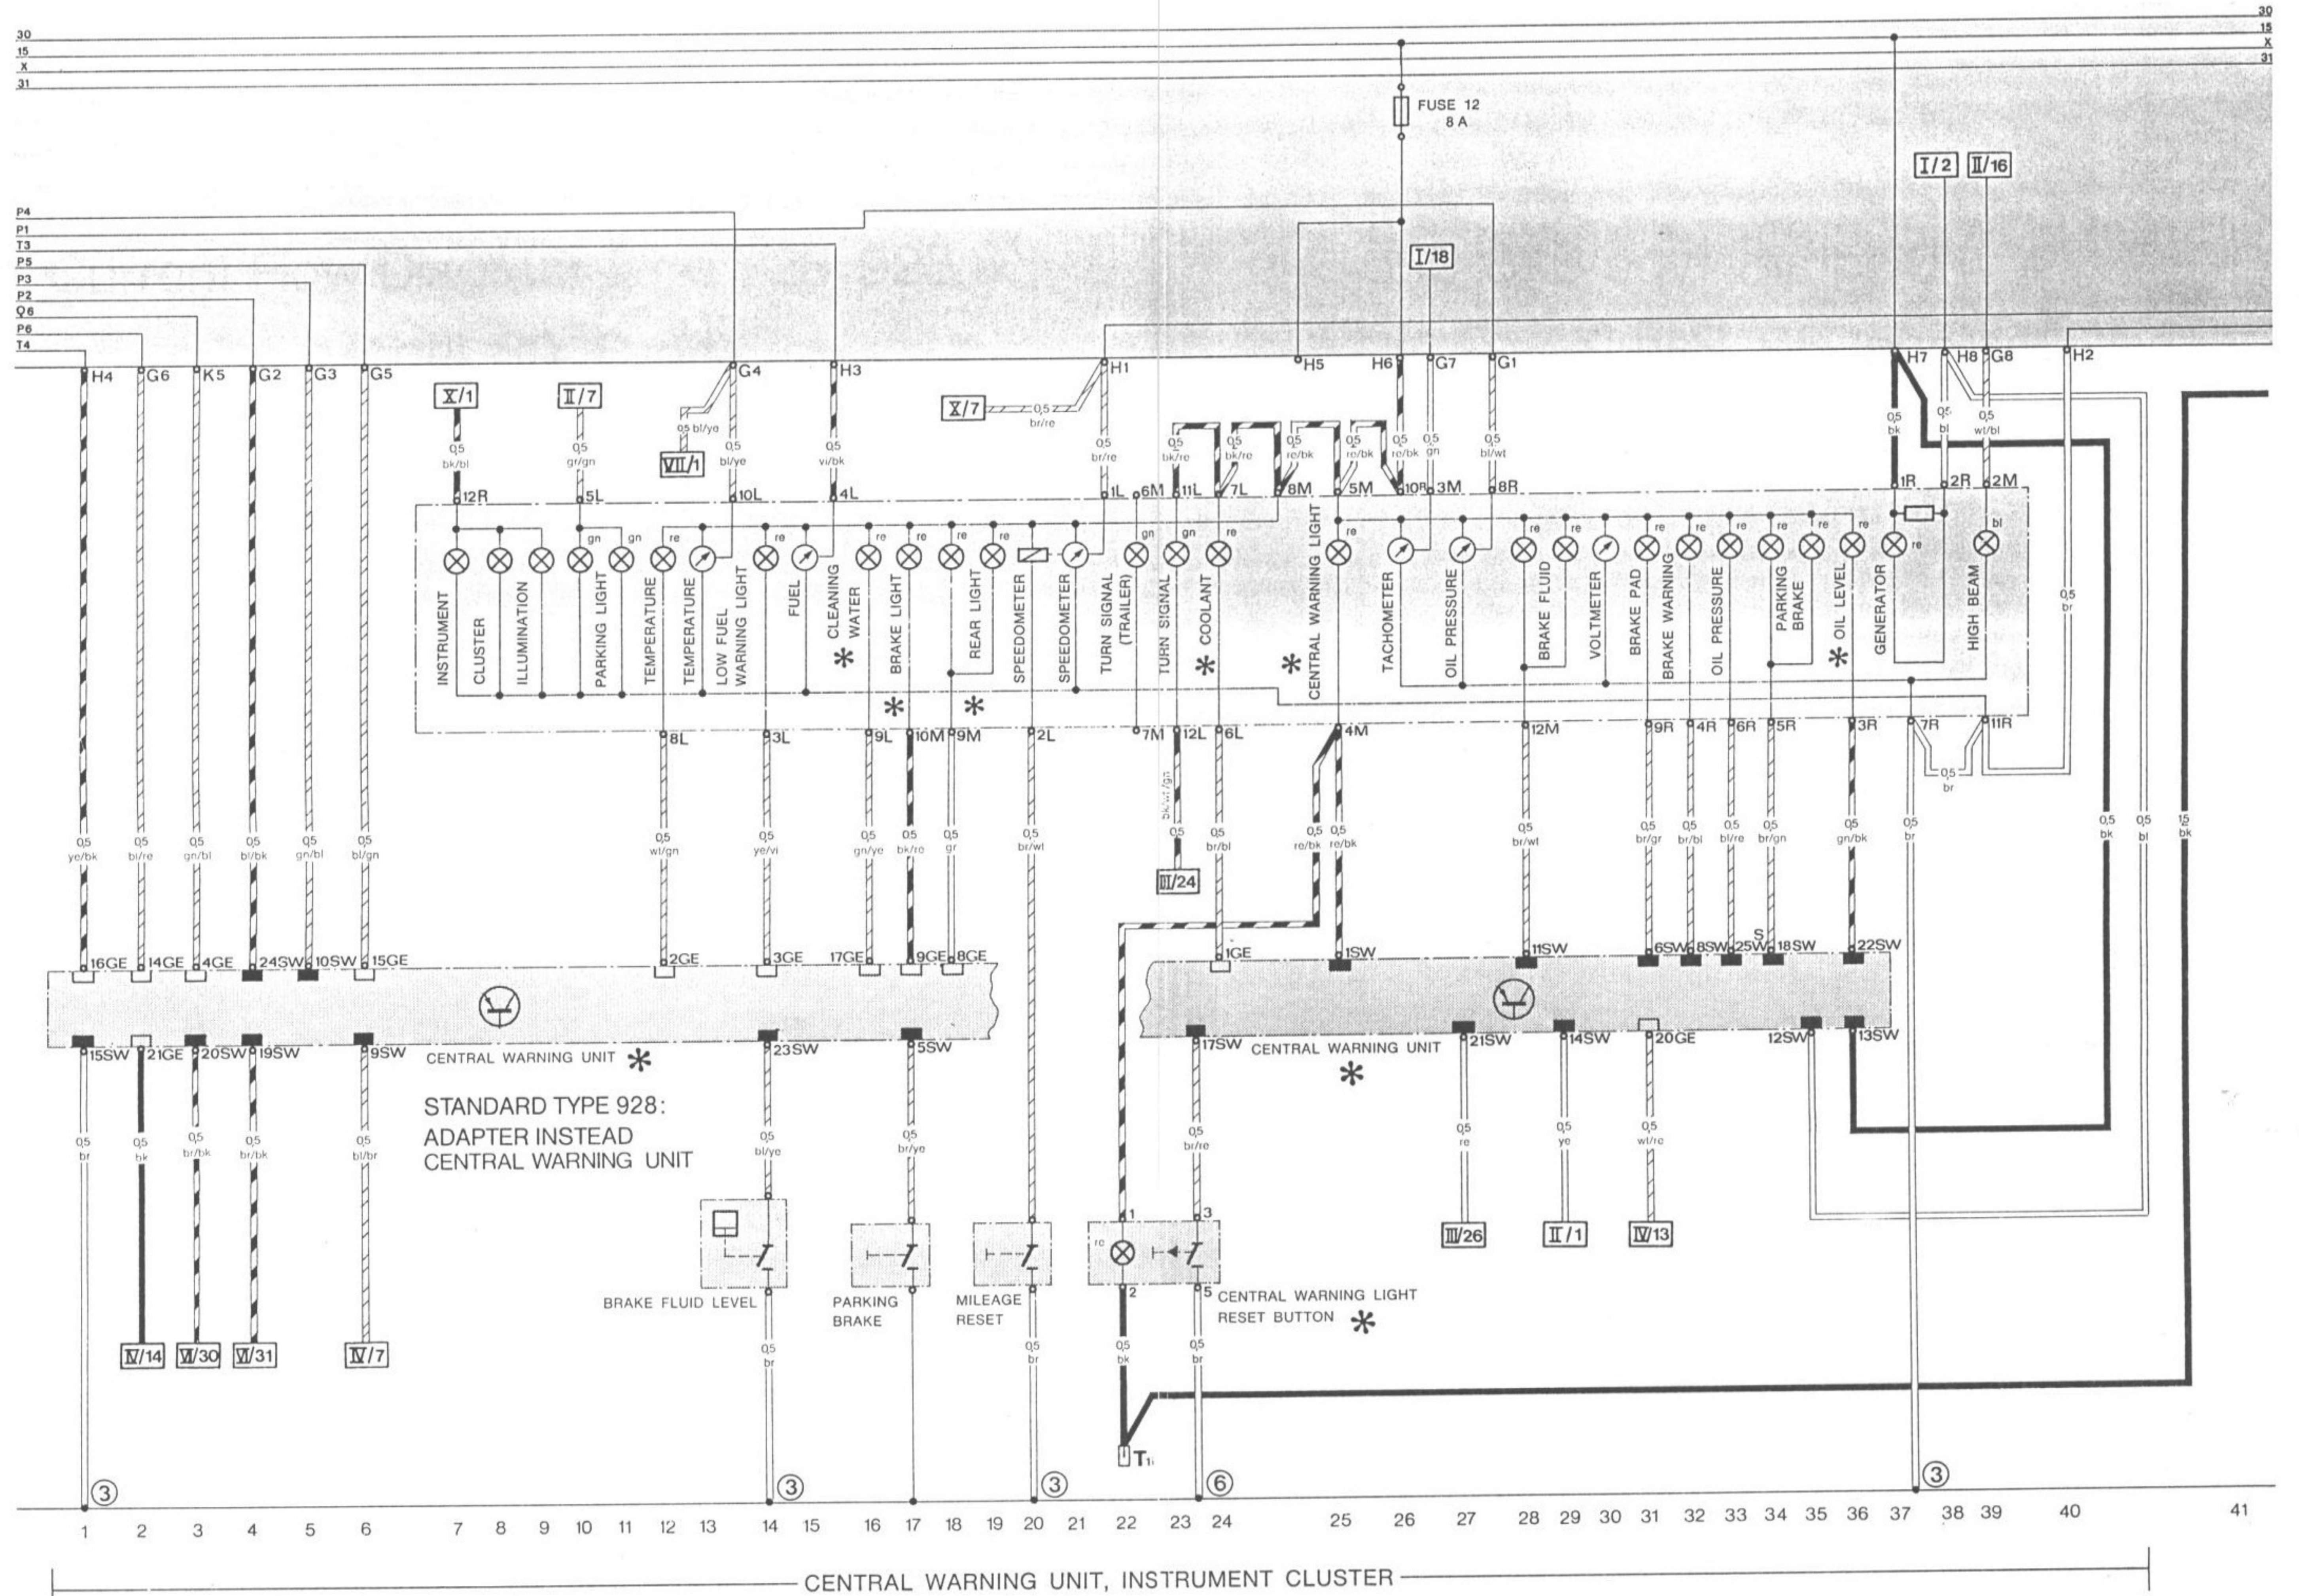

Current Flow Diagram Type 928, 928 S Model 80 Part X

CLOCK


CIGARETTE LIGHTER

TEMPOSTAT (CRUISE CONTROL)

HORNS


RADIO

Current Flow Diagram Type 928, 928 S Model 80 Part X

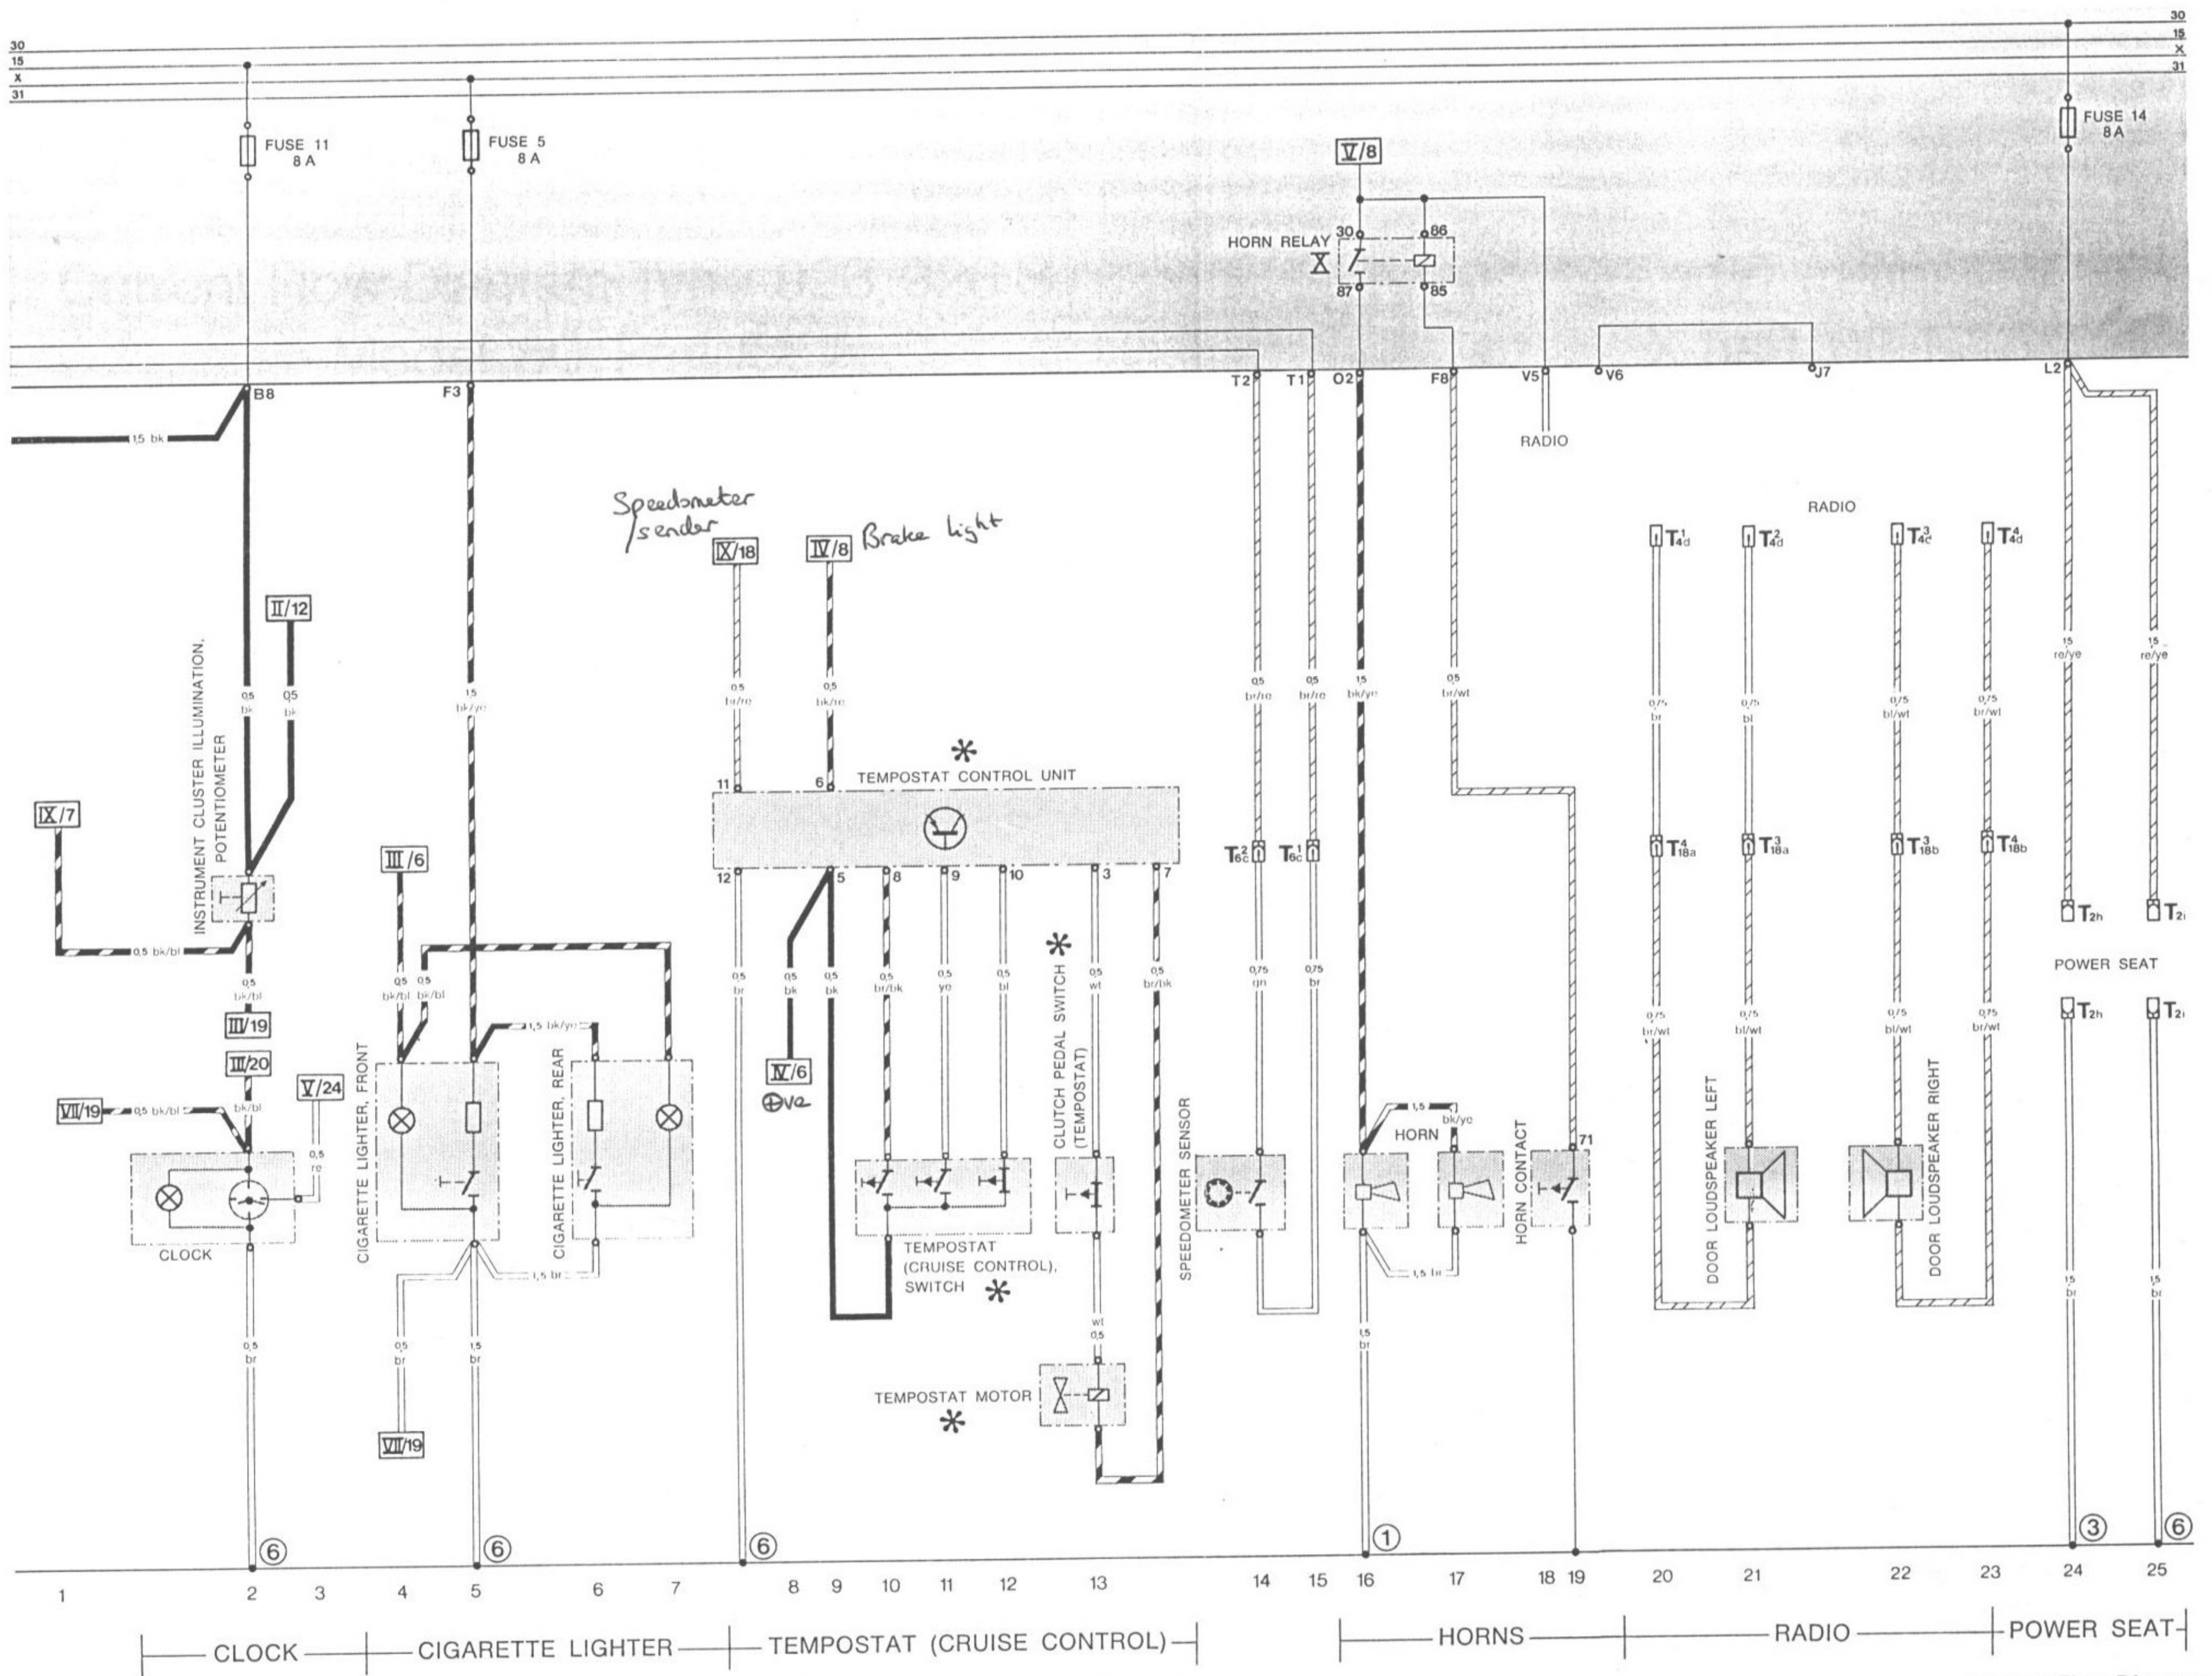

Additional Current Flow Diagram Type 928 Model 80

HEATING/VENTILATION/AC

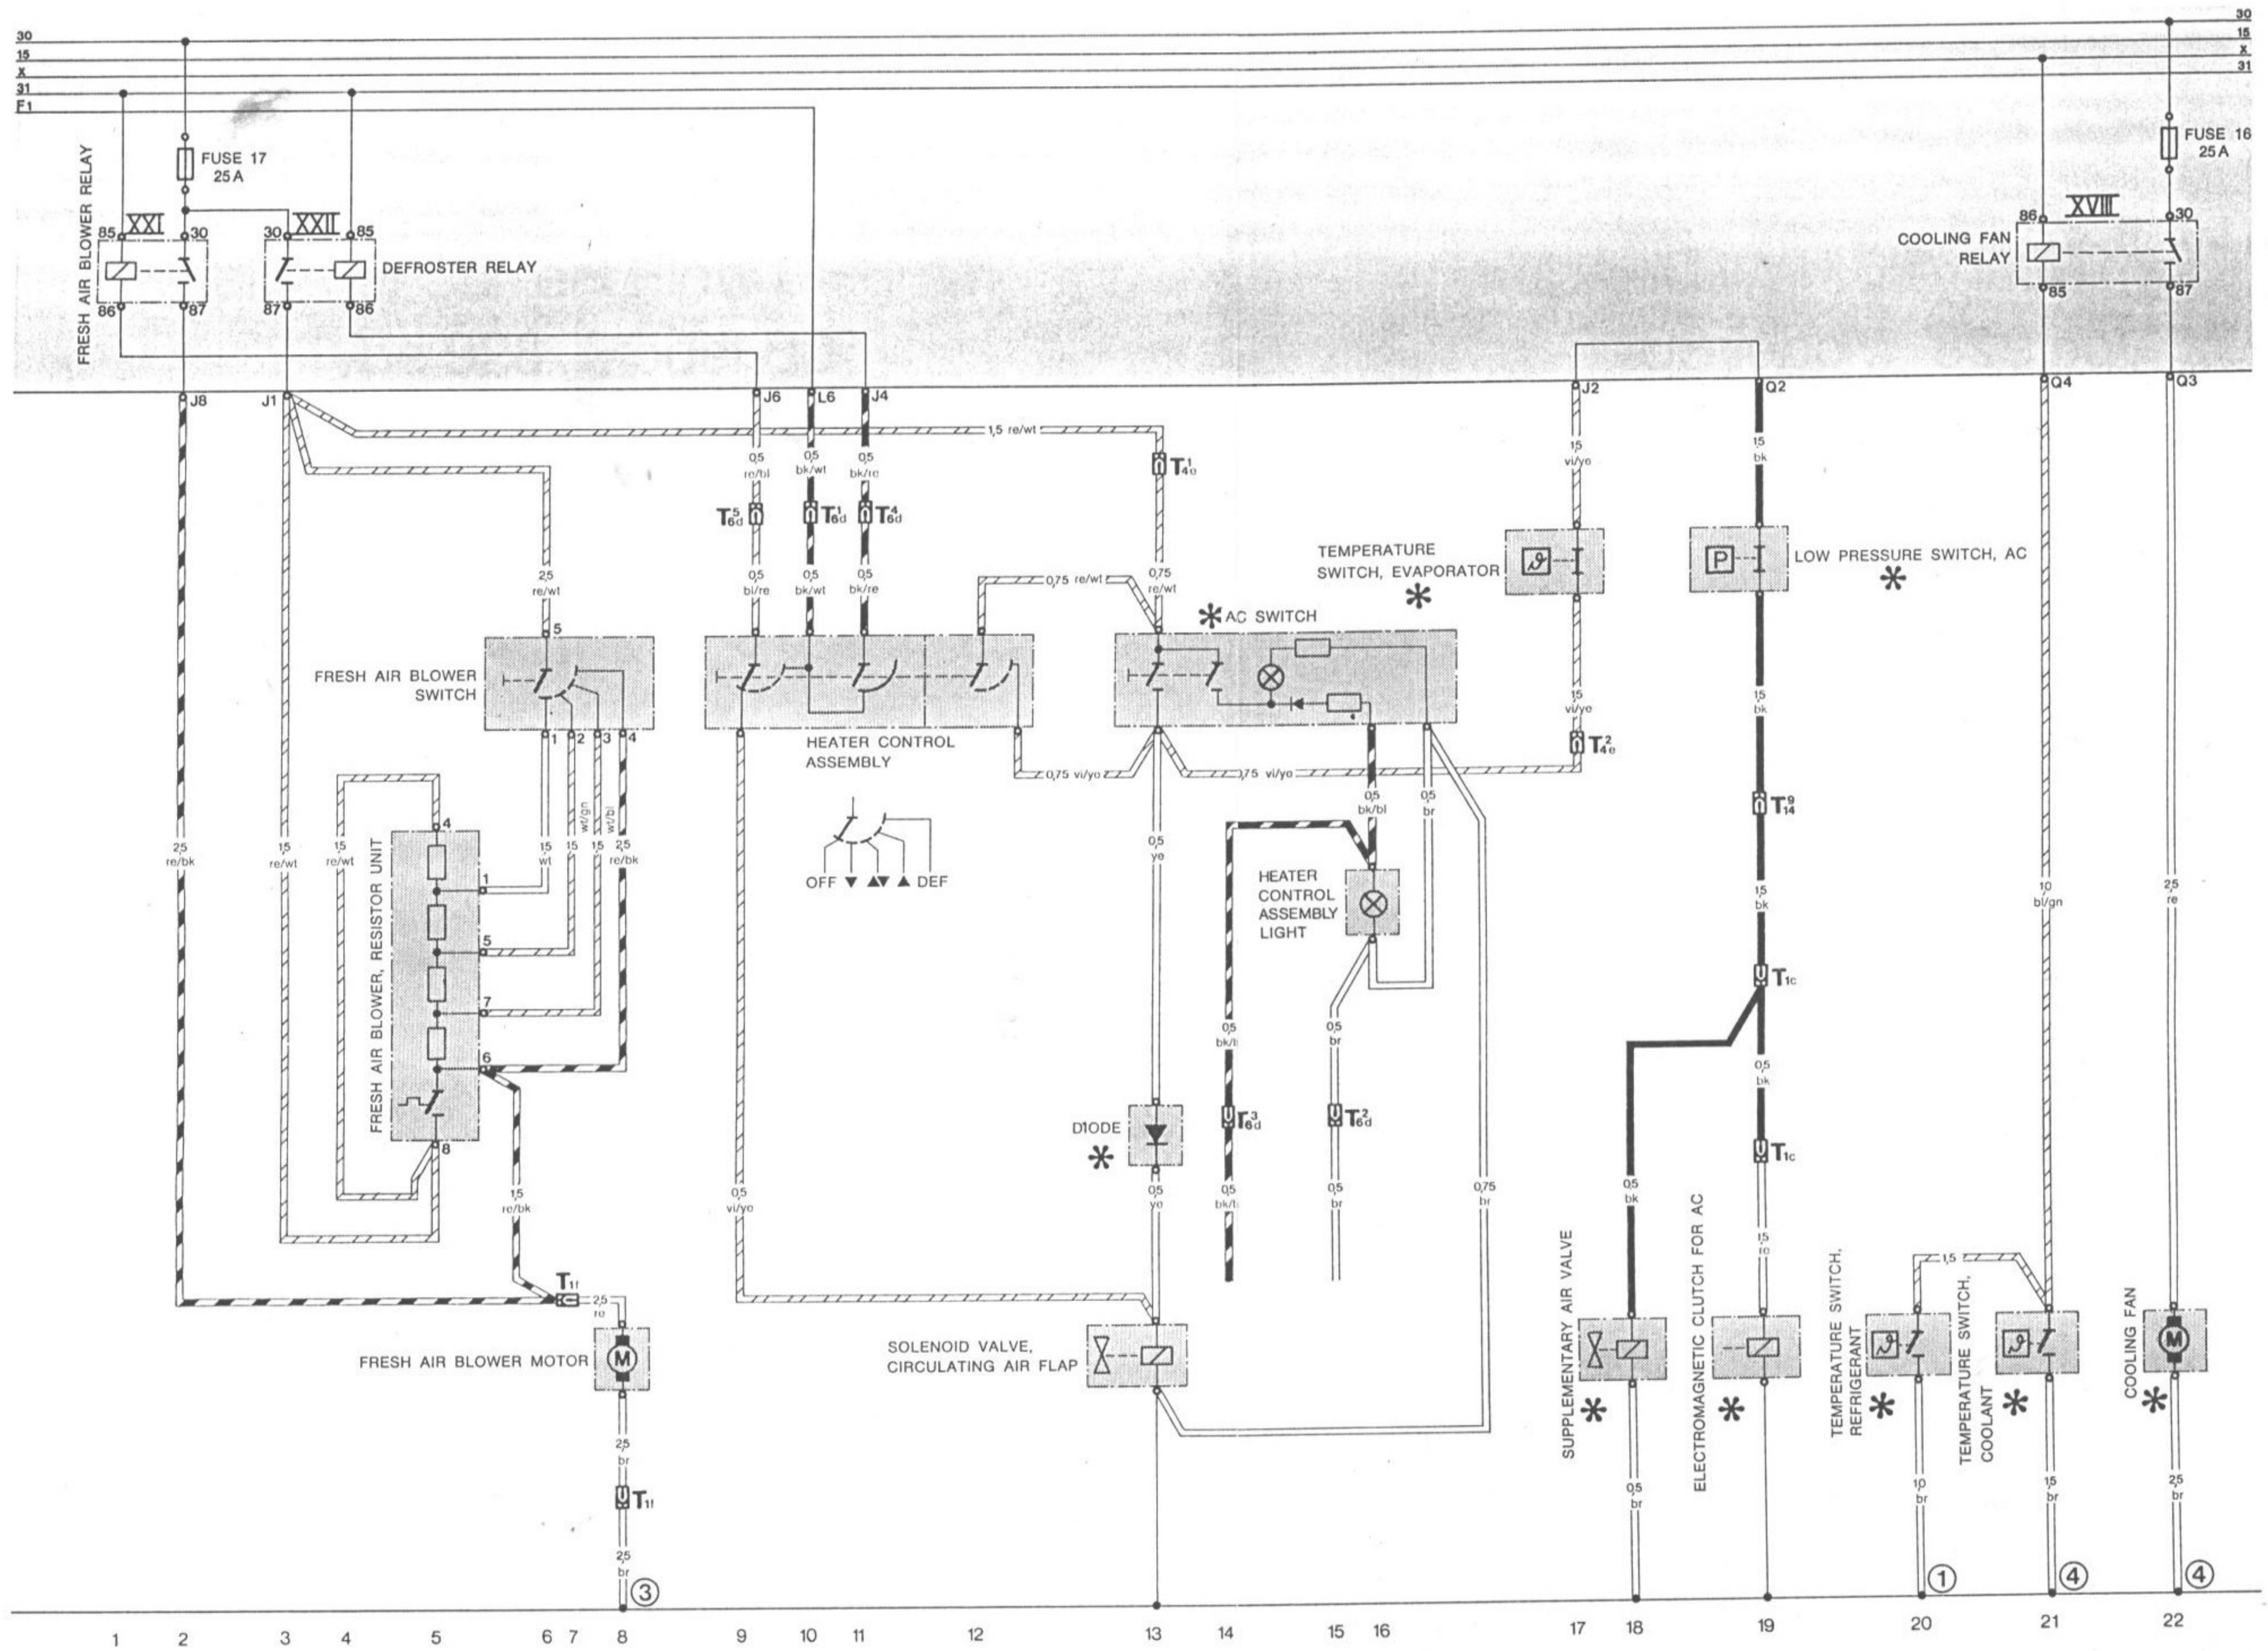


HEATING/VENTILATION/AC

* OPTIONAL

Additional Current Flow Diagram Type 928, 928 S Model 80

Power seat

Wiring

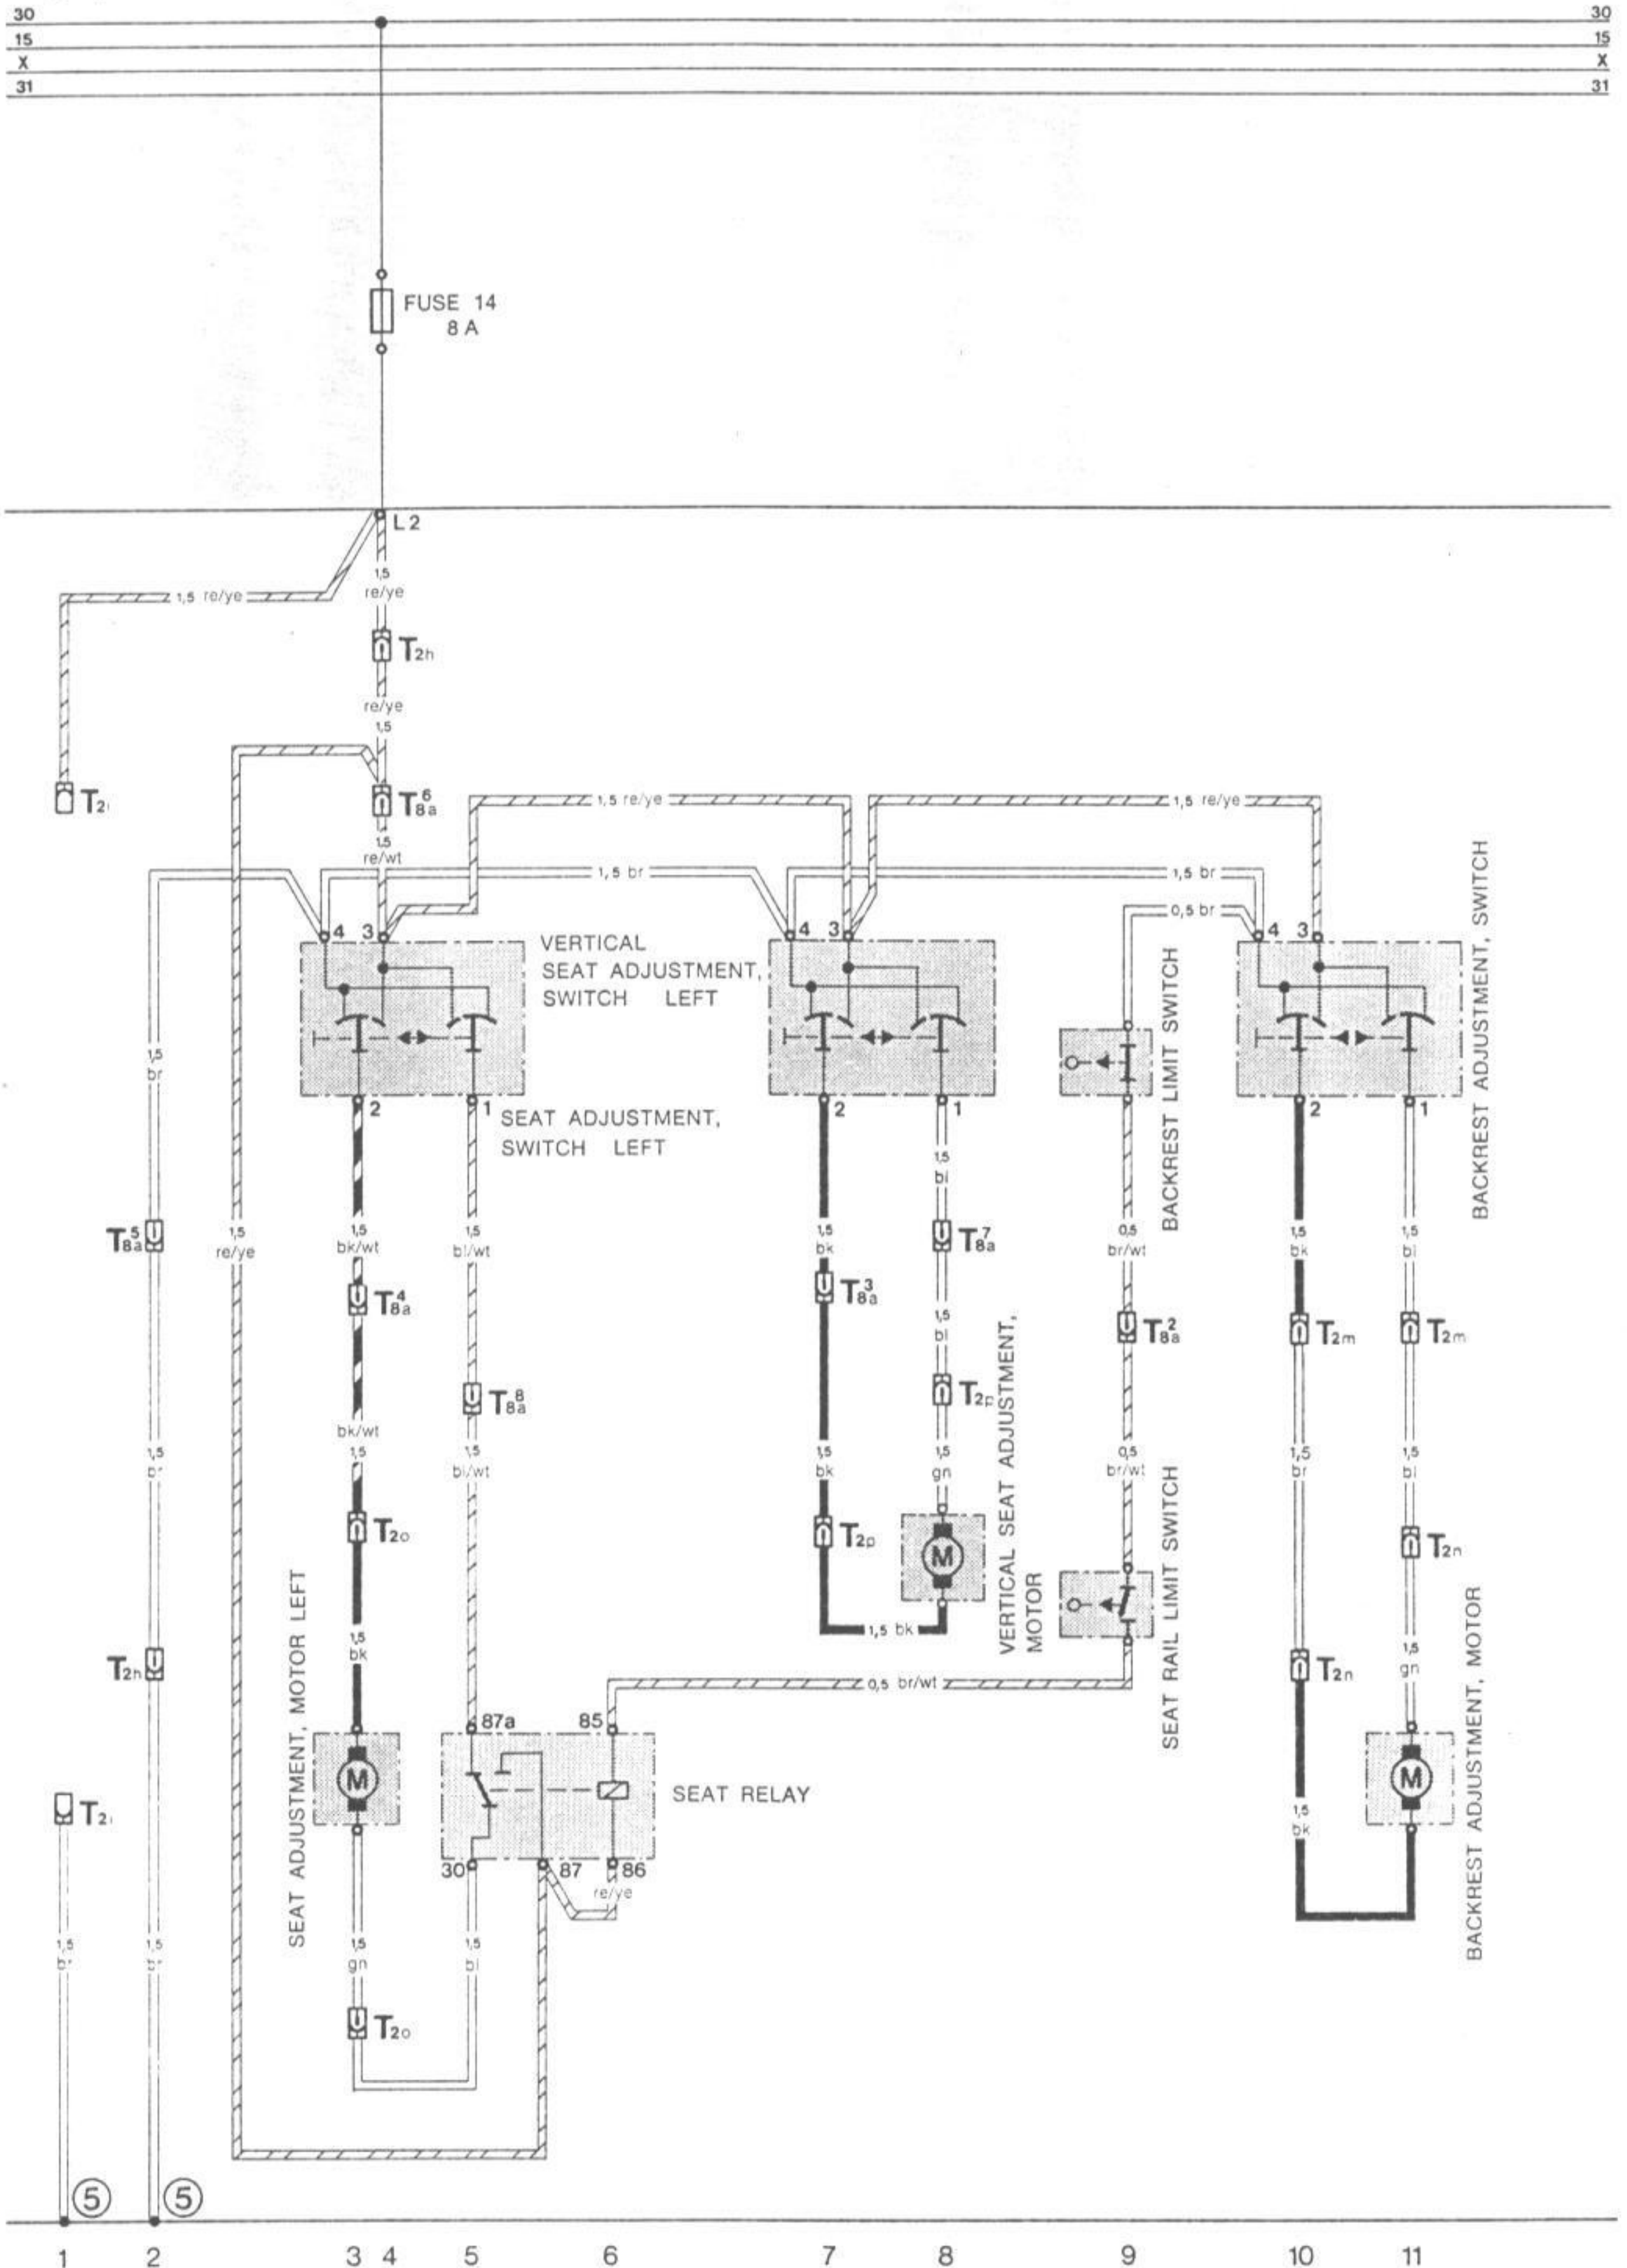


POWER SEAT

Additional Current Flow Diagram Type 928, 928 S Model 80

97

Wiring

Sliding Roof

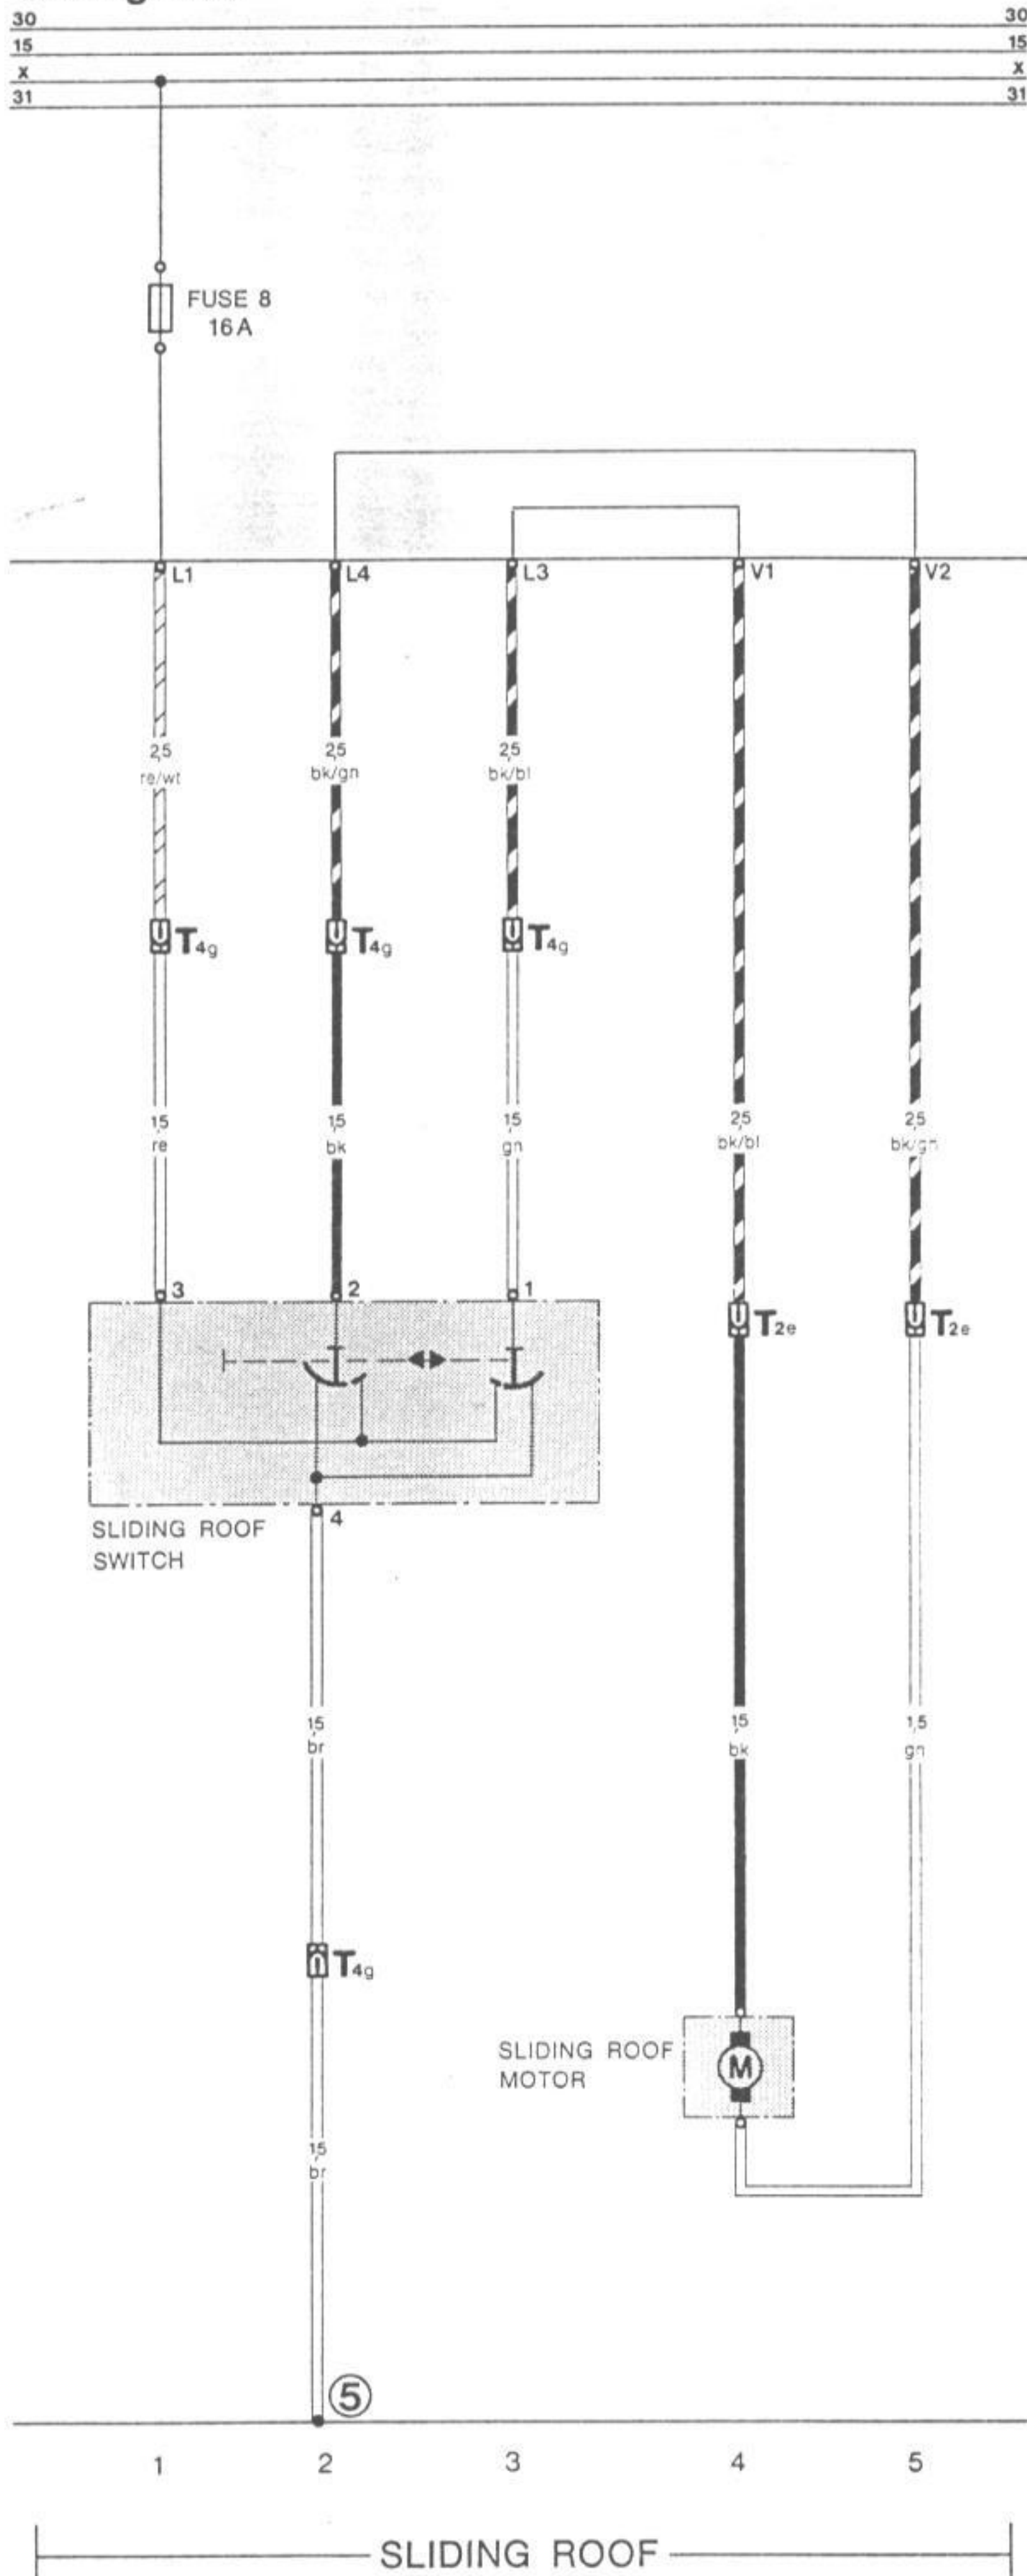


Additional Current Flow Diagram

Type 928 Model 80

ADAPTER INSTEAD LAMP CONTROL UNIT


Wiring

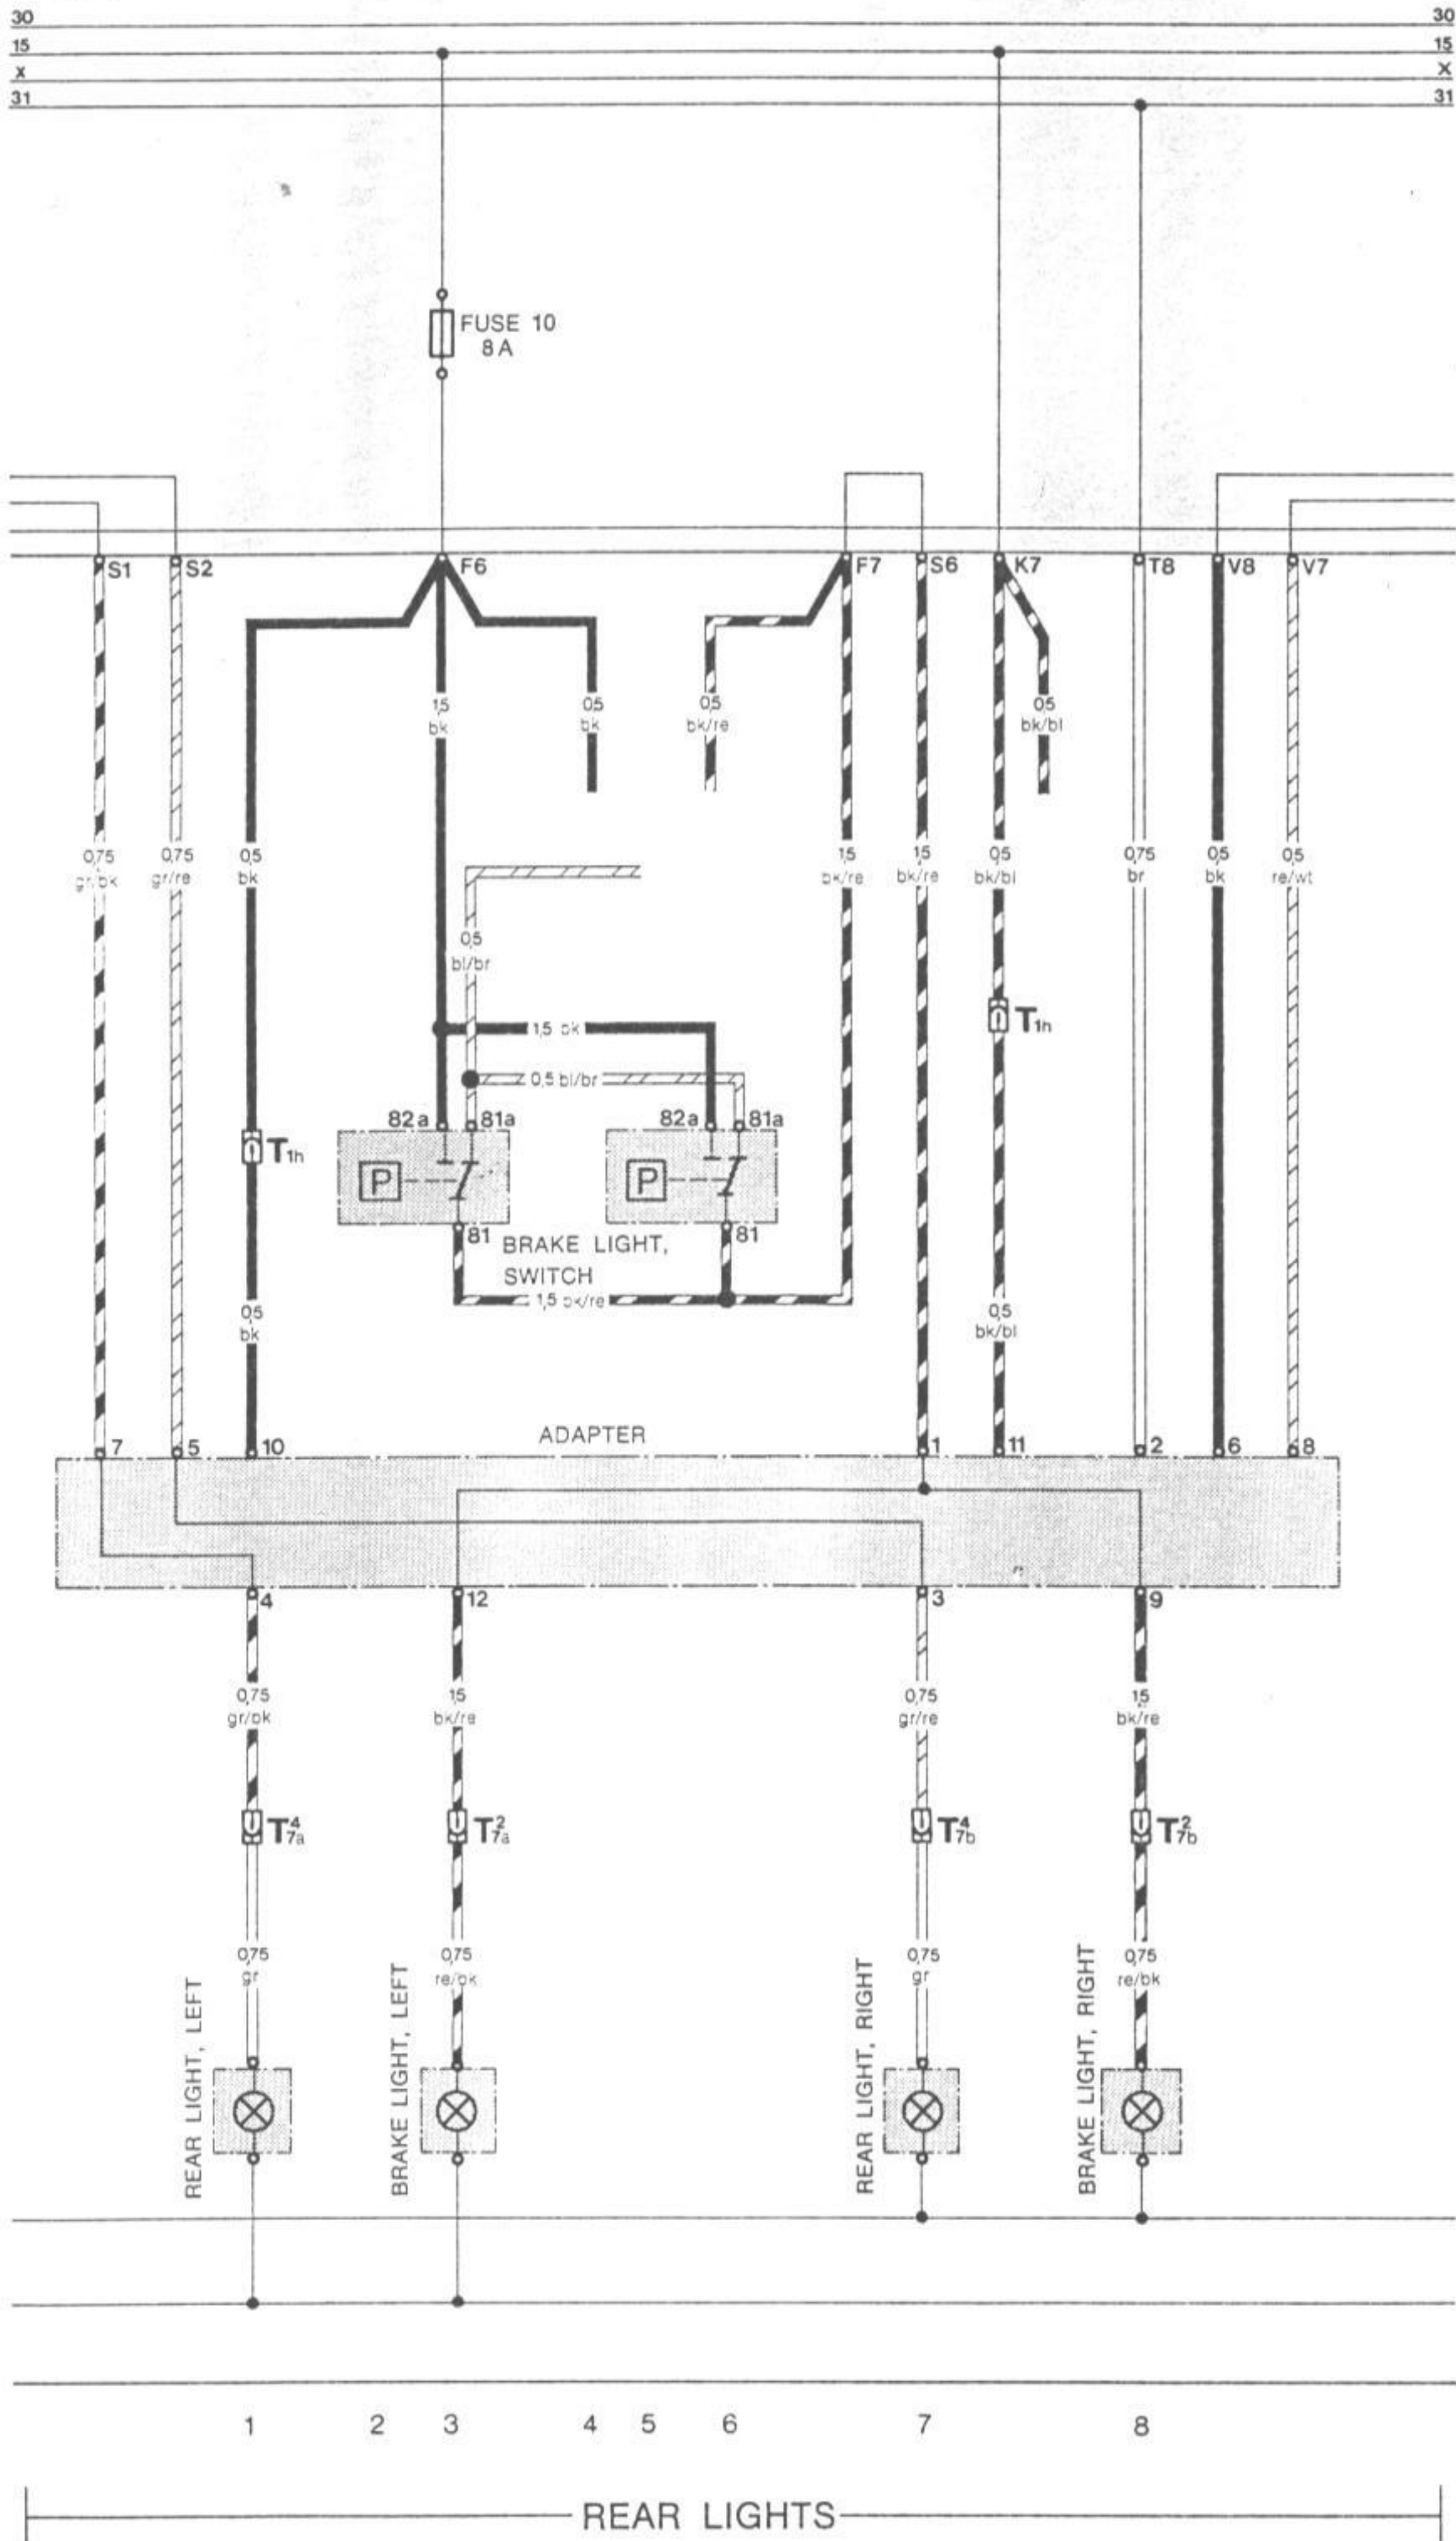

Additional Current Flow Diagram

Type 928 Model 80 RADIO WITH 2 LOUDSPEAKERS

30	30
15	15
X	X
31	31

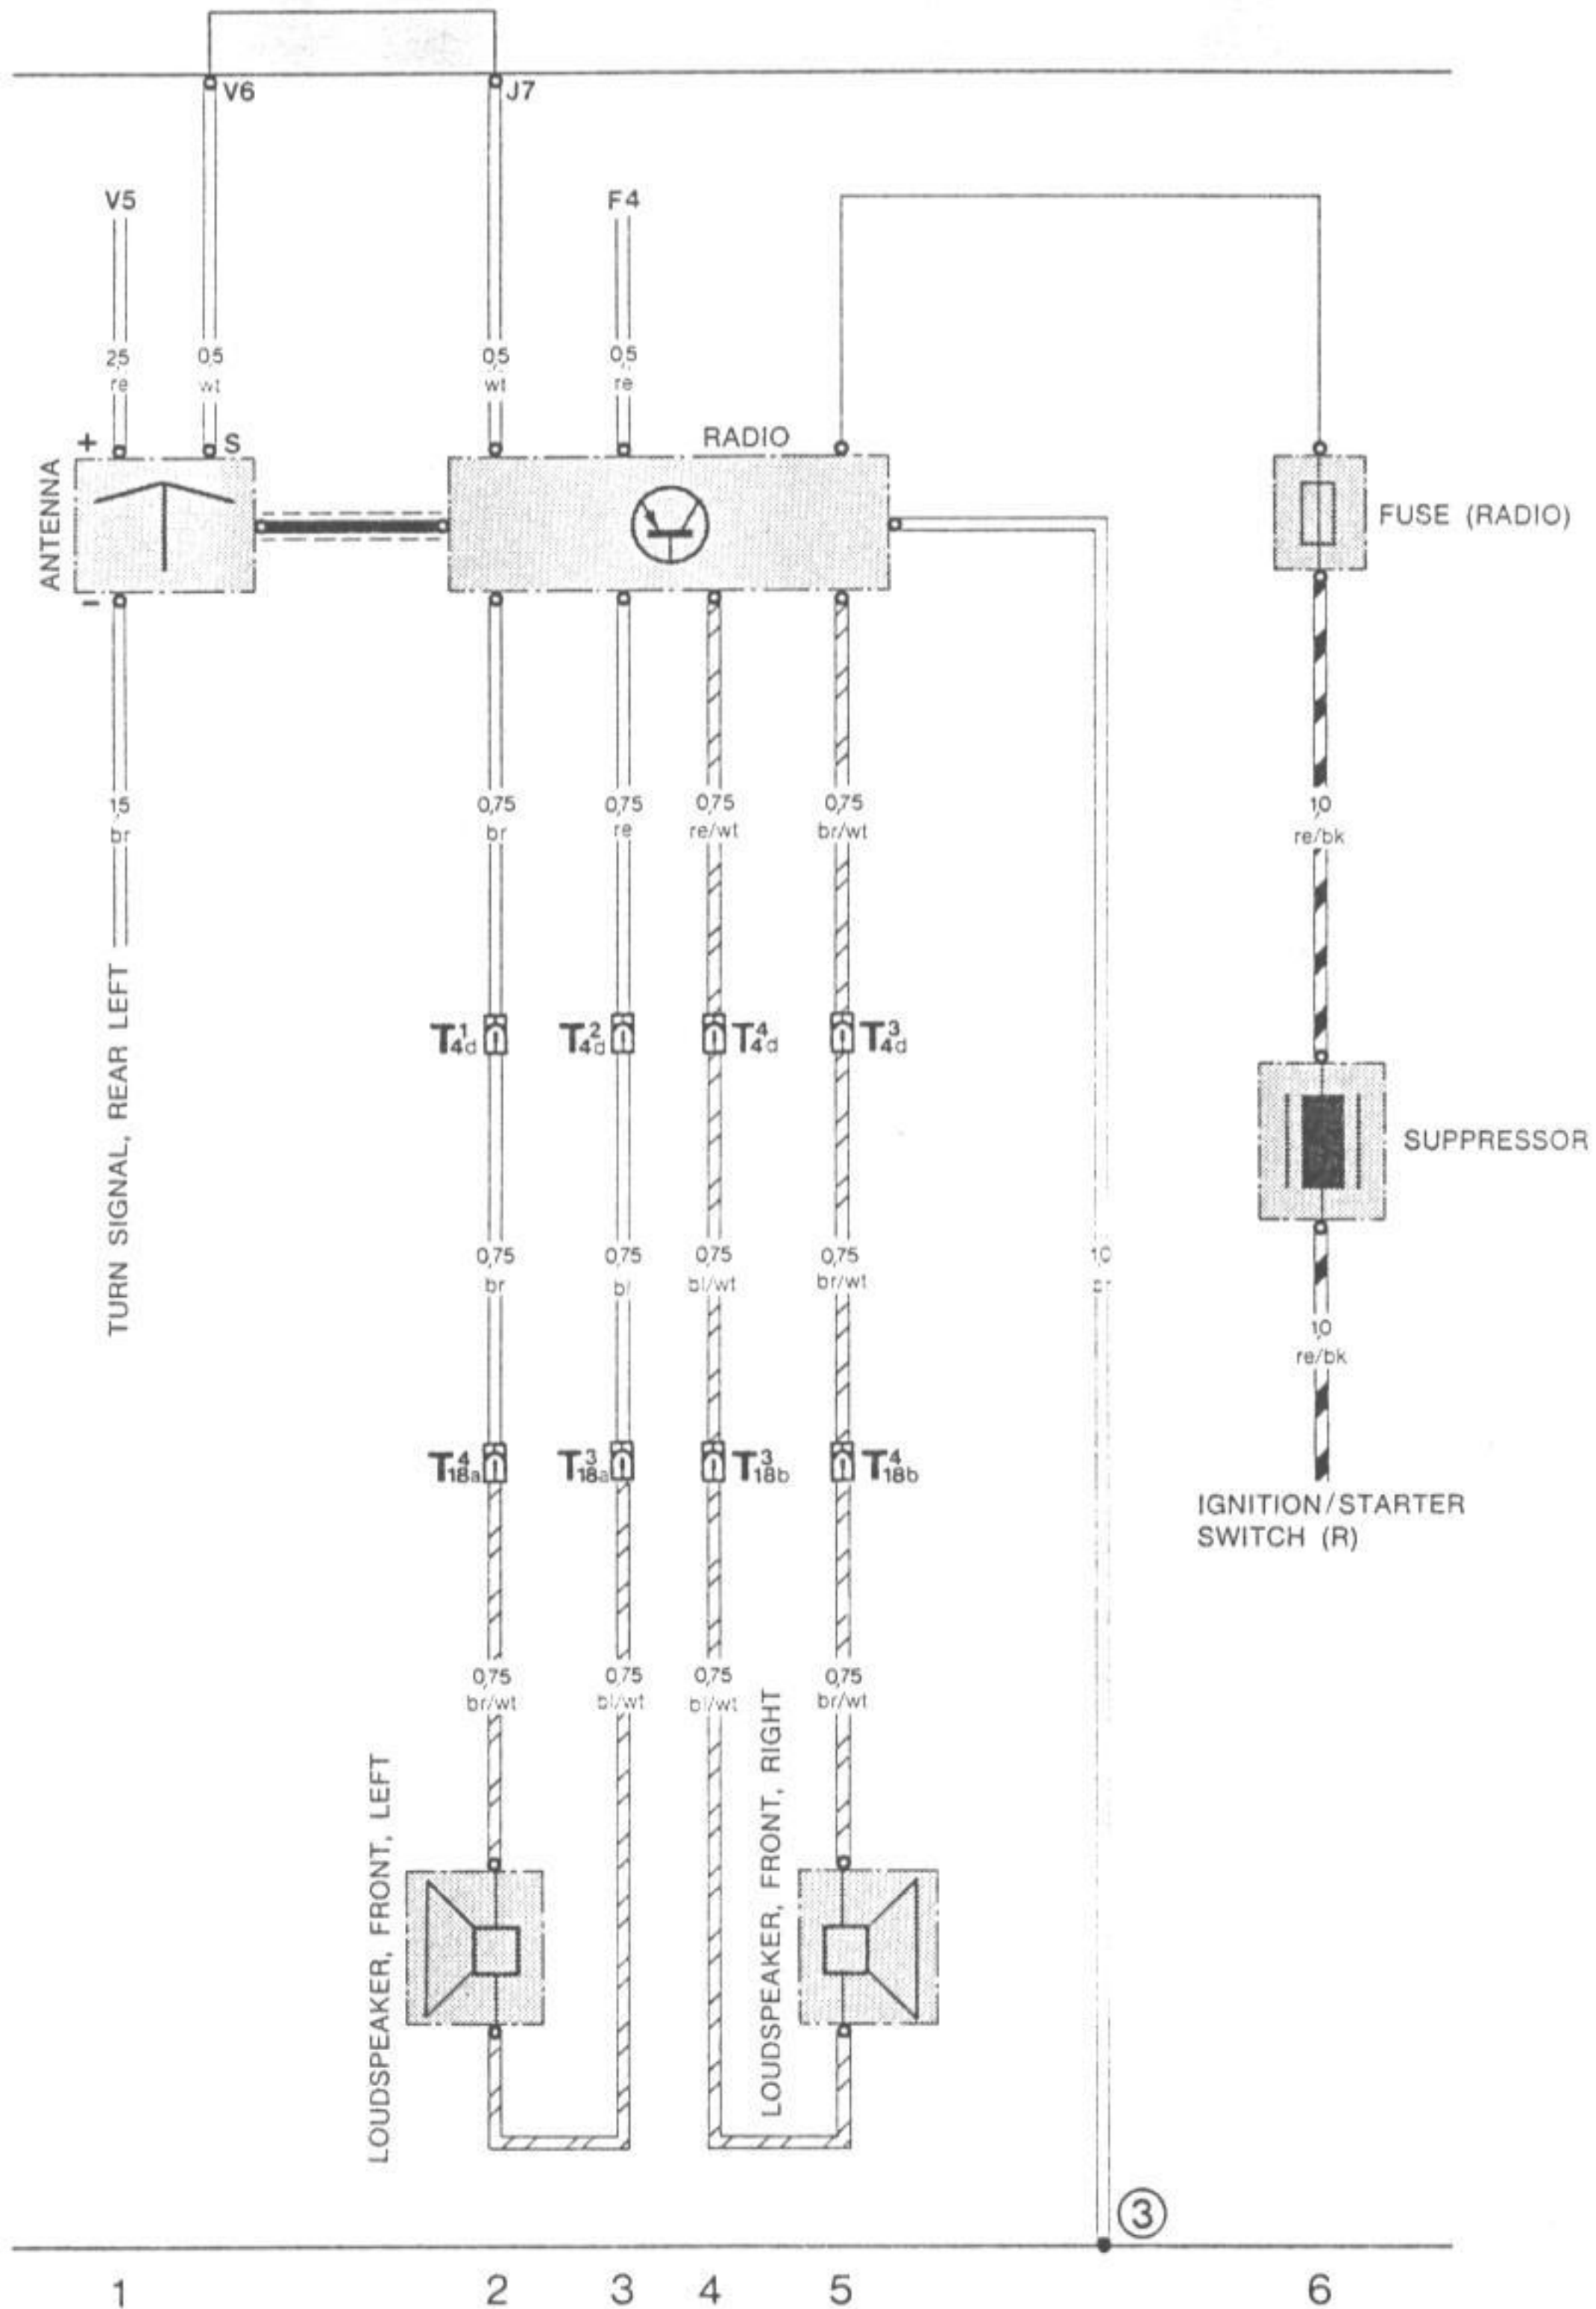

Additional Current Flow Diagram


97

Type 928, 928 S Model 80

RADIO WITH
4 LOUDSPEAKERS

Wiring

30	30
15	15
X	X
31	31

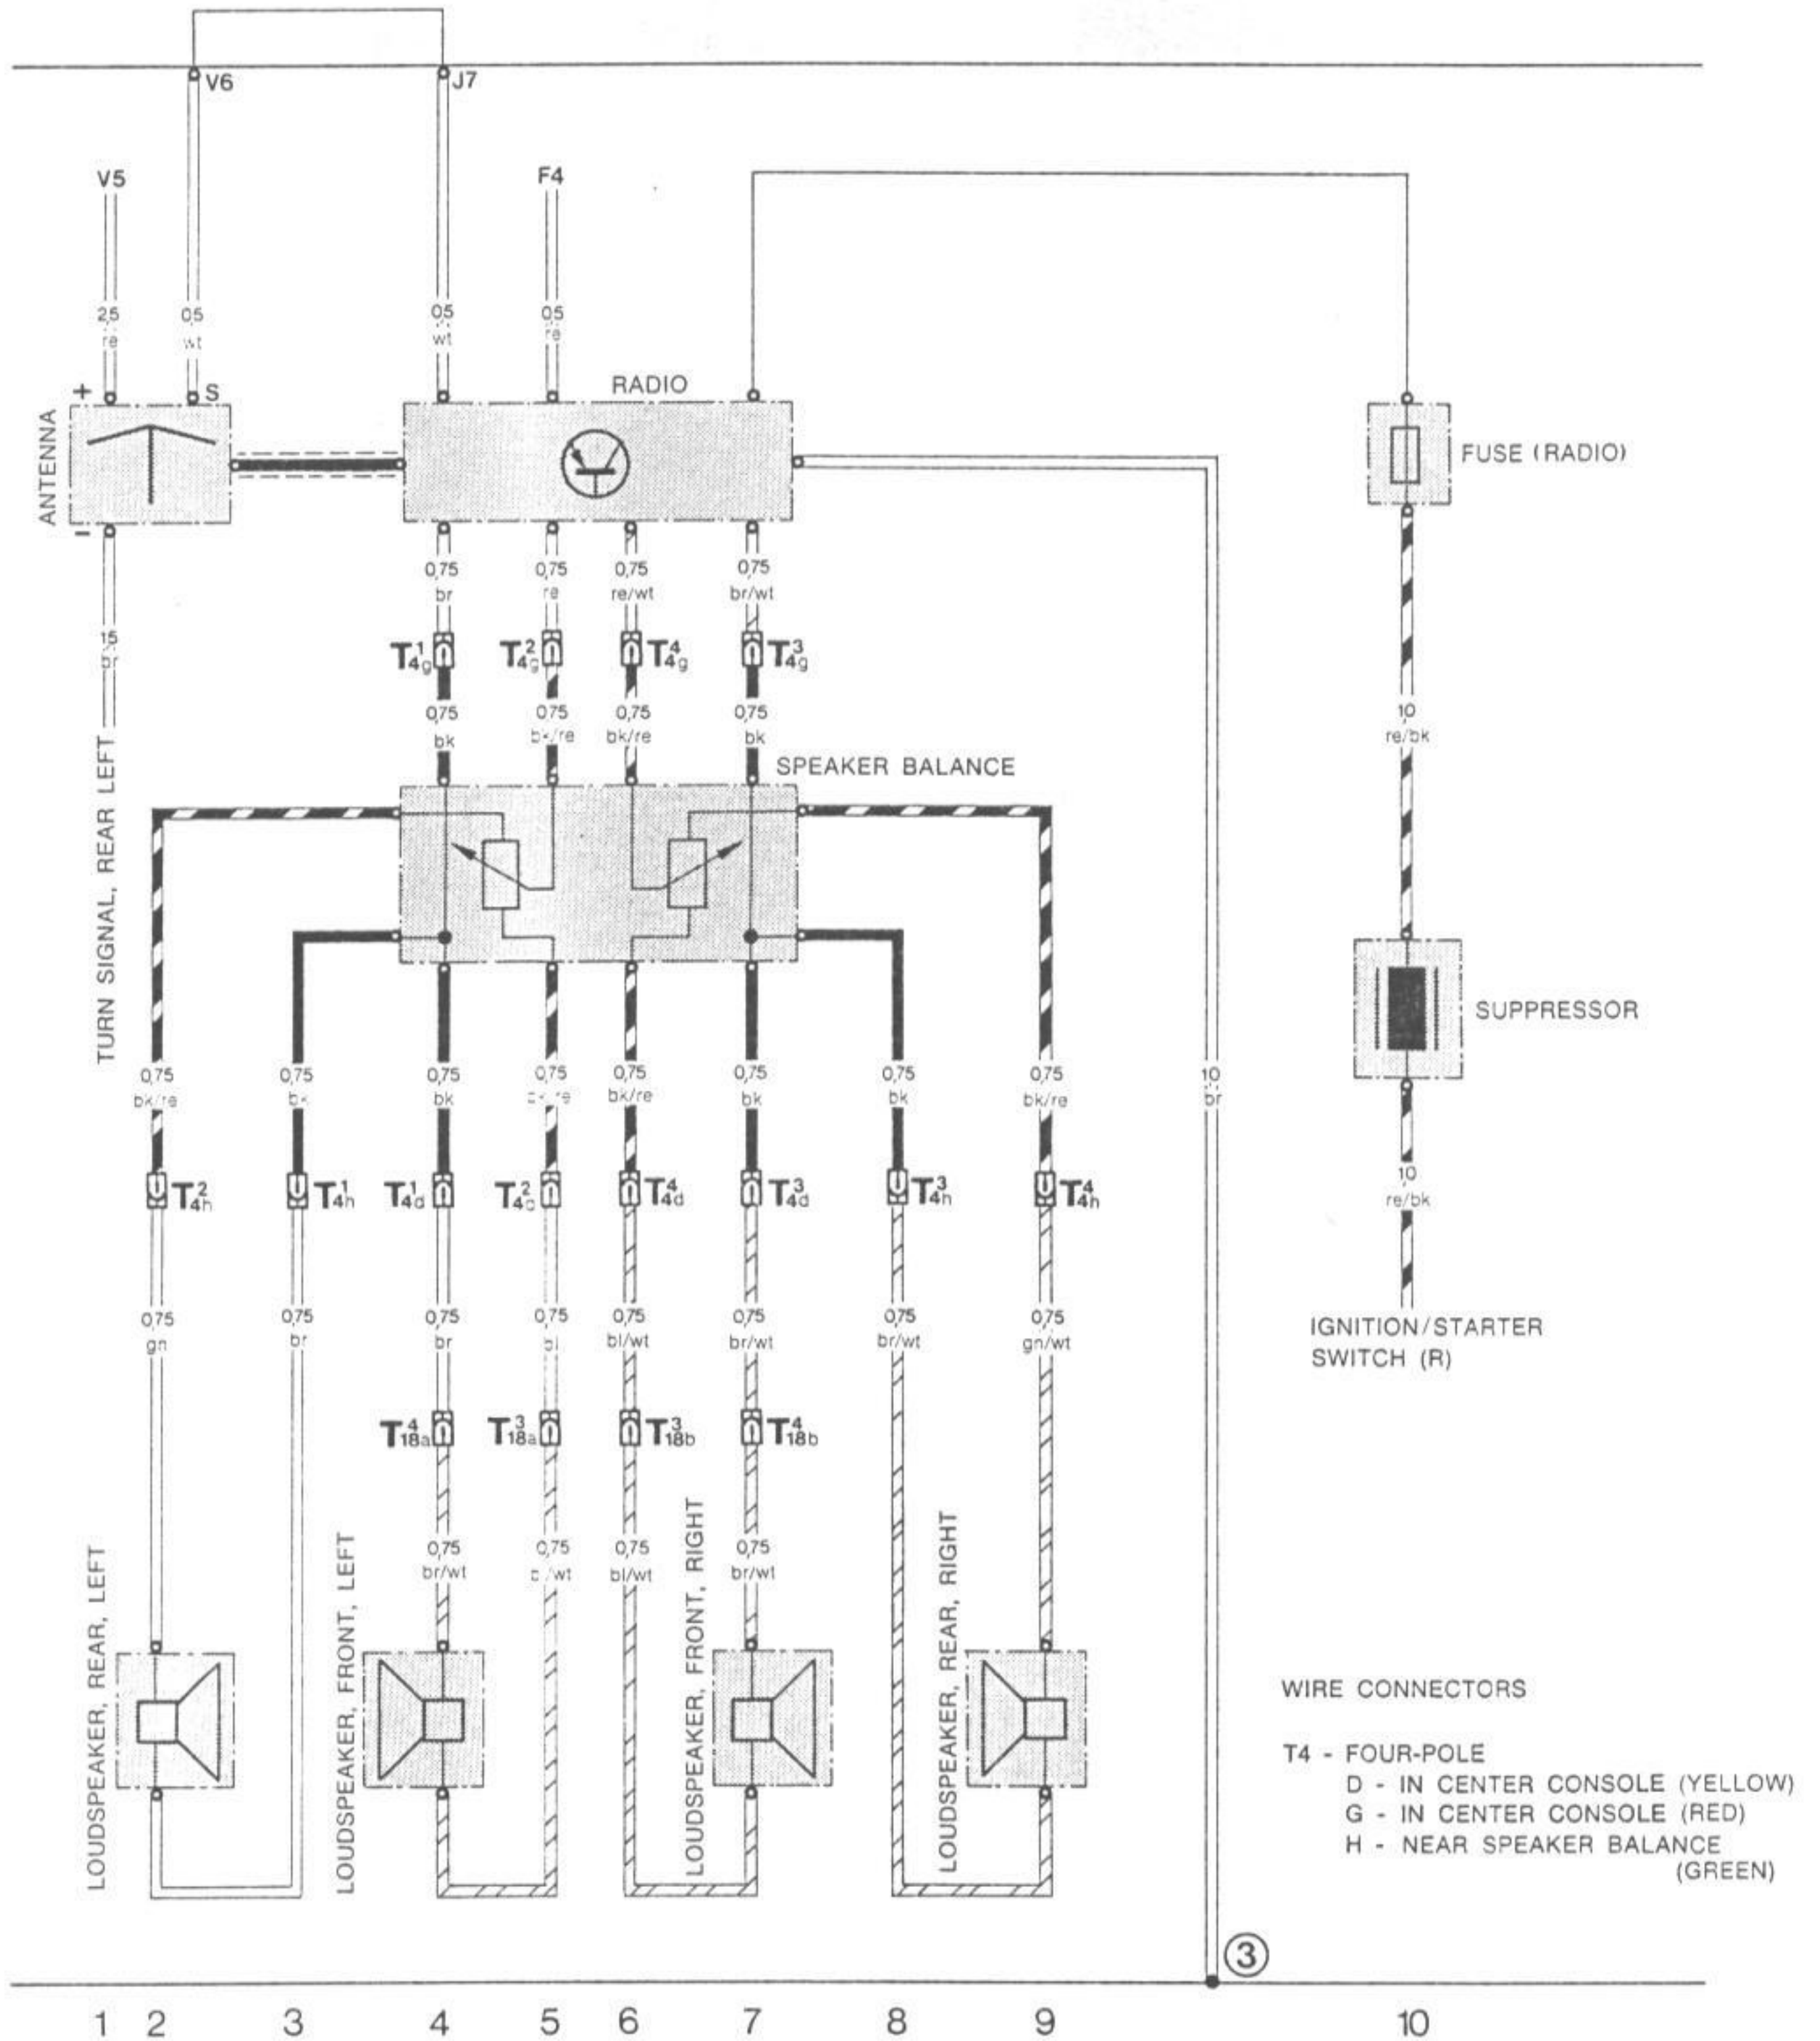

Additional Current Flow Diagram Type 928, 928 S Model 80

RADIO WITH 4 LOUDSPEAKERS AND BOOSTER

Additional Current Flow Diagram Type 928, 928 S Model 80

RADIO WITH 4 LOUDSPEAKERS AND BOOSTER

30	30
15	X
X	X
31	31

