REPLACING FUEL FILTER - from 1980 Models

REMOVING AND INSTALLING FUEL PUMP

1. Disconnect ground wire at battery,

Removing

2. Take cover off of fuel tank at bottom,

1. Disconnect ground wire at battery.

Disconnect fuel lines, not forgetting to counter-hold, Catch escaping fuel.

2. Take cover off of fuel tank at bottom,

4. Lossen clamp and take off fuel filter.



Pinch intake line with YW 64T clamp and detach hose. Disconnect electric wirm, unscrew bollow bolt, loosen feel pump clamp and take off fuel pump. Catch escaping fuel.



Install new filter. Watch direction of flow (arrow faces fuel distributor).

Installing

Use a new seal on the hollow bolt,

6, Check for leaks,

20 - 2 Replacing Fuel Filter - from 1980 Models Removing and Installing Fuel Pump

Printed in Germany