


ADJUSTING STARTER LOCKING AND BACKUP LIGHT SWITCH

1. Insert locating pin made of 4 mm dia. welding wire (or 4 mm dia. drill) through lug into locating bore in switch housing.

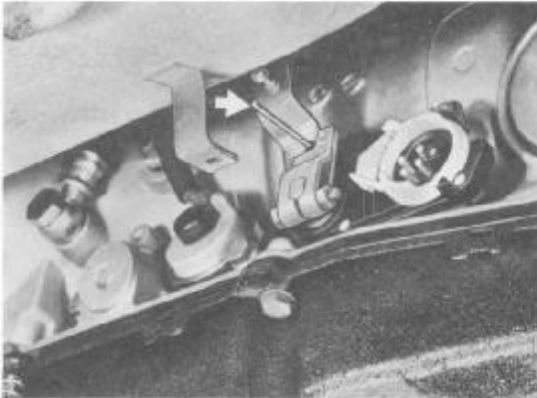

2. Tighten switch mounting screws with 10 Nm (7 ftlb) and pull out locating pin.
3. Press on plug and turn white plastic ring down.

