

CHECKING ADJUSTMENT OF SELECTOR LEVER CABLE AND STARTER LOCKING/BACKUP LIGHT SWITCH

Move selector lever to position "N". Run engine at fast idle speed. Pull up parking brake lever and press down on brake pedal for following tests.

6. Starting engine should only be possible in "P" or "N".

7. Backup lights must be on in position "R".

1. Move selector lever to position "R". Engine speed must drop as gear engages.

2. Move selector lever to position "P". Engine speed should increase as reverse gear disengages.

3. Repeat test in point 1.

4. Move selector lever to position "N". Engine speed should increase as reverse gear disengages.

5. Move selector lever to position "D". Engine speed should drop as gear engages.