

## RED

Remove the bolts and nylon washer from the lift guides on each side.

Remove the (4) bolts from the lift gear boxes (towers)

## YELLOW

Remove the memory control box from its mount (2) screws on each side

