


6 If required, unscrew side cover from shift valve housing, check piston and slide valve for ease of movement and chips.

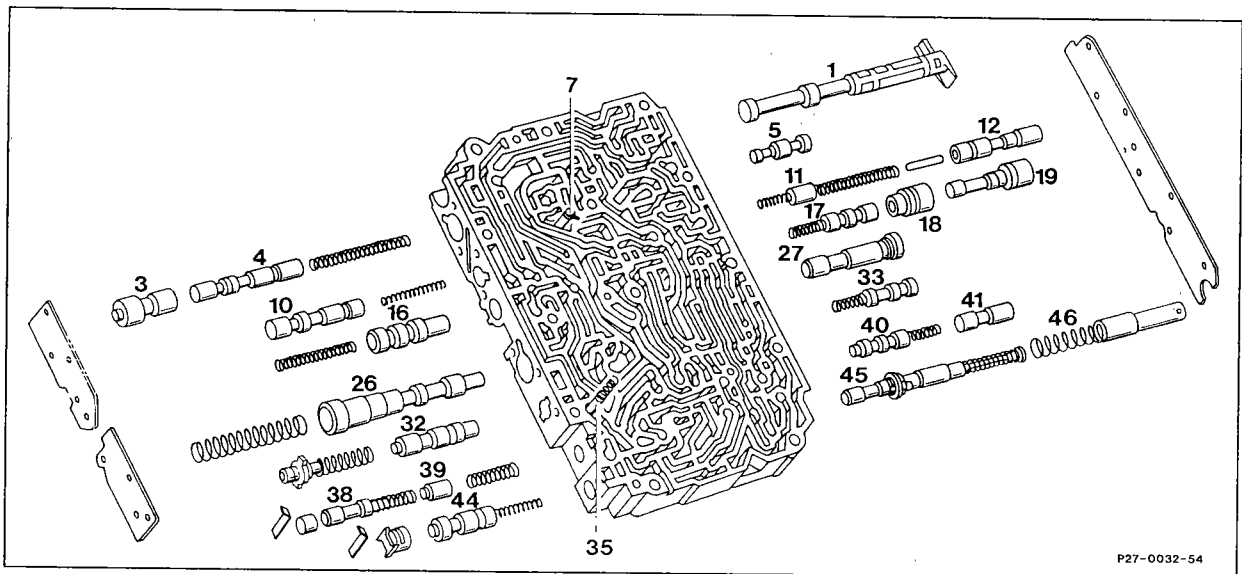

P27-0032-54

- | | | | |
|----|--------------------------------------|----|--|
| 1 | Selector valve | 26 | Control valve - operating pressure |
| 3 | Piston of command slide valve 2-3 | 27 | Plug of shift valve - kickdown |
| 4 | Command slide valve 2-3 | 32 | Control valve - full throttle |
| 5 | Control valve - converter adaptation | 33 | Shift valve B2 |
| 7 | Blocking valve K1 | 35 | Lubricating pressure shift pin |
| 10 | Shift valve B1 | 38 | Control valve B1 |
| 11 | Piston of command slide valve 3-4 | 39 | Piston of control valve B1 |
| 12 | Command slide valve 3-4 | 40 | Shift valve - kickdown |
| 16 | Control valve - basic pressure | 41 | Shift valve - governor pressure |
| 17 | Command slide valve 1-2 | 44 | Booster slide valve - governor pressure |
| 18 | Sleeve of command slide valve 1-2 | 45 | Regulator valve - control pressure |
| 19 | Piston of command slide valve 1-2 | 46 | Piston of regulator valve - control pressure |