


## CHECKING RELEASE TRAVEL

1. Remove cap (see page 30 - 2).

2. Measure distance "B" with a suitable measuring tool.

- 1 Clutch slave cylinder
- 2 Push rod
- 3 Release lever
- B Release travel  
Nominal value =  
15 to 18 mm

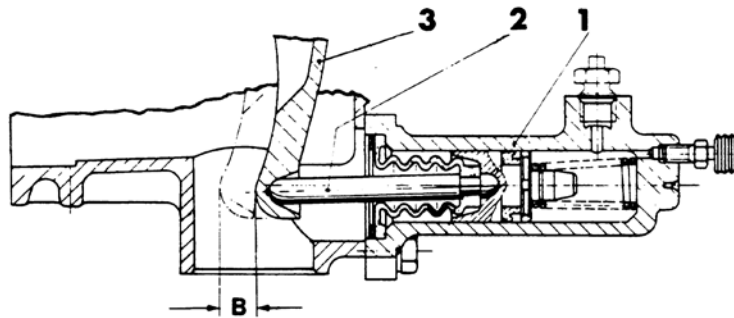

If distance is less than 15 mm there can be no guarantee that clutch disengages fully.

### Possible Causes:

- air in hydraulic system
- clutch master and/or slave cylinders defective (cups)
- no or insufficient clutch play
- limited clutch pedal travel (e. g. bunched-up floor mats)