


Checking the delivery rate of the fuel pump

Precondition:

Fuel filter and power supply in perfect condition.


1. Remove the hot-air blower on the left-hand side to the rear of the engine compartment.
2. Undo the fuel return line from the distributor while bracing. Catch escaping fuel.

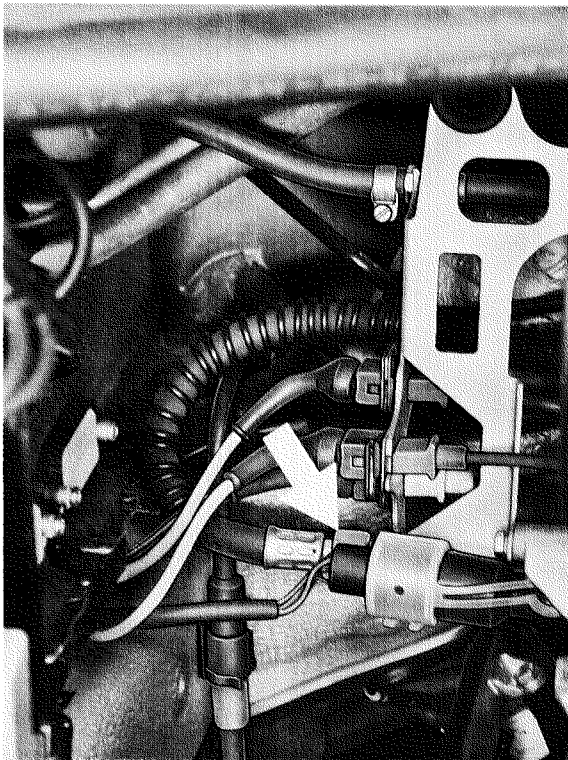

88/500

3. Hold a test hose comprising:
 - 1.5 m low-pressure hose and a 90° angled 10 mm hose stem with M 16 x 1.5 thread in a measuring receptacle.

4. Disconnect the DEE relay from the central electric system and bridge terminals 30 and 87 b with a piece of cable.

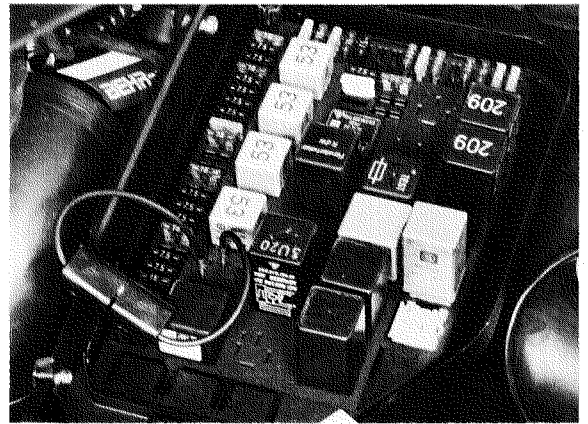

88/439

Allow fuel to run into the measuring receptacle for 30 seconds. The delivered quantity must be at least 850 cm³/30s.