
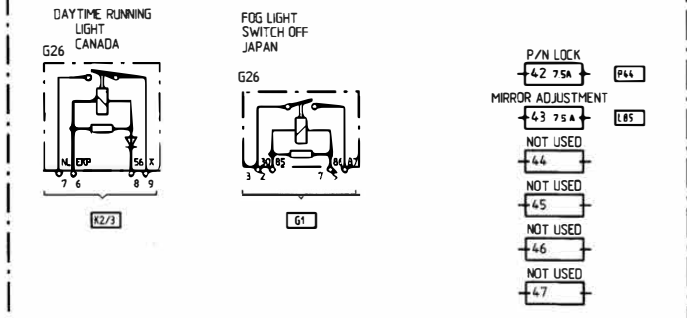
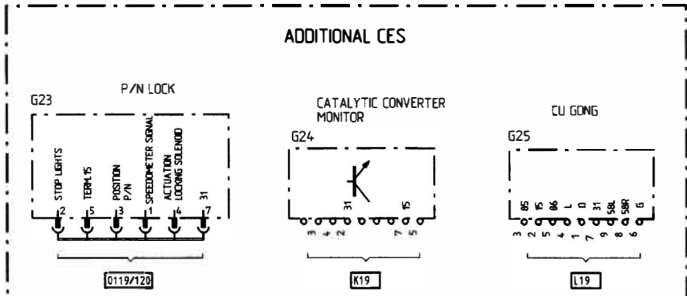
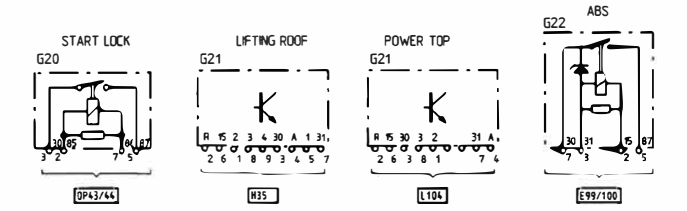
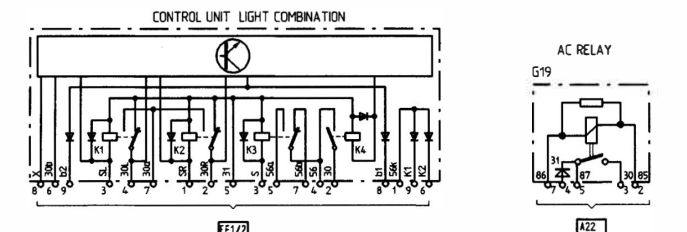



Printed in Germany - I, 1991 97-11 WT = WHITE YE = YELLOW RE = RED VI = VIOLET BL = BLUE GN = GREEN GR = GREY BR = BROWN BK = BLACK WIRING DIAGRAM 97-11

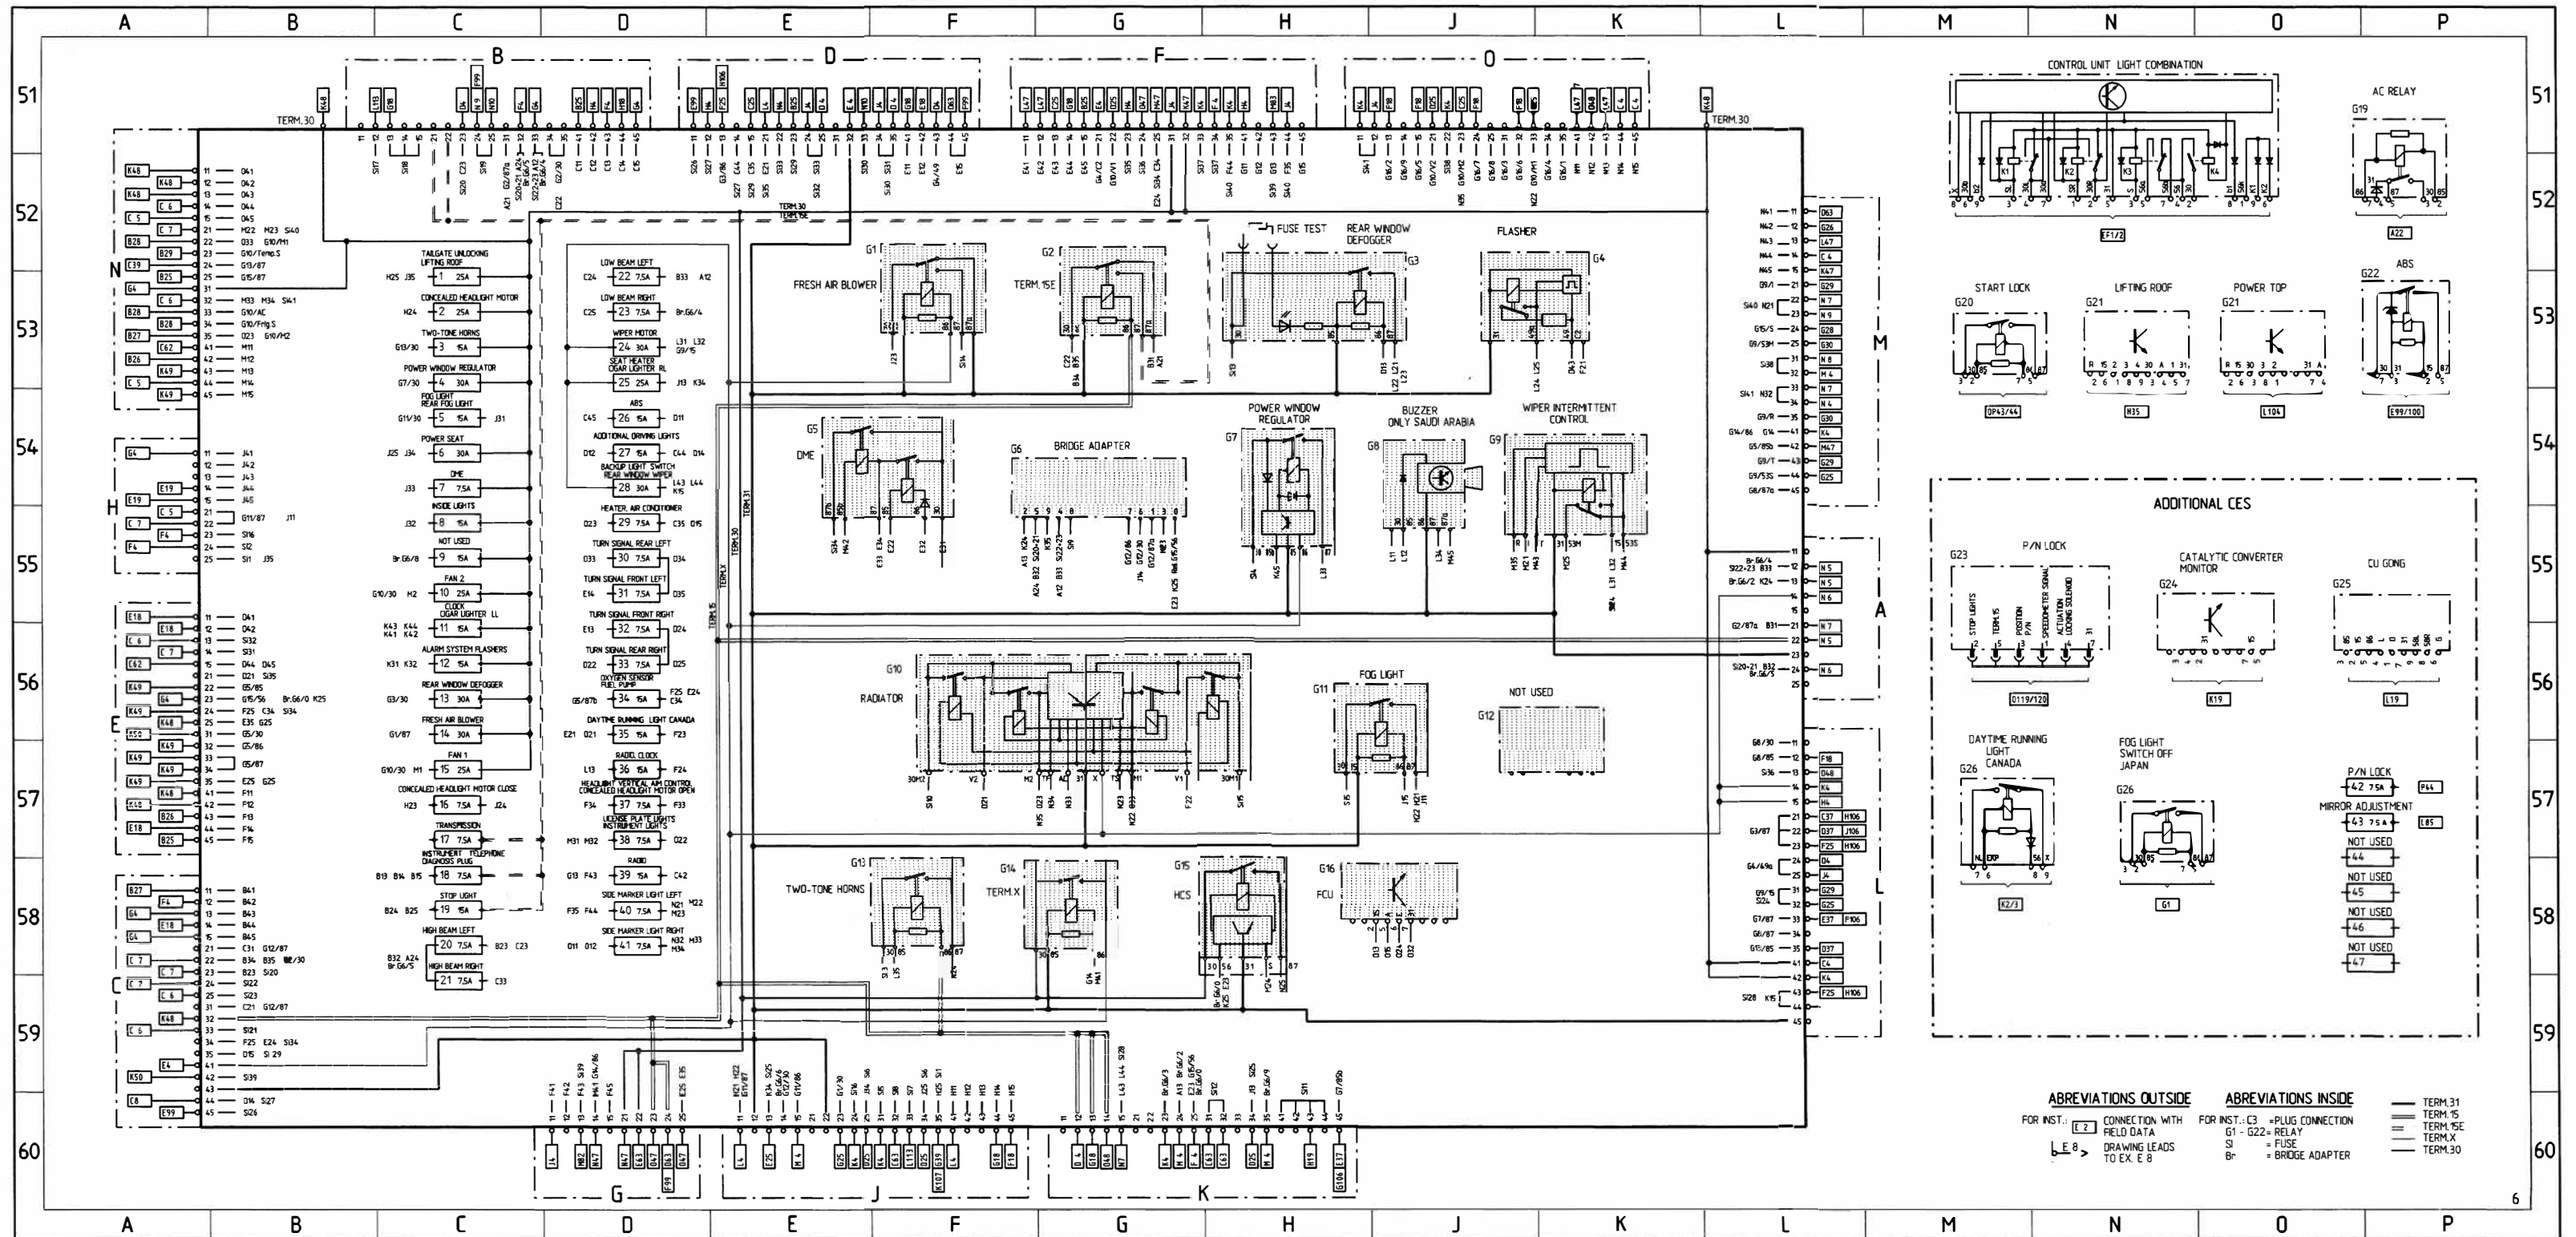


**ABBREVIATIONS OUTSIDE**  
 FOR INST.: E2 CONNECTION WITH FIELD DATA  
 E8 DRAWING LEADS TO EX. E 8

**ABBREVIATIONS INSIDE**  
 FOR INST.: C3 +PLUS CONNECTION  
 G1 - G22 = RELAY  
 SI = FUSE  
 Br = BRIDGE ADAPTER

— TERM.31  
 — TERM.15E  
 — TERM.X  
 — TERM.30

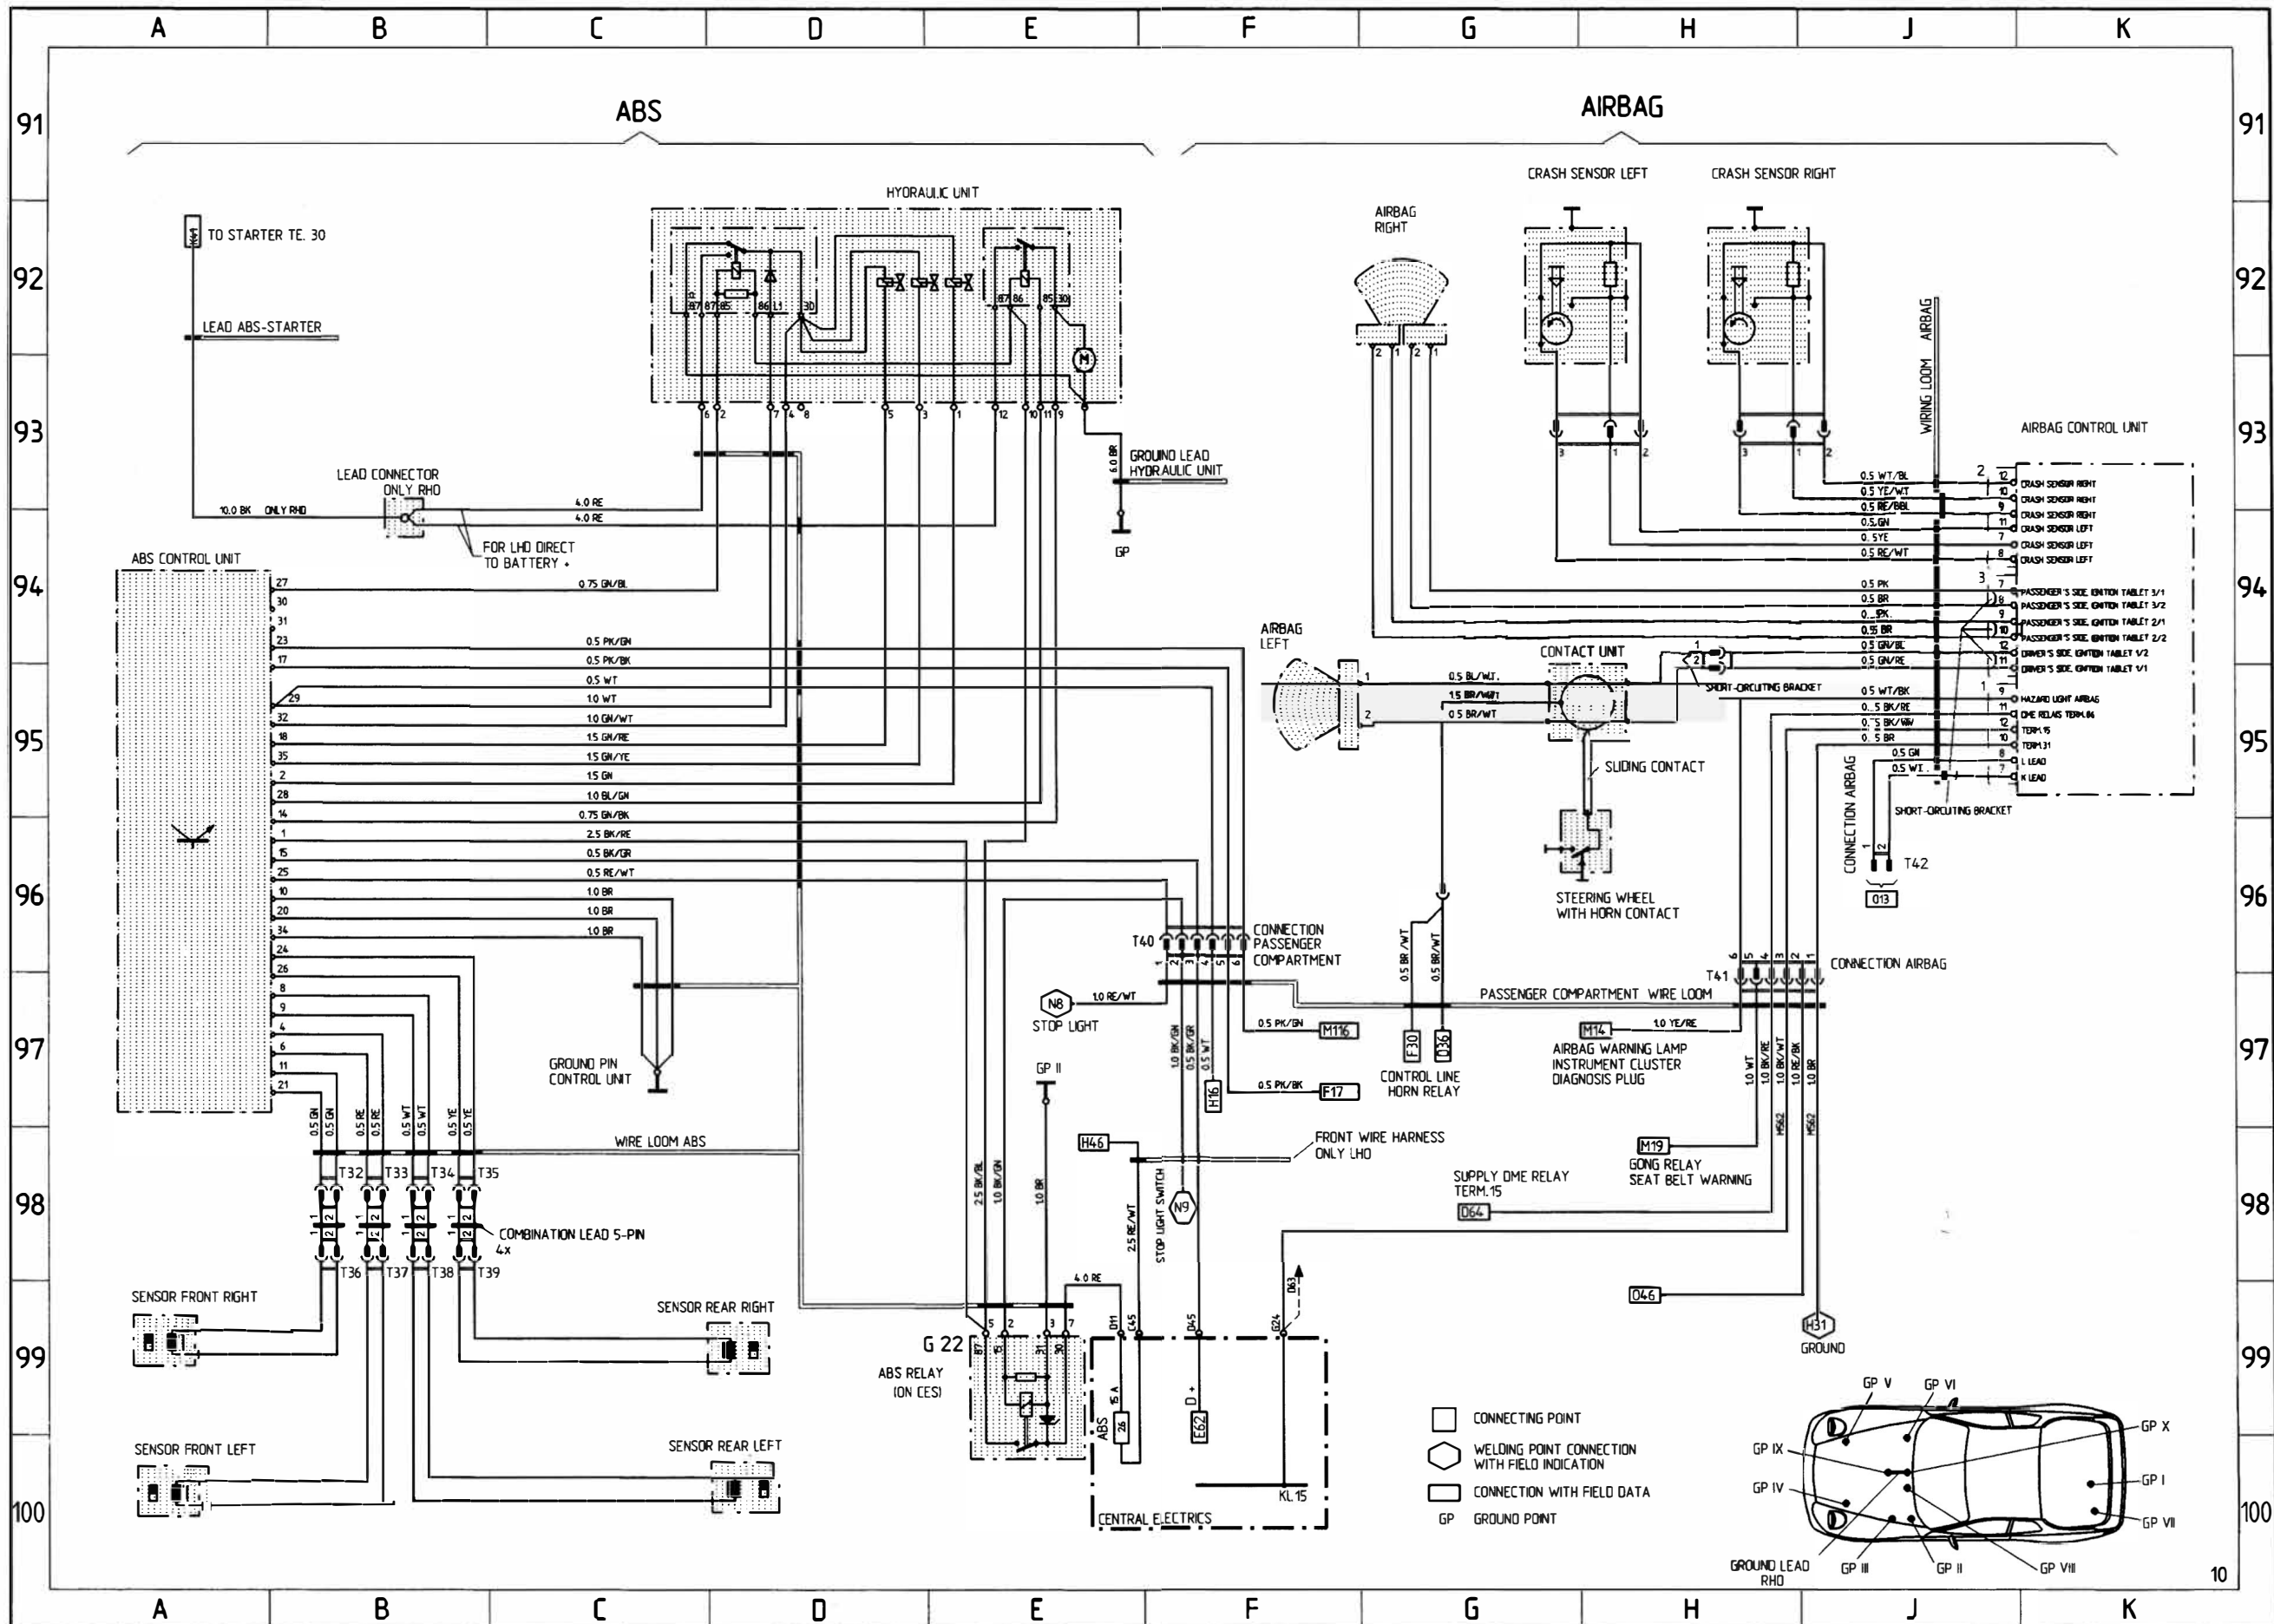

| A  |  | B                   |         | C                                  |  | D                       |  | E  |  | G                   |       | H                                   |  | J                       |  | K |  | L |  | M |  | N |  | O |  | P |  |
|--|--|---------------------|---------|------------------------------------|--|-------------------------|--|--|--|---------------------|-------|-------------------------------------|--|-------------------------|--|---|--|---|--|---|--|---|--|---|--|---|--|
| CONSTRUCTION COMPONENTS                      |  |                     |         |                                    |  |                         |  |  |  |                     |       |                                     |  |                         |  |   |  |   |  |   |  |   |  |   |  |   |  |
| DESIGNATION, FUNCTION                        |  | POSITION IN VEHICLE |         | NOTE                               |  | FIELD IN WIRING DIAGRAM |  | DESIGNATION, FUNCTION                                  |  | POSITION IN VEHICLE |       | NOTE                                |  | FIELD IN WIRING DIAGRAM |  |   |  |   |  |   |  |   |  |   |  |   |  |
|  |  | LHD                 | RHD     |                                    |  |                         |  |  |  | LHD                 | RHD   |                                     |  |                         |  |   |  |   |  |   |  |   |  |   |  |   |  |
| ALARM-PRIMED INDICATOR LAMP LEFT             |  | 12bR                | 12bR    | IN PUSH-BUTTON OF LEFT DOOR        |  | 066                     |  | MAGNET P/N LOCK (USA/CANADA)                           |  | 9bN                 | —     | AT SELECTOR LEVER SUPPORT           |  | K/L119                  |  |   |  |   |  |   |  |   |  |   |  |   |  |
| ALARM-PRIMED INDICATOR LAMP RIGHT            |  | 12bK                | 12bK    | IN PUSH-BUTTON OF RIGHT DOOR       |  | 062                     |  | MICRO SWITCH ROOF CLOSED                               |  | 10bD                | 10bD  | IN ROOF                             |  | K40                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| ALARM HORN                                   |  | 7bL                 | 7bL     | IN WATER BOX                       |  | F69                     |  | MOTOR POWER WINDOW PASSENGER'S SIDE                    |  | 9dK                 | 9dR   | IN PASSENGER'S DOOR                 |  | 031                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| ALARM SWITCH ENGINE HOOD                     |  | 2cD                 | 2cD     | ENGINE HOOD LOCK                   |  | A63                     |  | MOTOR POWER WINDOW DRIVER'S SIDE                       |  | 9dR                 | 9dK   | ON DRIVER'S DOOR                    |  | 035                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| ANTENNA AMPLIFIER                            |  | 7cL                 | 7cL     | IN FOOTWELL, RIGHT SIDE            |  | E82.083                 |  | TAILGATE UNLOCKING MOTOR                               |  | 18cM                | 18cM  | IN LUGGAGE COMPARTMENT AT END-PANEL |  | G/H33                   |  |   |  |   |  |   |  |   |  |   |  |   |  |
| BATTERY                                      |  | 6cL                 | —       | IN WATER BOX                       |  | H42                     |  | MOTOR LIFTING ROOF WITH CONTROL RELAY AND MICRO SWITCH |  | 16bD                | 16bD  | IN LEFT BOHLMANN COMPARTMENT        |  | K36-40                  |  |   |  |   |  |   |  |   |  |   |  |   |  |
| BATTERY                                      |  | —                   | 16cR    | IN LEFT BOHLMANN COMPARTMENT       |  | H42                     |  | MOTOR CONCEALED HEADLIGHT LEFT                         |  | 2dP                 | 2dP   | AT LEFT HEADLAMP BODY               |  | 01                      |  |   |  |   |  |   |  |   |  |   |  |   |  |
| STOP LIGHT SWITCH                            |  | 7dP                 | 7dM     | TO FOOT CONTROLS                   |  | 09                      |  | MOTOR CONCEALED HEADLIGHT RIGHT                        |  | 2dM                 | 2dM   | AT RIGHT HEADLAMP BODY              |  | E1                      |  |   |  |   |  |   |  |   |  |   |  |   |  |
| CABRIO:ROOF MOTORS                           |  | 14cN/O              | 14cN/O  | BELOW THE PARCEL TRAY              |  | N/D104                  |  | FAN MOTOR 1  |  | 3cN                 | 3cN   | ON RADIATOR                         |  | A28                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| CABRIO:MOTOR POWER WINDOW PASSENGER'S SIDE   |  | 9dK                 | 9dR     | IN PASSENGER'S DOOR                |  | D101                    |  | FAN MOTOR 2  |  | 3cN                 | 3cN   | ON RADIATOR                         |  | A27                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| CABRIO:MOTOR POWER WINDOW DRIVER'S SIDE      |  | 9dR                 | 9dK     | ON DRIVER'S DOOR                   |  | E105                    |  | MOTOR WINDSHIELD WIPER                                 |  | 7bD                 | 7bN   | IN WATER BOX                        |  | H/J25-27                |  |   |  |   |  |   |  |   |  |   |  |   |  |
| CABRIO:RELAY CO-DRIVER SIDE WINDOW           |  | 6dM                 | 6dP     | IN PASSENGER'S FOOTWELL            |  | D104                    |  | THROTTLE VALVE POTENTIOMETER                           |  | 4/5cD               | 4/5cD | ON THROTTLE VALVE ASSEMBLY          |  | B47                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| CABRIO:RELAY DRIVER SIDE WINDOW              |  | 6dM                 | 6dP     | IN PASSENGER'S FOOTWELL            |  | D103                    |  | HEADLIGHT CLEANERS PUMP (HCS)                          |  | 6cL                 | 6cL   | IN FRONT RIGHT FENDER               |  | A25-26                  |  |   |  |   |  |   |  |   |  |   |  |   |  |
| CABRIO:POWER TOP                             |  | —                   | —       | IG21 CES                           |  | M104                    |  | PUMP WINDSCREEN WASH                                   |  | 6cL                 | 6cL   | IN FRONT RIGHT FENDER               |  | A26                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| CABRIO:CONTROL RELAY ROOF WITH MICROSWITCHES |  | 14cM                | 14cM    | IN LUGGAGE COMPARTMENT ON FIREWALL |  | 0105-110                |  | RELAY ABS  |  | —                   | —     | IG22) CES                           |  | E99                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| CABRIO:DELAYING RELAY                        |  | 6dM                 | 6dP     | IN PASSENGER'S FOOTWELL            |  | E102                    |  | RELAY AC   |  | —                   | —     | IG19) CES                           |  | A22                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| CODING PLUG SOCKET                           |  | 7dM                 | 7dP     | IN PASSENGER'S FOOTWELL            |  | B50                     |  | RELAY FOG LIGHT CUTOFF (ONLY JAPAN)                    |  | —                   | —     | IG26) ADDITIONAL CES                |  | H1                      |  |   |  |   |  |   |  |   |  |   |  |   |  |
| DIAGNOSIS PLUG SOCKET                        |  | 7dM                 | 7dP     | IN PASSENGER'S FOOTWELL            |  | M12                     |  | RELAY START LOCK (ONLY AUTOMATIC-TRANSMISSION)         |  | —                   | —     | IG20) CES                           |  | P44                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| SPEED SENDER / DME                           |  | 6cN                 | 6cN     | ABOVE FLYWHEEL                     |  | B49                     |  | RELAY DAYTIME RUNNING LIGHT (ONLY CANADA)              |  | —                   | —     | IG26) ADDITIONAL CES                |  | L3                      |  |   |  |   |  |   |  |   |  |   |  |   |  |
| SPEED SENDER CU TRANSMISSION                 |  | 14dM                | 14dM    | BY TRANSMISSION RIGHT              |  | B114                    |  | COOLANT TEMP. SWITCH AND SENDER                        |  | 4dP                 | 4dP   | ON ENGINE BLOCK                     |  | E/F47                   |  |   |  |   |  |   |  |   |  |   |  |   |  |
| PRESSURE SWITCH AIR CONDITIONING SYSTEM      |  | 3dQ                 | 3dQ     | IN ENGINE COMPARTMENT FRONT LEFT   |  | A24-25                  |  | SWITCH TAILGATE UNLOCKING                              |  | 7dD                 | 7dL   | IN DRIVER'S FOOTWELL                |  | F31                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| ELECTRICS ON TRANSMISSION                    |  | 15/16dP             | 15/16dP | IN TRANSMISSION                    |  | B115-117                |  | SWITCH COOLING WATER TEMPERATURE                       |  | 2dP                 | 2dP   | ON RADIATOR                         |  | A29-30                  |  |   |  |   |  |   |  |   |  |   |  |   |  |
| TWO-TONE HORN 1                              |  | 3cQ                 | 3cQ     | IN FRONT LEFT FENDER               |  | A39                     |  | SWITCH OIL LEVEL WARNING                               |  | 6eN                 | 6eN   | UNDER THE ENGINE ON OIL PAN         |  | F43                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| TWO-TONE HORN 2                              |  | 3cQ                 | 3cQ     | IN FRONT LEFT FENDER               |  | A40                     |  | SWITCH BACKUP LIGHT                                    |  | 15dD                | 15dD  | (ONLY TRANSMISSION)                 |  | 07-8                    |  |   |  |   |  |   |  |   |  |   |  |   |  |
| CRASH SENSOR LEFT                            |  | 7cQ                 | —       | INSIDE FIREWALL LEFT               |  | G95                     |  | FLOAT SWITCH BRAKE FLUID                               |  | 6cP                 | 6cM   | IN BRAKE FLUID RESERVOIR            |  | C18                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| CRASH SENSOR RIGHT                           |  | 7cL                 | —       | INSIDE FIREWALL RIGHT              |  | G92                     |  | SENSOR LATERAL ACCELERATION                            |  | 8eN                 | 8eN   | UNDER THE RIGHT SEAT                |  | E119                    |  |   |  |   |  |   |  |   |  |   |  |   |  |
| OUTSIDE TEMPERATURE SENSOR                   |  | 6cN                 | 6cN     | IN HEATER BOX                      |  | A23                     |  | STARTER  |  | 7cN                 | 7cN   | ON CLUTCH BELL HOUSING              |  | L42                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| INSIDE TEMPERATURE SENSOR                    |  | 8cM                 | 8cP     | IN CONTROL PANEL AREA              |  | E21                     |  | DRIVE LEFT HEADLIGHT VERTICAL AIM CONTROL              |  | 2cP                 | 2cP   | ON HEADLIGHT LEFT                   |  | A6                      |  |   |  |   |  |   |  |   |  |   |  |   |  |
| GAS PRESSURE PROP LEFT                       |  | 15bD                | 15bD    | ON TAILGATE                        |  | K25                     |  | DRIVE RIGHT HEADLIGHT VERTICAL AIM CONTROL             |  | 2cM                 | 2cM   | ON HEADLIGHT RIGHT                  |  | A5                      |  |   |  |   |  |   |  |   |  |   |  |   |  |
| GAS PRESSURE PROP RIGHT                      |  | 15bL                | 15bL    | ON TAILGATE                        |  | L26                     |  | DRIVE LEFT CENTRAL LOCK                                |  | 11cR                | 11cR  | IN DOOR LEFT                        |  | 064-65                  |  |   |  |   |  |   |  |   |  |   |  |   |  |
| OIL PRESSURE SENDER/PRESSURE SWITCH          |  | 3dM                 | 3dM     | ON ENGINE BLOCK BELOW OIL FILTER   |  | F47                     |  | DRIVE RIGHT CENTRAL LOCK                               |  | 11cK                | 11cK  | IN DOOR RIGHT                       |  | 067-68                  |  |   |  |   |  |   |  |   |  |   |  |   |  |
| OIL TEMPERATURE SENDER                       |  | 5cN                 | 5cN     | AT CRANKCASE                       |  | B44                     |  | DRIVE CRUISE CONTROL                                   |  | 6cL                 | 6cL   | ENGINE COMPARTMENT                  |  | L44                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| COOLANT TEMP. SENDER                         |  | 4cQ                 | 4cQ     | ON ENGINE BLOCK                    |  | B45                     |  | CONTROL UNIT ABS                                       |  | 7cL                 | 7cL   | IN FOOTWELL, RIGHT SIDE             |  | A94-97                  |  |   |  |   |  |   |  |   |  |   |  |   |  |
| GENERATOR                                    |  | 3cQ                 | 3cQ     | ON ENGINE                          |  | J/K41/42                |  | CONTROL UNIT AIRBAG                                    |  | 6cM                 | —     | IN PASSENGER'S FOOTWELL             |  | K93-96                  |  |   |  |   |  |   |  |   |  |   |  |   |  |
| SEAT BELT CONTACT                            |  | 10dQ                | 10dN    | TO BELT BUCKLE                     |  | C15                     |  | CONTROL UNIT ALARM SYSTEM/CENTRAL LOCKING SYSTEM       |  | 6dM                 | 6dP   | IN PASSENGER'S FOOTWELL             |  | 0-F65-67                |  |   |  |   |  |   |  |   |  |   |  |   |  |
| HALL SENDER                                  |  | 3cM                 | 3cM     | ON TOOTHED BELT HOUSING OVER       |  | B46                     |  | CONTROL UNIT DME                                       |  | 6dM                 | 6dP   | IN PASSENGER'S FOOTWELL             |  | 042-50                  |  |   |  |   |  |   |  |   |  |   |  |   |  |
| HYDRAULIC UNIT                               |  | 7dK                 | 7dK     | IN FRONT RIGHT FENDER              |  | 0/E92                   |  | CONTROL UNIT TRANSMISSION                              |  | 15cK                | 15cK  | IN REAR RIGHT FENDER                |  | 0-G111-112              |  |   |  |   |  |   |  |   |  |   |  |   |  |
| CATALYTIC CONVERTER MONITOR (ONLY JAPAN)     |  | —                   | —       | IG24) ADDITIONAL CES               |  | D20                     |  | CONTROL UNIT GONG                                      |  | —                   | —     | IG25) ADDITIONAL CES                |  | K/L19-20                |  |   |  |   |  |   |  |   |  |   |  |   |  |
| KICK-DOWN SWITCH                             |  | 7dD                 | 7dN     | TO FOOT CONTROLS                   |  | F119                    |  | CONTROL UNIT LIFTING ROOF                              |  | —                   | —     | IG21) CES                           |  | H35                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| AIR COMPRESSOR                               |  | 3dD                 | 3dD     | ON ENGINE                          |  | A24                     |  | CONTROL UNIT LIGHT COMBINATION                         |  | —                   | —     | IG17-G18) CES                       |  | F/G2                    |  |   |  |   |  |   |  |   |  |   |  |   |  |
| KNOCK SENSOR 1                               |  | 5cN                 | 5cN     | ON ENGINE BLOCK                    |  | B47                     |  | CONTROL UNIT P/N LOCK (USA/CANADA)                     |  | —                   | —     | IG23) ADDITIONAL CES                |  | 0119                    |  |   |  |   |  |   |  |   |  |   |  |   |  |
| KNOCK SENSOR 2                               |  | 5cN                 | 5cN     | ON ENGINE BLOCK                    |  | B48                     |  | CONTROL UNIT CRUISE CONTROL                            |  | 7cR                 | 7cR   | IN LEFT FOOTWELL                    |  | M44/45                  |  |   |  |   |  |   |  |   |  |   |  |   |  |
| CONTACT UNIT AIRBAG                          |  | 9dP                 | —       | ON STEERING WHEEL                  |  | G/H95                   |  | CU SEAT HEATER LEFT SEAT                               |  | 10dD                | 10dD  | UNDER THE SEAT                      |  | 0/P25-26                |  |   |  |   |  |   |  |   |  |   |  |   |  |
| PARKING BRAKE CONTACT                        |  | 9dR                 | 9dK     | ON HAND BRAKE LEVER                |  | C15-16                  |  | CU SEAT HEATER RIGHT SEAT                              |  | 10dL                | 10dL  | UNDER THE SEAT                      |  | L21                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| FUEL PUMP                                    |  | 15dL                | 15dL    | ON BASE REAR RIGHT                 |  | N46-47                  |  | BUZZER CONTACT   |  | 8cP                 | 8cM   | ON IGNITION LOCK                    |  | J18                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| CLUTCH SWITCH                                |  | 7dP                 | 7dM     | TO FOOT CONTROLS                   |  | N44-45                  |  | FUEL LEVEL SENDER                                      |  | 15dN                | 15dN  | IN FUEL TANK                        |  | C17                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| OXYGEN SENSOR                                |  | 2dP                 | 2dP     | ON RADIATOR                        |  | B45-46                  |  | TEMPERATURE SENSOR FOR CATALYZER                       |  | 9eN                 | 9eN   | ON CATALYZER                        |  | C19                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| IDLE SPEED POSITIONER                        |  | 5cQ                 | 5cQ     | ENGINE COMPARTMENT                 |  | B49                     |  | VALVE CAMSHAFT CONTROL                                 |  | 5cM                 | 5cM   | AT CYLINDER HEAD COVER              |  | B44                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| AIR FLOW SENSOR                              |  | 3cP                 | 3cP     | ENGINE COMPARTMENT                 |  | F42                     |  | VALVE TANK VENTING                                     |  | 6cD                 | 6cD   | ENGINE COMPARTMENT (ONLY CAT.)      |  | B43                     |  |   |  |   |  |   |  |   |  |   |  |   |  |
| CENTRAL ELECTRICS                            |  | —                   | —       | —                                  |  | —                       |  | —  |  | —                   | —     | —                                   |  | —                       |  |   |  |   |  |   |  |   |  |   |  |   |  |
| ADDITIONAL CES                               |  | —                   | —       | —                                  |  | —                       |  | —  |  | 7dQ                 | 7dQ   | LEFT IN WATER BOX                   |  | SHEET 6                 |  |   |  |   |  |   |  |   |  |   |  |   |  |
| ADDITIONAL CES                               |  | —                   | —       | —                                  |  | —                       |  | —  |  | 6cP                 | —     | LEFT TO STEERING COLUMN             |  | SHEET 6                 |  |   |  |   |  |   |  |   |  |   |  |   |  |
| ADDITIONAL CES                               |  | —                   | —       | —                                  |  | —                       |  | —  |  | —                   | 6cD   | LEFT TO GLOVE BOX                   |  | SHEET 6                 |  |   |  |   |  |   |  |   |  |   |  |   |  |
| IGNITION COIL                                |  | —                   | —       | —                                  |  | —                       |  | —  |  | 3cL                 | 3cL   | WHEEL HOUSING RIGHT FRONT           |  | J45                     |  |   |  |   |  |   |  |   |  |   |  |   |  |

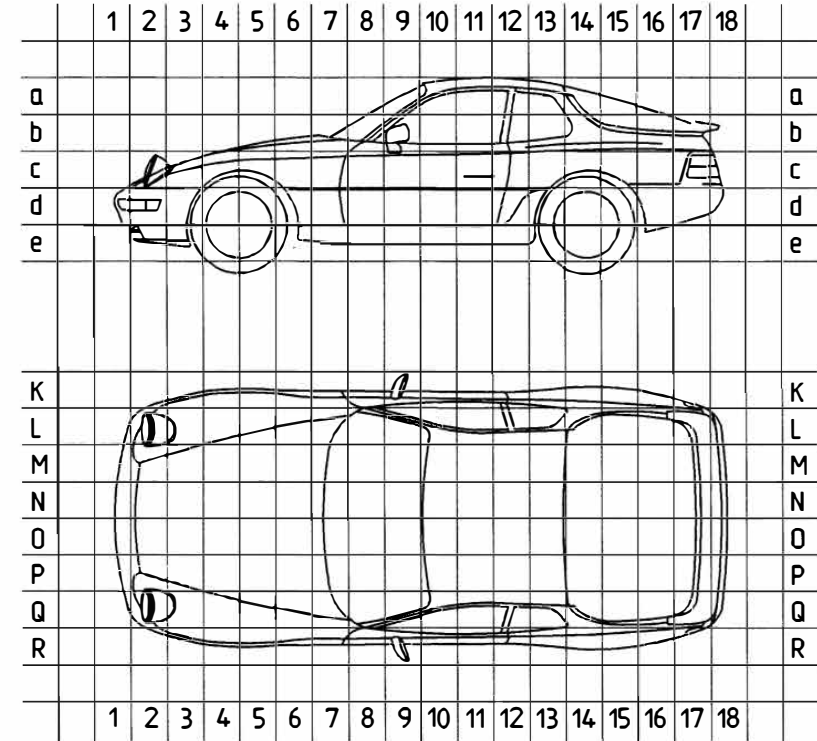

| A |  | B |  | C |  | D |  | E |  | F |  | G |  | H |  | J |  | K |  | L |  | M |  | N |  | O |  | P |  |
|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|
|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|---|--|

### PLUG CONNECTIONS

| CODE | NUMBER OF PINS | DESIGNATION, FUNCTION  | POSITION IN VEHICLE |         | NOTE                         | FIELD IN WIRING DIAGRAM |
|------|----------------|--|---------------------|---------|------------------------------|-------------------------|
|      |                |  | LHD                 | RHD     |                              |                         |
| T1   | 14             | WL PASSENGER COMPARTMENT / WL DME  | 6dM                 | 6dP     | IN PASSENGER'S FOOTWELL      | N15, F44/45             |
| T2   |                |  |                     |         |                              |                         |
| T3   |                |  |                     |         |                              |                         |
| T4   | 2              | BRAKE PAD WEAR CONTACT FRONT RIGHT / COMBI LEAD                            | 5dL                 | 5dL     | LOW ON SHOCK ABSORBER        | A15                     |
| T5   | 2              | COMB. LEAD RIGHT / WH FRONT (BVA)  | 6cL                 | 6cL     | ENGINE COMPARTMENT           | A16                     |
| T6   | 2              | COMB. LEAD LEFT / WH FRONT (BVA)   | 6cQ                 | 6cQ     | ENGINE COMPARTMENT           | A18                     |
| T7   | 2              | BRAKE PAD WEAR CONTACT FRONT LEFT / COMBI LEAD                             | 5dQ                 | 5dQ     | LOW ON SHOCK ABSORBER        | A19                     |
| T8   | 2              | BRAKE PAD WEAR CONTACT REAR RIGHT / COMBI LEAD                             | 14dL                | 14dL    | ON SEMI-TRAILING ARM         | P15                     |
| T9   | 2              | COMB. LEAD RIGHT / WH PASSENGER COMP.                                      | 15dM                | 15dM    | ABOVE DRIVE SHAFTS ON        | P16                     |
| T10  | 2              | COMB. LEAD LEFT / WH PASSENGER COMP.                                       | 15dP                | 15dP    | LUGGAGE COMPARTMENT PANEL    | P18                     |
| T11  | 2              | BRAKE PAD WEAR CONTACT REAR LEFT / COMBI LEAD                              | 14dQ                | 14dQ    | ON SEMI-TRAILING ARM         | P19                     |
| T12  | 6              | WH HEATER, AIR CONDITIONING, PASSENGER COMP.                               | 7cQ/N               | 7cQ/N   | IN CONTROL PANEL AREA        | Q23                     |
| T13  | 7              | WH PASSENGER COMPARTMENT / ENGINE HOOD                                     | 6dP                 | 6dP     | IN ENGINE HOOD               | J27/28, B64             |
| T14  | 8              | SEAT RIGHT / WH PASSENGER COMPARTMENT                                      | 11eM                | 11eM    | LOW ON SEAT                  | L22                     |
| T15  | 8              | SEAT LEFT / WH PASSENGER COMPARTMENT                                       | 11eP                | 11eP    | LOW ON SEAT                  | N27                     |
| T16  | 4              | REAR WINDOW WIPER, HIGH MOUNTED STOP LIGHT / WL PASSENGER COMP. ONLY COUPE | 14cQ                | 14cQ    | BEHIND C-PILLAR              | Q23                     |
| T17  |                |  |                     |         |                              |                         |
| T18  | 12             | WL PASSENGER COMPARTMENT / WL PASSENGER'S DOOR ONLY COUPE                  | 7dK                 | 7dR     | IN PASSENGER'S FOOTWELL      | BC32, HJ86, OP86        |
| T18  | 12             | WL PASSENGER COMPARTMENT / WL PASSENGER'S DOOR ONLY CABRIO                 | 7dK                 | 7dR     | IN PASSENGER'S FOOTWELL      | F102, HJ86, OP86        |
| T19  | 14             | WL PASSENGER COMPARTMENT / WL DRIVER'S DOOR ONLY COUPE                     | 7dR                 | 7dK     | IN DRIVER'S FOOTWELL         | BC34, E86, L86          |
| T19  | 14             | WL PASSENGER COMPARTMENT / WL DRIVER'S DOOR ONLY CABRIO                    | 7dR                 | 7dK     | IN DRIVER'S FOOTWELL         | F103, E86, L86          |
| T20  | 8              | WL PASSENGER COMPARTMENT / WL SUN ROOF ONLY COUPE                          | 16dQ                | 16dQ    | IN BOHLMANN COMPARTMENT      | H38                     |
| T20  | 8              | WL PASSENGER COMPARTMENT / WL POWER TOP ONLY CABRIO                        | 16dQ                | 16dQ    | IN BOHLMANN COMPARTMENT      | M107/108                |
| T21  | 14             | WIRE HARNESS DME / WIRE HARNESS FRONT                                      | 6cP                 | 6cP     | ENGINE COMPARTMENT           | G48/49                  |
| T22  | 2              | COILING PLUG / DME   | 6dM                 | 6dP     | IN PASSENGER'S FOOTWELL      | A50                     |
| T23  |                |  |                     |         |                              |                         |
| T24  | 2              | WH ALTERN. STARTER / WH FRONT  | 6cQ                 | 6cQ     | ENGINE COMPARTMENT           | J43                     |
| T25  |                |  |                     |         |                              |                         |
| T26  | 19             | DIAGNOSIS PLUG   | 6dL                 | 6dQ     | IN PASSENGER'S FOOTWELL      | L/N12                   |
| T27  | 12             | WL PASSENGER COMPARTMENT / WL PASSENGER'S DOOR                             | 7dK                 | 7dR     | IN PASSENGER'S FOOTWELL      | M63-65                  |
| T28  | 12             | WL PASSENGER COMPARTMENT / WL DRIVER'S DOOR                                | 7dR                 | 7dK     | IN DRIVER'S FOOTWELL         | M68/E/F104              |
| T29  | 1              | ANTENNA AMPLIFIER / WH PASSENGER COMP.                                     | 7cQ                 | 7cQ     | BEHIND THE RADIO             | F82, Q82                |
| T30  |                |  |                     |         |                              |                         |
| T31  |                |  |                     |         |                              |                         |
| T32  | 2              | WL ABS / COMBINATION LEAD FR   | 6cL                 | 6cL     | ENGINE COMPARTMENT           | B98                     |
| T33  | 2              | WL ABS / COMBINATION LEAD FL   | 6cQ                 | 6cQ     | ENGINE COMPARTMENT           | B98                     |
| T34  | 2              | WL ABS / COMBINATION LEAD RL   | 15dP                | 15dP    | ABOVE DRIVE SHAFTS           | B98                     |
| T35  | 2              | WL ABS / COMBINATION LEAD RR   | 15dM                | 15dM    | ON LUGGAGE COMPARTMENT PANEL | B98                     |
| T36  | 2              | COMB. LEAD FR / ABS-SENSOR FR  | 5dL                 | 5dL     | LOW ON SHOCK ABSORBER        | B98                     |
| T37  | 2              | COMB. LEAD FL / ABS-SENSOR FL  | 5dQ                 | 5dQ     | LOW ON SHOCK ABSORBER        | B98                     |
| T38  | 2              | COMB. LEAD RL / ABS-SENSOR RL  | 14dQ                | 14dQ    | ON SEMI-TRAILING ARM         | B98                     |
| T39  | 2              | COMB. LEAD RR / ABS-SENSOR RR  | 14dL                | 14dL    | ON SEMI-TRAILING ARM         | B98                     |
| T40  | 6              | WL PASSENGER COMPARTMENT / WL ABS  | 6dM                 | 6dM     | IN FOOTWELL, RIGHT SIDE      | F96                     |
| T41  | 6              | WL PASSENGER COMPARTMENT / WL AIRBAG                                       | 6dM                 | —       | IN PASSENGER'S FOOTWELL      | H97                     |
| T42  | 2              | WL PASSENGER COMPARTMENT / WL AIRBAG                                       | 6cM                 | —       | IN PASSENGER'S FOOTWELL      | J96, Q13                |
| T43  | 3              | SPEED-REFERENCE MARK SENDER / DME  | 6cN                 | 6cN     | ON ENGINE REAR               | B49                     |
| T44  | 3              | OXYGEN SENSOR / DME  | 6cN                 | 6cN     | ON ENGINE REAR               | B45/46                  |
| T45  | 2              | WL PASSENGER COMPARTMENT / FUEL PUMP                                       | 13dM                | 13dM    | AT TRANSMISSION SUPPORT      | M47                     |
| T46  | 10             | WL DME / WL TRANSMISSION   | 7cM                 | 7cP     | IN PASSENGER'S FOOTWELL      | F46, G118               |
| T47  | 21             | WL PASSENGER COMPARTMENT / WL TRANSMISSION                                 | 7cK                 | 7cL     | IN PASSENGER'S FOOTWELL      | D118, H114, N114, L117  |
| T48  | 8              | WL TRANSMISSION/ ELECTRICS ON TRANSMISSION ONLY M249                       | 15/16dP             | 15/16dP | ON GEARBOX                   | E15-117                 |

### GROUND POINTS

| CODE    | DESIGNATION, FUNCTION                                    | POSITION IN VEHICLE |      |
|---------|--|---------------------|------|
|         |  | LHD                 | RHD  |
| MP I    | COVER PANEL  | 18cQ                | 18cQ |
| MP II   | INSIDE FIREWALL ELECTRONICS CHASSIS                      | 7cP                 | 7cP  |
| MP III  | INSIDE FIREWALL CABLE TO GROUND                          | 7cP                 | 7cP  |
| MP IV   | LONGITUDINAL SUPPORT                                     | 3dP                 | 3dP  |
| MP V    | LONGITUDINAL SUPPORT                                     | 3dM                 | 3dM  |
| MP VI   | BODY BATTERY LHD   | 6cL                 | —    |
| MP VII  | BODY BATTERY RHD   | —                   | 16cQ |
| MP VIII | ENGINE BLOCK DME ELECTRONICS CHASSIS                     | 6cQ                 | 6cQ  |
| MP IX   | CLUTCH BELL HOUSING BATTERY LEAD LHD DME CABLE TO GROUND | 7cQ                 | 7cQ  |
| MP X    | BODY RHD FIREWALL  | —                   | 7cQ  |

### M - NUMBERS

- M 113 CANADA VERSION
- M 139 SEAT HEATER SEAT LEFT
- M 150 WITHOUT CATALYZER
- M 193 JAPAN VERSION
- M 215 SAUDI-ARABIA VERSION
- M 249 AUTOMATIC TRANSMISSION
- M 288 HEADLIGHT CLEANING SYSTEM
- M 340 SEAT HEATER SEAT RIGHT
- M 454 CRUISE CONTROL
- M 480 6-RANGE-TRANSMISSION
- M 484 USA VERSION
- M 490 AUDIO OPTION PACK WITHOUT BOOSTER
- M 553 USA - CANADA VERSION
- M 562 AIRBAG
- M 573 AIR CONDITIONING SYSTEM
- M 605 HEADLIGHT VERTICAL ARM CONTROL
- M 650 LIFTING ROOF