


Installation position of windstop



Note


If the windstop is retrofitted, three fastening parts must be fitted for the centre windstop.

1. Remove trim for roll-over bar. → 708119 *Removing and installing trim panel for roll-over bar - chapter on "Removing"*
2. Position the two fastening parts in the upper area of the roll-over bar -1- at the existing holes and rivet them in place -2- .

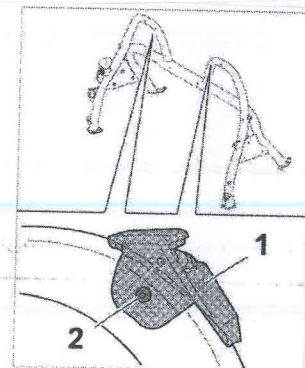

Riveting the fastening parts

3. Mark the fastening part -1- centrally on the back of the trim for the roll-over bar, drill and rivet in place -2- .

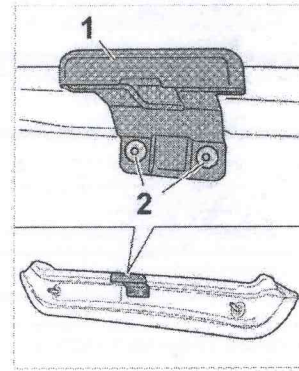


Fit fastening part to trim

4. Install trim for roll-over bar. → 708119 *Removing and installing trim for roll-over bar - chapter on "Installing"*

Installing windstop


Installation position of windstop

1. Position outer windstop from the rear on the roll-over bar with the plastic tabs and press in.

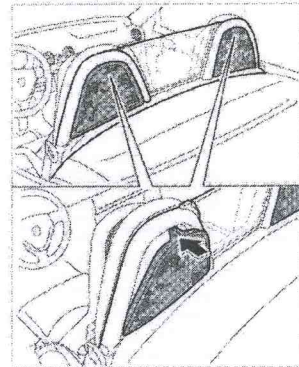

Installing outer windstop

2. Install centre windstop.
 - 2.1. Mount windstop on the lower fastening part.
 - 2.2. Tilt windstop forwards and engage at the two upper fastening parts.

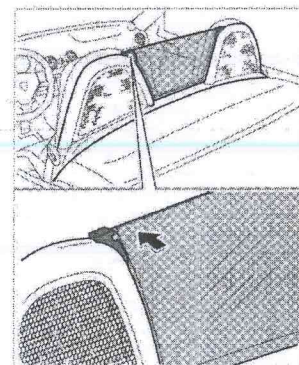

Installing centre windstop