










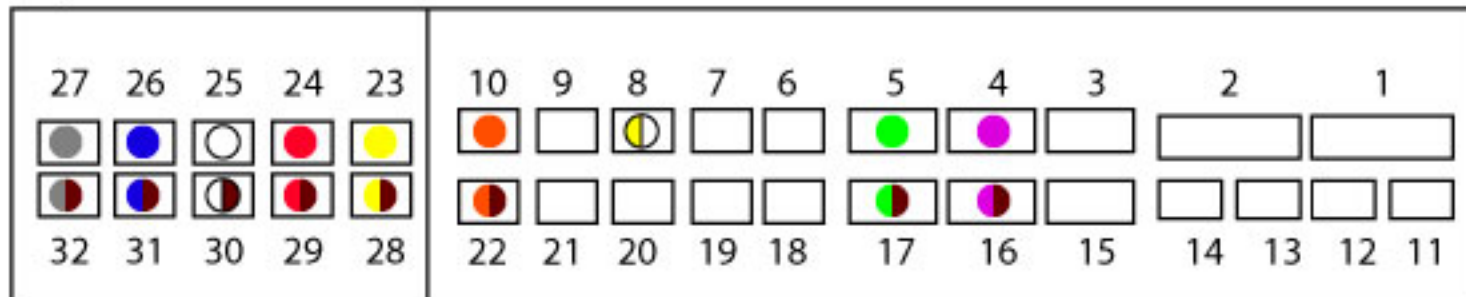

9X7 Bose Speaker Wire Harness - Diagram

Top View of Bose Wire Harness



Speaker Pin Out Location

1	Main Switch (Red/Brown)	11
		12
		13
2	Ground (brown)	14
3		15
4	 Front Right Bass + (Violet)	16  Front Right Bass - (Violet/Brown)
5	 Front Left Bass + (Green)	17  Front Left Bass - (Green/Brown)
6		18
7		19
8	 Subwoofer Remote (Yellow/White)	20
9		21
10	 Subwoofer + (Orange)	22  Subwoofer - (Orange/Brown)

23	 Center Speaker + (Yellow)	28  Center Speaker - (Yellow/Brown)
24	 Front Right Treble + (Red)	29  Front Right Treble - (Red/Brown)
25	 Rear Left + (White)	30  Rear Left - (White/Brown)
26	 Rear Right + (Blue)	31  Rear Right - (Blue/Brown)
27	 Front Left Treble + (Gray)	32  Front Left Treble - (Gray/Brown)