

Personal Settings

Ergonomic settings can be manually saved and retrieved via the memory buttons in the driver's door. In addition, individual driver profiles for automatically saving and retrieving ergonomic and comfort settings can be created via the PCM. Both functions can be used independently of one another.

Saving and retrieving personal settings

When the ignition is switched off, the settings previously made are automatically saved to the driver profile via the PCM and linked to the driver's key used. The settings are automatically retrieved via the driver's key when the door is unlocked. If you and others use the vehicle, it is advantageous to use one driver profile and driver's key per person. If necessary, the driver profiles can be changed manually. Additionally, up to three ergonomic settings can be manually saved and retrieved via the memory buttons in the driver's door.

Ergonomic settings affect:

seat, exterior mirror and steering wheel settings. Additionally, up to three ergonomic settings can be manually saved and retrieved via the memory buttons in the driver's door.

Comfort settings affect:

Ergonomic, air conditioning, light, vision, assistance-system, instrument cluster and infotainment settings.

Information

Specific functions cannot be personalised, to avoid damage to the vehicle (e.g. automatic activation of the rear window wiper when engaging reverse gear).

CAUTION

Retrieving automatic settings for seats, exterior mirrors and steering wheel

Parts of the body may be pinched or crushed if the settings are activated in an uncontrolled manner.

- ▶ Do not leave children in the vehicle unattended.
- ▶ Automatic retrieval of the **ergonomic settings** can be **cancelled** if necessary by pressing a memory button or a seat adjustment button.

Storing and retrieving comfort settings

Storing comfort settings

- ▶ When the ignition is switched off, the settings previously made are **automatically** saved to the driver profile in the PCM.

Retrieving comfort settings

- ▶ Unlock the vehicle.
The driver profile settings are retrieved.
– or –
- ✓ The vehicle is stationary.
- ▶ Change driver profile using the PCM.

If loading of the settings is interrupted:

- ▶ Select **Activate driver** via the PCM.

Managing driver profile

Up to 6 driver profiles and 1 guest profile can be created and managed.

When you start the PCM for the first time, the **Set-up wizard** is displayed and guides you through important steps for configuring the PCM. We recommend that you run the **Set-up wizard** fully to correctly create the first driver profile.

It is only possible to switch between the created driver profiles via the instrument cluster immediately after the ignition has been switched on and, when the ignition is on, at any time via the PCM.

Driver detection occurs automatically via the driver's key. A driver's key is always automatically assigned to an active profile.

Managing driver profiles

Driver profiles can be managed in the PCM.

▶ SET ▶ Driver

- Add driver
- Edit driver
- Change driver
- Delete driver (via the Edit driver menu item)
- Activate driver
- Activate personalisation
- Deactivate automatic saving

If the activated personalisation settings do not match the current driver, it is recommended to switch to another, already created driver profile. If necessary, a new driver profile can be created and the vehicle settings then adjusted. This avoids inadvertent adjustment of vehicle settings in the first driver profile selected.

Storing and retrieving ergonomic settings

Storing ergonomic settings on the memory buttons

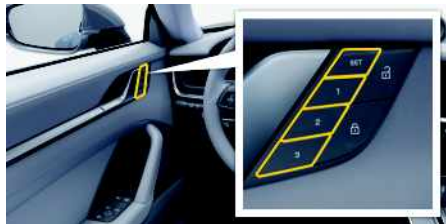


Fig. 141: Driver's door memory buttons

1. Press the SET button.

The inscription on the button lights up.

2. Press the relevant memory button 1, 2 or 3 within 10 seconds.

The settings are stored.

Storage is acknowledged acoustically (driver's door only) and the lighting on the SET button goes out.

Retrieving ergonomic settings with memory buttons

- ▶ Press and hold the relevant memory button **1, 2** or **3** until all settings are retrieved.

– or –

✓ Ignition switched off.

✓ The driver's door is open.

- ▶ Briefly press the relevant memory button **1, 2** or **3**.

The settings are automatically applied.