992 Oil Filter access

With rear deck open and engine not too hot, remove oil and water pressure cap



pull off cover ...(its just press fit into easy remove/re install pop mountings)




put caps back on just in case as one wants to think about dropping something in there




Pull up on right side fan (you can leave plugged in , or disconnect after, has simple tab release connector) it sits in rubber mounted easy press/remove holes now



you have full access to the filter . you can also see the hose of the right hand sound symposia . I gather the left hand one is under the other fan, which I never removed as I was doing an oil service

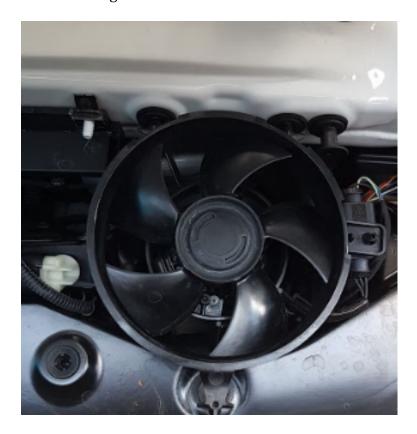

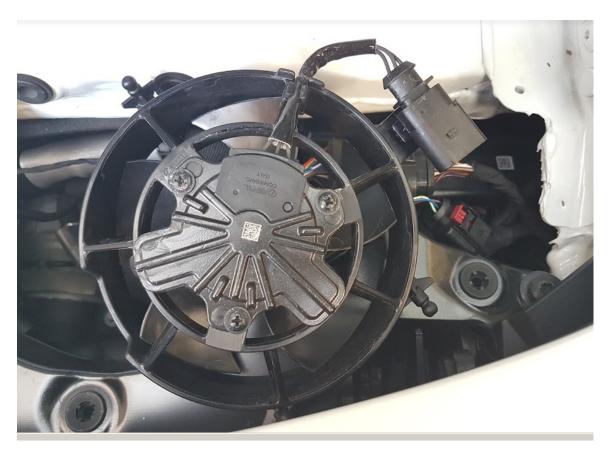



36 mm socket to remove. torque wrench (low range) to refitcorrect value to re install is inscribed on side of filter cover ...please check , but its a small number like $24\ or\ 26\ Nm$ ($18\ Lb.ft$ -ish.....)

