

**Fault, fault code****Possible causes, remedy, notes****Test point 15**

Condenser blower motor seized

**Fault code 41**

1. Check voltage at condenser blower relay at term. 30 and term. 30 C.
2. Check if motor has seized mechanically.
3. Check wiring from relay term. 87 to blower motor for open circuit and short to ground.
4. Check wiring from blower motor to heater/ A/C regulator G 7 for open circuit and short to ground.
5. Check activation of relay according to wiring diagram.

**Test point 16**

Oil cooler blower motor seized

**Fault code 42**

1. Check voltage at oil cooler blower relay term. 30 and term. 30 C.
2. Check if engine has seized mechanically.
3. Check wire from relay term. 87 to blower motor for open circuit and short to ground.
4. Check wire from blower motor to heating/ A/C regulator G 9 for open circuit and short to ground.
5. Check activation of relay according to wiring diagram.

**Test point 17**

Rear blower motor - Stage 1 seized

**Fault code 43/46**

1. Check voltage at rear blower relay term. 30 and term. 30 C.
2. Check if engine has seized mechanically.
3. Check triggering of relay according to wiring diagram.
4. Check wire from relay term. 87 C to motor for continuity and short to ground.
5. Check ballast resistor (Ballast resistor with restart interlock feature; see page 80 - 1, Vol. 6).
6. Check wires from motor to heater/ A/C regulator G 1 and G 19 for open circuit and short to ground.