

## 993 CR-1 Harness w/ HiFi To Becker CDR-220

## 993 CR-1 Harness w/ HiFi To Becker CDR-220

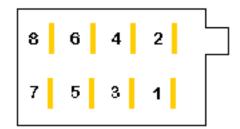


Pin	Purpose	CDR-220	993 Harness
1			
2			
3			
4	Battery	Yellow	Red
5			
6	Remote Ant	Blue	White
7	Ignition	Red	Red/Black
8	Ground	Black	Brown

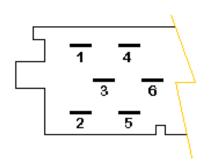

(CDR-220 C1 Amp plug portion)

Pin	Purpose	Jumper
1	Rear Left OUT	Purple
2	Rear Right OUT	Gray
3	Audio Ground	White
4	Front Left OUT	Purple/Blk
5	Front Right OUT	Gray/Blk
6	Unused	

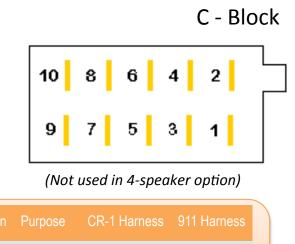

White/Black

Anti-Theft

Pin	Purpose	CDR-220	HiFi Harness
1			
2			
3			
4			
5	Audio Ground	C1-3	Black
6	FOR AMP	?	Red
7	Front Right OUT	C1-5	Red
8	Rear Right OUT	C1-2	Clear
9	Front Left OUT	C1-4	Blue
10	Rear Left OUT	C1-1	Red

Green