

Steps To Activate Ignition and Program Remote Key Fob for Porsche 993 1995 and up

Set--Up Steps Before Programming:

Step	Action	Feedback
1	Check the functionality of immobilizer/alarm system by locking your car with the key fob.	The status light on the door sill should flash single flashes. If the double flashing occurs repairs to the system are needed before continuing.
2	Unlock the car with the remote, sit in car, close the door, leave it unlocked and wait at least 3 minutes for the immobilizer to take effect (prime).	Go to programming steps below

Programming Steps:

Step	Action	Feedback
1	Switch the ignition to on	The warning light in the clock will go on and then off after 15 seconds, go to next step
2	Cycle the ignition switch (OFF and then ON again) within 5 seconds	The warning light will light up and flash after 15 seconds
3	Cycle the ignition key from ON to OFF to back to ON ()* times (* corresponds to 1st digit of Immobilizer Code for your car, ("0" = 10 turns))	Wait for the warning light, go to next step
4	Cycle the key from ON to OFF to back to ON ()* times (* corresponds to 2nd digit of Immobilizer Code, ("0" = 10 turns))	Wait for the warning light, go to next step
5	Cycle the key from ON to OFF to back to ON ()* times (* corresponds to 3d digit of Immobilizer Code, ("0" = 10 turns))	Wait for the warning light, go to next step
6	Cycle the key from ON to OFF to back to ON ()* times (* corresponds to 4th digit of Immobilizer Code, ("0" = 10 turns))	If the number is correct the warning light will flash, go to the next step If no flash start over at step 1 After light flashes the ignition is enabled to start car If key fob programming is not desired
Then within one minute of remote warning light flash on clock:		
7	Press key fob 1 and hold	Until door LED flashes - an acknowledgement, go to next fob
8	Press key fob 2 and hold	Until door LED flashes - an acknowledgement, go to next fob
9	Press key fob 3 and hold	Until door LED flashes - an acknowledgement, go to next fob
9	Press key fob 4 and hold	Until door LED flashes - an acknowledgement, go to next fob
10	Turn ignition off	Ends tuning you can now start your car

Note: The ignition key is in the on position when the dashboard display lights up and is off when the dash goes dead. The key stops in the off position just before the position where the steering column lock is triggered.

Updated 2/29/2012