

Changing the Fuel Filter

Parts

Fuel filter 928-110-253-06

Tools

19mm flare nut wrench
17mm flare nut wrench
19mm open-end wrench
7mm flex nut driver
10mm socket 1/4 drive and ratchet
12 inch long P2 Phillips screwdriver
inspection mirror
1 cup catch container
rags

Steps to Change the Fuel Filter

1. Remove the air box, air cover, air filter and MAF sensor
7mm flex nut driver
12 inch long P2 phillips screwdriver
10mm socket 1/4 drive and ratchet
2. Undo rear fuel outlet line and let drain
19mm flare nut wrench
19mm open-end wrench
catch container and rags
3. Undo fuel filter mounting strap
7mm flex nut driver
4. Undo forward fuel inlet line and let drain (still at rear fuel outlet)
17mm flare nut wrench
19mm flare nut wrench
5. Remove filter
6. Reassembly is the reverse of disassembly. (Observe the directional flow arrow)
7. Before reinstalling the air filter and cover, start engine and check for leaks using a mirror and your hand.