Changing the V-belts

Note: this checklist assumes that the alternator pulley update has been performed. This checklist is for the standard 3 V-belt setup, but with the fan belt tension sensor removed.

Parts

Fan belt 999-192-338-50 Alternator belt 999-192-343-50 A/C belt 999-192-363-50 Fan pulley screws 900-119-026-02 (3)

Tools

24mm box-end wrench 3/8" breaker bar magnetic pickup tool 5mm hex bit socket with guide pin, 1/2" drive (Stahlwille 54IC-5) 1/4" socket x 1/2" plug adaptor (Stahlwille 410) 3/8" socket x 1/2" plug adaptor 10mm triple-square bit socket 3/8 drive (Snap-on) 8mm socket 1/4" drive 1/4" ratchet 3/8" ratchet 13mm socket 3/8" drive 3/8" extension Polygon wrench (Porsche 999-571-052-02)) long flat-blade screwdriver 13mm extra deep offset box-end wrench (Stahlwille) 3/8" torque wrench (Hazet 5110-1CT) 1/4" torque wrench (Hazet 5108-2CT) Krikit IV - belt tension gauge (Gates 91107)

Disassembly

- 1. Remove air filter cover
- Remove the A/C belt
 8mm bolt on fan shroud
 13mm bolts on A/C compressor

- 3. Remove alternator shaft nut
 10mm triple-square + breaker bar
 24mm box-end
- 4. Remove alternator outer pulley half Polygon wrench
- 5. Remove alternator belt
- 6. Remove alternator shims (2)
- 7. Remove alternator inner pulley half Polygon wrench and long flat-blade screwdriver
- 8. Remove fan pulley screws (3) and shims (2)
 5mm hex bit socket with guide pin
 3/8 socket x 1/2 plug adaptor
 3/8 breaker bar
- 9. Remove fan outer pulley half (but leave inner pulley half and shims (3)

Reassembly

- 1. Install fan belt (numbers facing rear)
- 2. Install fan outer pulley half
- 3. Install spare fan pulley shims (2) and 3 new screws. (just take slack up, not tight)
- 4. Remove DME relay
- 5. Turn over the engine a few times to seat the belt
- 6. Torque fan pulley screws to 10Nm
- 7. Install alternator inner pulley half
- 8. Install the alternator belt (numbers facing rear)
- 9. Install the 2 shims
- 10. Install the alternator outer pulley half
- 11. Install the alternator nut and take up the slack, not tight

- 12. Turn over the engine a few times to seat the belt
- 13. Torque alternator nut to 50Nm
- 14. Slacken A/C adjuster nut
- 15. Install A/C belt (numbers facing rear)

 Drop in bolts in sequential order (LR-RR-RF-LF) and get each nut started before moving on to the next bolt. Apply leverage with long flat-blade screwdriver. Then tighten all down equally but just loose.
- 16. Adjust A/C belt tension to 30-35 Kg (or 1/2 turn if tight against stop already)
- 17. Tighten the 3 long bolts and 1 short bolt and the adjuster lock nut
- 18. Install 8mm bolt on fan shroud
- 19. Install air filter cover
- 20. Install DME relay
- 21. Start engine and check operation
- 22. Drive several miles and get engine hot
- 23. Next morning recheck A/C belt and readjust tension to 30 Kg.