

DIY - Removal & Installation of the Rear Heater Blower

Removal

1. Disconnect electrical connections:
 - a. NTC temperature sensor
 - b. Rear shift flapper valve
 - c. Blower motor
 - d. Ballast resistor

2. Disconnect vacuum lines:
 - a. At rear shift flapper valve
 - b. At plastic elbow to distributor

3. Remove fresh air intake

4. Remove rubber elbow

5. Remove plastic elbow

6. Remove blower motor

Installation

1. Installation is the reverse of removal