

39 90 55 Changing transmission oil in final drive

Filling capacity: 0.9 l


Note

Use only oils approved by Porsche. See Parts Catalogue.

Note

There is no oil drain plug on the final drive.

1. Unscrew the oil filler plug and remove oil by suction using a suitable hand pump while the transmission is warm from operation.

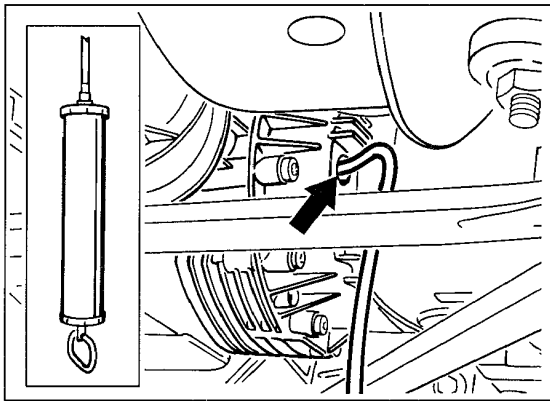

307 - 97

2. Fill with **0.9 l** transmission oil using special tool **V.A.G 1924**.

Note

Filling must be carried out **very** slowly because there is a baffle plate in the cover of the final drive.

3. Replace sealing ring for oil filler plug and tighten to **30 Nm** (22 ftlb.).