


Sealing ring for limited-slip differential -- Removing and installing halfshaft flange

Note


The sealing rings can also be replaced with the transmission installed.

Removal

1. Remove right halfshaft flange. To do this, place a chisel or spacer "A" under the halfshaft flange and pull out the halfshaft flange by turning the screw "B".

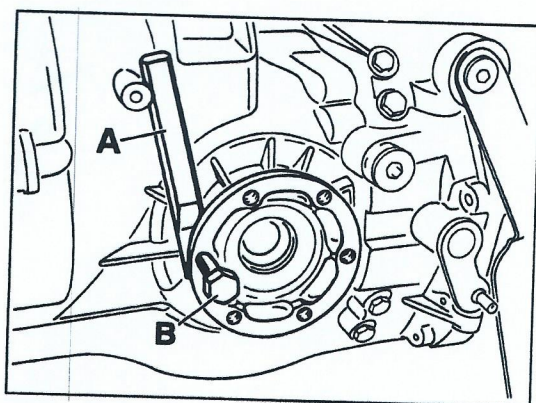

134 - 97

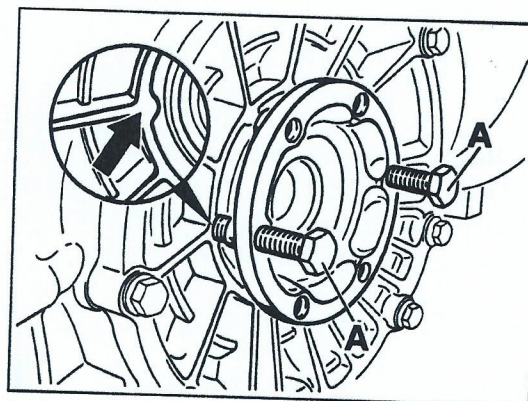

135 - 97

2. Lever out sealing ring using a suitable tool.

Note

Pull out left halfshaft flange by screwing in the hexagon-head bolts "A" on alternate sides. The bolts must be supported on the rib reinforcements of the cover (see Figure).