



PORSCHE/AFTERMARKET

CONNECTOR DIAGRAM

Pin	A	B	C
1	Speed dependent volume control (GAL)	Right rear +	Line out rear left
2	Not used Reverse	Right rear -	Line out rear right
3	Phone mute (ground to activate)	Right front +	AF Chassis (ground)
4	Constant 12V	Right front -	Line out front left
5	Ant trig (12V when radio on)	Left front +	Line out front right
6	Illumination Not used	Left front -	Control output for amplifier
7	Ignition Not used	Left rear +	7-20 for BECKER CD CHANGER
8	Ground	Left rear -	

A1: Speed (gray/black)

A2: Reverse (blue/black)

A3: Phone mute (yellow/black)

A4: +12V constant (red)

A5: Antenna trigger out (white)

A6: N/A

A7: N/A

A8: Ground (brown)