



**PORSCHE**



## PIDT

PORSCHE more interactive

Diagnostic tester

Operating manual

---

Developer mode v8.0.0

PAG\_Diagnoseapplikation\_E-Modus\_v8\_0\_0\_BD\_D300720

Print date: 7/22/2010 16:38:00



## contents

1	Preface	9
1.1	Notes on the manual	9
1.2	Documentation references	9
1.3	Terms of Use	9
1.4	Syntax representation	9
1.5	Pictograms	10
2	General safety information	11
2.1	Intended Use	11
3rd	Basic components	12th
3.1	Graphical user interface	12th
3.2	Functional groups	15th
3.3	Control bar	17th
3.3.1	Control bar: Generally valid icons	17th
3.3.2	Control bar: Action-specific icons	19th
3.4	Information from the system	20th
3.4.1	Note texts	20th
3.4.2	Icons	20th
4th	Hierarchical structure of the representation	23
4.1	Control unit list, overview,	24
4.2	extended identifications, fault	25th
4.3	memory	26
4.4	Actual values / switching	27
4.5	inputs, actuators / tests	28
4.6	Coding / adaptation	30th
4.7	Maintenance / repair	32
4.8	Log services	33
4.9	programming	34
5	Application modes	36
5.1	Basic application modes	36
5.2	Notebook mode	37
5.3	OBD scan tool	38
5.4	operation mode	39
5.4.1	General restrictions Protocol-specific	40
5.4.2	restrictions	44
6th	Setting options	45
6.1	Control application	46

6.1.1	Starting the control application	47
6.1.2	Elements of the control application	48
6.1.3	Categories	50
6.1.3.1	Version information	50
6.1.3.2	mode	51
6.1.3.3	Logging	59
6.1.3.4	Presentation / design	62
6.1.3.5	FTP	68
6.1.3.6	Paths	69
6.1.3.7	miscellaneous	71
6.2	Start files and transfer parameters	77
6.2.1	Batch file	77
6.2.1.1	Supplied batch files Editing	77
6.2.1.2	of the batch file Transfer	78
6.2.2	parameters	79
6.2.2.1	Assigning a fixed series	79
6.2.2.2	Assigning the automatic series recognition	80
6.2.2.3	Assigning the view mode	81
6.2.2.4	Assigning the simulation mode	81
6.2.2.5	Assigning the OBD scan tool function	85
6.2.3	call parameters	86
6.3	Further setting options	87
6.3.1	Automatic switching to KW2000LP routines Display of	87
6.3.2	string resources in the diagnostic application	89
7th	Start of the diagnostic application	91
7.1	Start the application on a tester Start	91
7.2	the application on a PC	93
7.2.1	Basic procedure	93
7.2.2	Selection of the basic application mode	94
7.2.3	Selection of the series	97
7.2.3.1	Automatic selection of the series	97
7.2.3.2	Selection of the series via selection box	98
7.2.3.3	No series found	99
7.2.4	Automatic series recognition Optional:	100
7.2.5	Selection of the VIT to be loaded	100
8th	service	101
8.1	Control unit list / control unit overview	102
8.1.1	Action-specific buttons of this function group	102
8.1.2	sequence with vehicle communication	102
8.1.3	Process without vehicle communication (special treatment view mode)	108
8.2	Extended identifications	111
8.2.1	Action-specific buttons	111
8.2.2	Display of the extended identifications	111
8.2.3	Changing and writing of the extended identifications	112
8.3	error memory	115
8.3.1	Action-specific button	115
8.3.2	icons	116
8.3.3	Unknown error codes	116
8.3.4	Display of the error memory	117

8.3.5	Display of environmental data	119
8.3.6	Deletion of error memory entries, actual	120
8.4	values / switching inputs	124
8.4.1	Action-specific buttons of this function group	124
8.4.2	Display of measured values	124
8.4.3	Different display types (representation of 1, 2, 3, 4 and more values)	128
8.4.4	Datalogger	130
8.4.4.1	Calling up the data logger and starting the recording	130
8.4.4.2	Behavior when adding new measured values to the measured value recording	133
8.4.4.3	Stop recording	134
8.4.4.4	Action options / Set marker	135
8.4.4.5	icons	136
8.4.4.6	Delete marker	139
8.4.4.7	Store measured values temporarily	140
8.4.4.8	Permanently save the current measured value log. Call up	141
8.4.4.9	and display the saved measured value logs. Print out the diagram (s)	142
8.4.4.10		144
8.5	Actuators / tests	146
8.5.1	Action-specific buttons of this function group	146
8.5.2	Display of the actuators / tests	147
8.5.3	Changing parameters / calling test routines Set	148
8.5.4	actuators	152
8.5.5	KWP2000LP functionality	153
8.5.6	Combined display of actual values and actuators / tests, coding /	154
8.6	adjustments	156
8.6.1	Action-specific buttons of this function group	156
8.6.2	Display of the coding types	156
8.6.3	Manual coding without MCR (development)	157
8.6.4	Manual coding with MCR	163
8.6.5	Automatic coding with MCR reset	168
8.6.6	to factory settings	169
8.6.7	Manual coding of binary data (development)	170
8.7	maintenance / repair	172
8.7.1	Calling up the function group	172
8.7.2	Example: ECU replacement	173
8.7.2.1	Action-specific buttons for this function Call	173
8.7.2.2	up the control unit exchange function.	174
8.7.2.3	Control unit exchange: read data. Control	175
8.7.2.4	unit exchange: write data. PXML interpreter	177
8.7.3		180
8.8	Log services	181
8.8.1	Action-specific keys of this function group Display	181
8.8.2	of the protocol services	182
8.8.3	Executing a request after manual entry. Saving a	184
8.8.4	request	187
8.8.5	Deleting a saved request Executing a	189
8.8.6	saved request Programming	191
8.9		194
8.9.1	Action-specific buttons of this function group	194
8.9.2	Display of the programming types	195
8.9.3	Manual programming	196
8.9.4	Automatic programming	205

8.9.5	Programming without flash rule (development)	208
8.10	Vehicle-wide functions (F7)	211
8.10.1	Calling up the vehicle-wide functions	211
8.10.2	Vehicle analysis protocol (FAP)	212
8.10.2.1	Action-specific buttons of this function group	212
8.10.2.2	icons	212
8.10.2.3	Calling up and starting the vehicle analysis protocol	213
8.10.2.4	function. Creating a KD-FAP	214
8.10.2.5	Creating an OBD FAP	219
8.10.2.6	FAP: display the list of vehicle analysis logs. FAP: print	221
8.10.2.7		222
8.10.2.8	FAP: Sending a vehicle analysis report. FAP:	223
8.10.2.9	Delete	224
8.10.3	Maintenance of the vehicle order	225
8.10.3.1	Action-specific buttons for this vehicle order	227
8.10.3.2	function group	228
8.10.4	Vehicle handover protocol	237
8.10.4.1	Create vehicle handover report	237
8.10.4.2	Vehicle handover report: Display of the list of FÜPs	246
8.10.4.3	Vehicle handover report: Print	247
8.10.4.4	Vehicle handover protocol: delete	248
8.10.5	action coding and programming (action)	249
8.10.6	integration of external applications	251
8.10.6.1	Generating the configuration file	251
8.10.6.2	Calling the external application	252
8.11	Communication logging	254
8.11.1	Action-specific buttons of this function group	255
8.11.2	Call up the communication log	256
8.11.3	Interrupt the live ticker behavior	257
8.11.4	Stop the communication log	258
8.11.5	Elements of the communication log	259
8.11.6	Save a communication log	260
8.11.7	Clear the recorded communication log	263
8.11.8	Search for a service within the log	264
8.11.9	Sort the communication log by I / O work log	265
8.12		266
8.12.1	Work log: Create a temporary work log.	267
8.12.2	Work log: Display the list of work logs.	268
8.12.3	Work log: View and print a work log.	268
8.12.4	Work log: Save a work log	270
8.12.5	Work log: Deleting a work log	271
8.13		273
8.13.1.1	Logging: Display of the log function	274
8.13.1.2	Logging: Saving	275
8.13.1.3	the current logging	276
8.13.1.4	Logging: Deleting the ?? current ?? Loggings	276
8.14	Create simulation data	278
8.14.1.1	Display of the function start simulation	278
8.14.1.2	data recording	280
8.14.1.3	Pause recording	281
8.14.1.4	Continue recording	282
8.14.1.5	Stop recording	283
8.14.1.6	Save simulation data	284

8.15	filter	286
8.15.1	Action-specific buttons in this function group Call	289
8.15.2	up the filter function	289
8.15.3	Create filter	291
8.15.4	Activate filter	294
8.15.5	Change filter	297
8.15.6	Deactivate filter	299
8.15.7	Edit filter	302
8.15.8	reset filter	306
8.15.9	Clear Filters	307
8.16	Guided troubleshooting (GFS, <F8>)	310
8.17	Measurement technology (multimeter, <F2>)	311
9	OBD scan tool	312
9.1	glossary	312
9.2	Function groups of the OBD scan tool	313
9.3	overview	314
9.4	Onboard diagnosis overview of actual	315
9.5	values	315
9.5.1	Action-specific buttons of this function group	315
9.5.2	Display of measured values	316
9.6	Environmental values	318
9.6.1	Action-specific buttons of this function group	318
9.6.2	Display of the ambient values	318
9.7	Read fault memory	320
9.7.1	Action-specific buttons of this function group	320
9.7.2	show error memory	321
9.7.3	Clear fault memory	321
9.8	Test values of sporadically monitored systems	322
9.9	Pending error	323
9.9.1	Display action-specific buttons of this function	323
9.9.2	group pending errors	324
9.9.3	Clear all pending errors	324
9.10	vehicle information	325
9.11	Permanent error memory	326
9.11.1	Action-specific buttons of this function group	326
9.11.2	Display permanent error memory	327
9.11.3	Erase permanent fault memory	327
10	Special features of the interface	328
10.1	Display of groupings views	328
10.2		331
10.2.1	What types are there?	331
10.2.2	Control unit view	331
10.2.3	Functional view	332
10.2.3.1	depiction	332
10.2.3.2	Selection / operation	332
10.3	Behavior of the menu bar Search	334
10.4	for diagnostic items Change the	335
10.5	column order	339
10.5.1	Easy sorting	339

10.5.2	Cancel sorting	339
10.5.3	Move nested sort dividing	340
10.6	line	341
10.7	Change column width	343
10.8	Copy content to the clipboard	345
10.8.1	Texts	345
10.8.2	Tables	345
10.8.3	Icons	346
10.9	Take screenshots	347
10.10	Multilingualism	348
11/10	Context sensitive help	350
10.12	Input validations	352

# 1 Preface

## 1.1 Notes on the manual

This manual describes the operation of the diagnostic application of the Porsche Interactive Diagnostic Tester (PIDT) for developer mode (E mode). It is aimed at the operating personnel at the test station.

The details of the menu navigation and the operating concept presented in this operating manual are to be understood as examples. The actual displays depend on the parameterization by the PTTD (Porsche terminology and text database) and may differ from the examples shown.

## 1.2 Documentation references

Instructions for installing and setting up the diagnostic software can be found in the installation instructions.

## 1.3 Terms of Use

The program is the property of Porsche AG. Unauthorized duplication or distribution of the program or parts of it will be prosecuted under criminal and civil law and may result in claims for damages.

The software may only be used for vehicles or components of the Porsche brand.

## 1.4 Syntax representation

Monospaced printing	Commands, command supplements, parameter inputs, screen outputs
Italics	Names of directories, files, devices, programs
<b>Functional group</b>	Function group key or button of a function group to be operated, e.g. B. Overview.
<b>&lt;key&gt;</b>	Key or key combination to be operated, e.g. B. <F1> text
<b>??Text??</b>	to be entered

## 1.5 Pictograms



Here you are made aware of relationships that have a significant influence on the smooth functioning of the system.



### Information:

Here you are made aware of important relationships. Information is given in addition to the instructions given in the instructions.