

70 84 19 Removing and installing roof lining - as of MY 2005

- Preliminary work
- Removing roof lining
- Installing roof lining
- Subsequent work

[top of page](#)

Preliminary work

Preliminary work


1. Remove A-pillar trim panel. [705749 21 Subsequent work on A-pillar trim panel - chapter on "Removing"](#)
2. Remove C-pillar trim. [706819 Removing and installing C-pillar trim - chapter on "removing"](#)
3. Remove and install sliding roof panel. [604019 Removing and installing sliding-roof panel - chapter on "Removing"](#)

[top of page](#)

Removing roof lining

Removing cover for motor for sliding roof

1. Switch off ignition and remove ignition key.

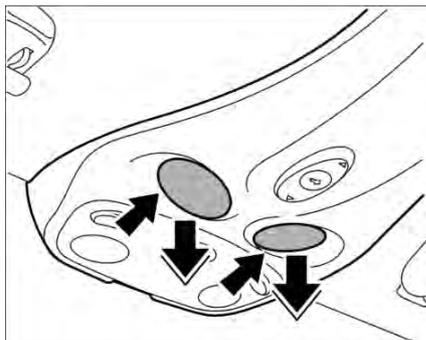


Unclipping cover for fastening screws

- 2.


Diagnostic system: reading out fault memory and activating systems

Using a small screwdriver, carefully unclip and remove the cover for the fastening screws at the openings **-arrows-** provided.

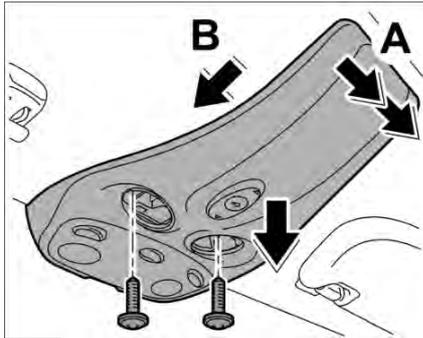

Unclipping cover for motor for sliding roof

3. Unscrew the two fastening screws.
4. Unclip cover for motor for sliding roof at the rear to the left and right **-arrows A-** and push it out to the front towards the windscreen **-arrow B-**.

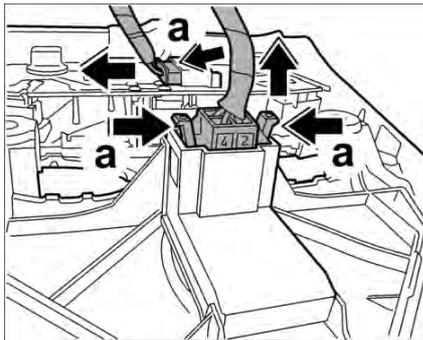


Removing connectors at sliding roof switch and interior light


5. Release connectors at sliding roof switch and at the interior light **-arrows a-** and remove them. Remove cover for motor for sliding roof.

Disconnecting electric plug connection

Installation Location:

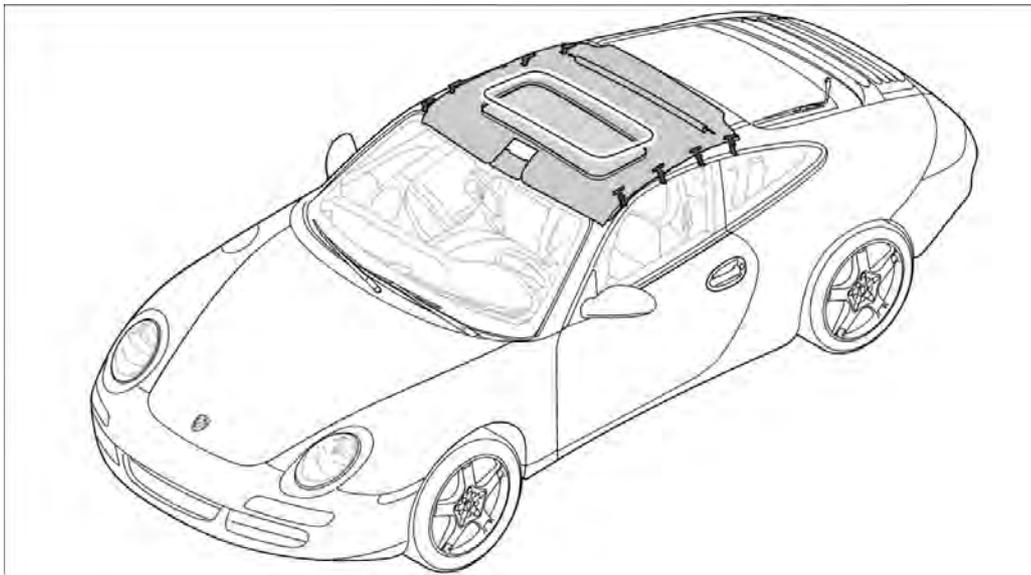

Installation position for headliner

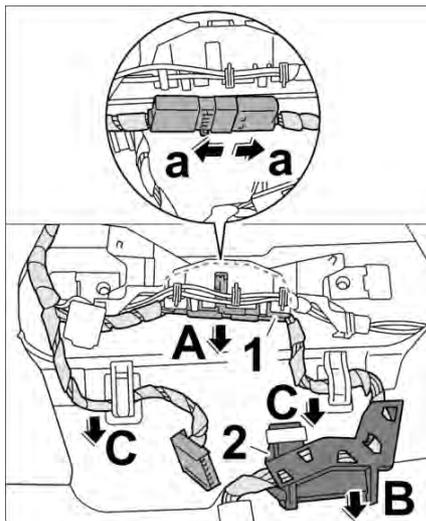


Disconnecting plug connection


1. Unclip plug connection for interior mirror **-1-** from the support **-arrow A-** and disconnect connector **-arrows a-**.
2. Unclip support for wire harness **-2-** **-arrow B-** and disengage electric lines **-arrows C-**.

Removing mounting saddle and pivot bearing for sun visor

Installation Location:

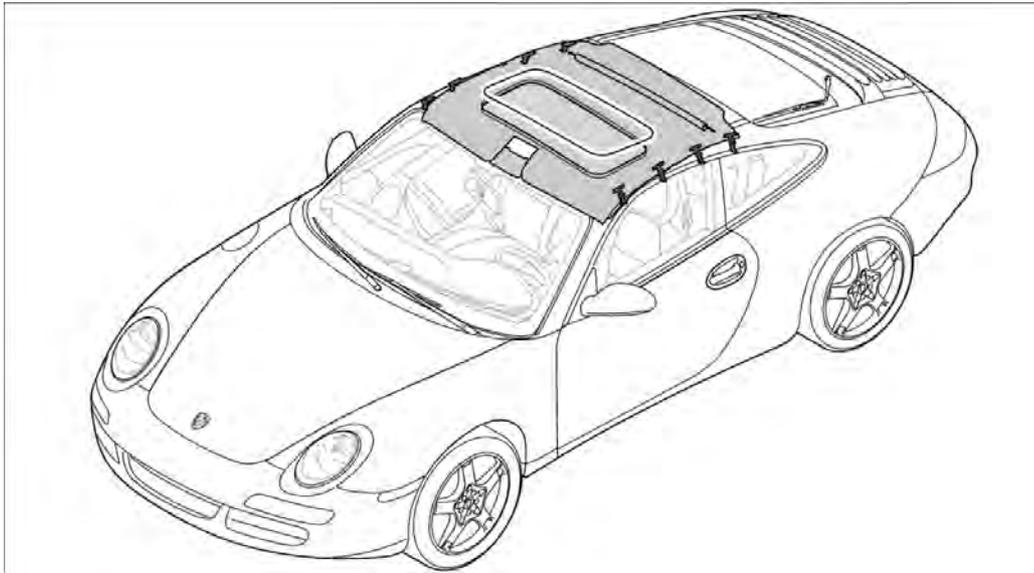

Installation position for headliner

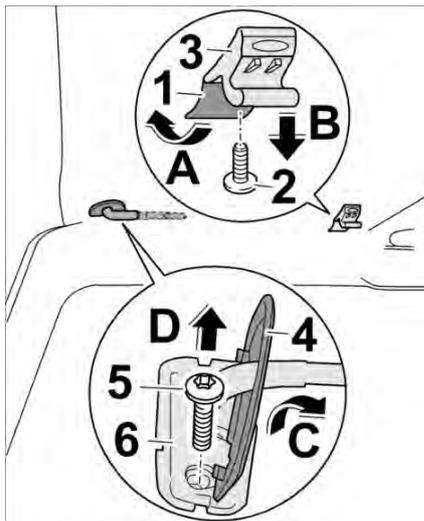


Removing mounting saddle and pivot bearing


1. Unclip cap on the mounting saddle **-1-** with a screwdriver and open **-arrow A-** .
2. Unscrew fastening screw **-2-** and remove mounting saddle **-3-** **-arrow B-** .
3. Carefully insert a screwdriver between headliner and pivot bearing and release cover **-4-** **-arrow C-** .
4. Unscrew fastening screw **-5-** and remove pivot bearing **-6-** **-arrow D-** .

Removing headliner

Installation Location:

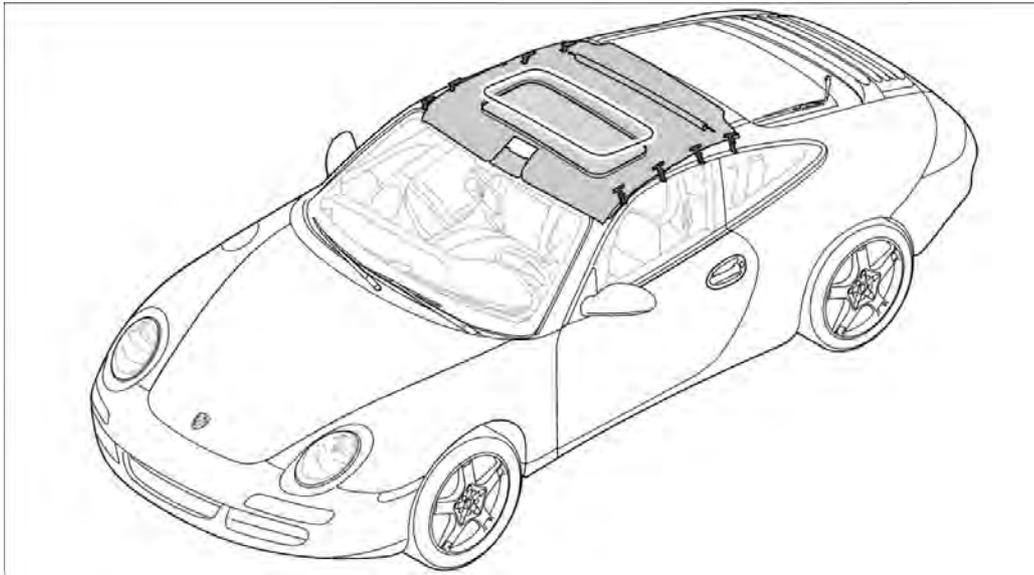


Installation position for headliner

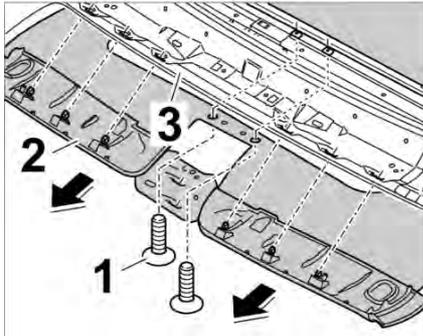


Undoing headliner at the front

1. Unscrew fastening screws **-1-** at the front in the headliner **-2-** and unclip the headliner from the cowl panel frame **-3-** in a downward direction at the left and right.

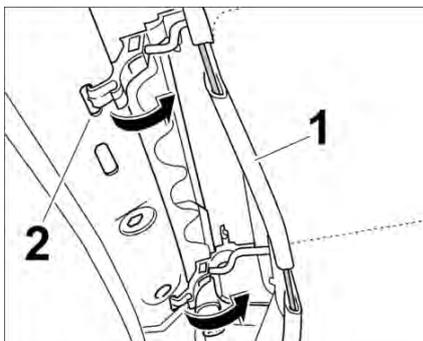


Disengaging headliner at the sides

2. Unclip the metal strut of the roof liner **-1-** from the plastic clips **-2-** at the right and left.

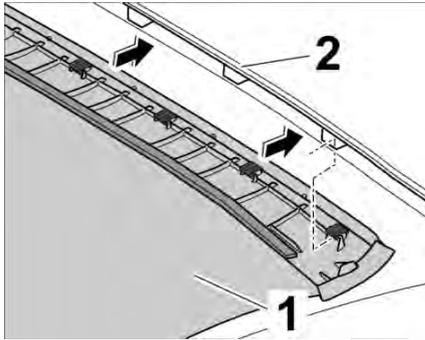


Disengaging headliner at the rear

3. Pull the rear headliner **-1-** towards the rear out of the roof frame **-2-** evenly on the left and right and disengage.

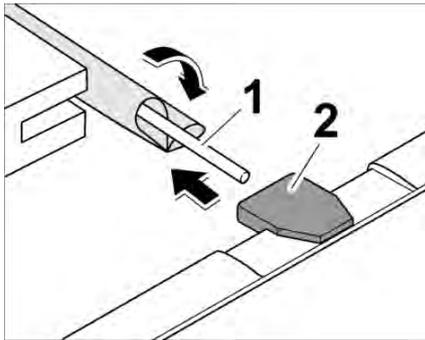

Disengaging the metal strut

4. Pull the metal brace contained in the fabric pocket **-1-** down in the centre so that it bends. Pull the metal strut **-1-** out of the bracket **-2-** on the left and right.

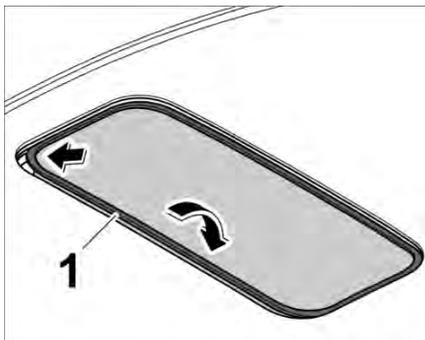

Disengaging frame


5. Pull the frame of the sliding roof cut-out backwards and downwards in the centre at the front, so that the frame overlap at the corners is reduced and it is possible to pull it out in a downward direction. Then pull out the roof frame **-1-** diagonally via the sliding roof cut-out inwards into the passenger compartment.

[top of page](#)


Installing roof lining

Fitting headliner

Installation Location:

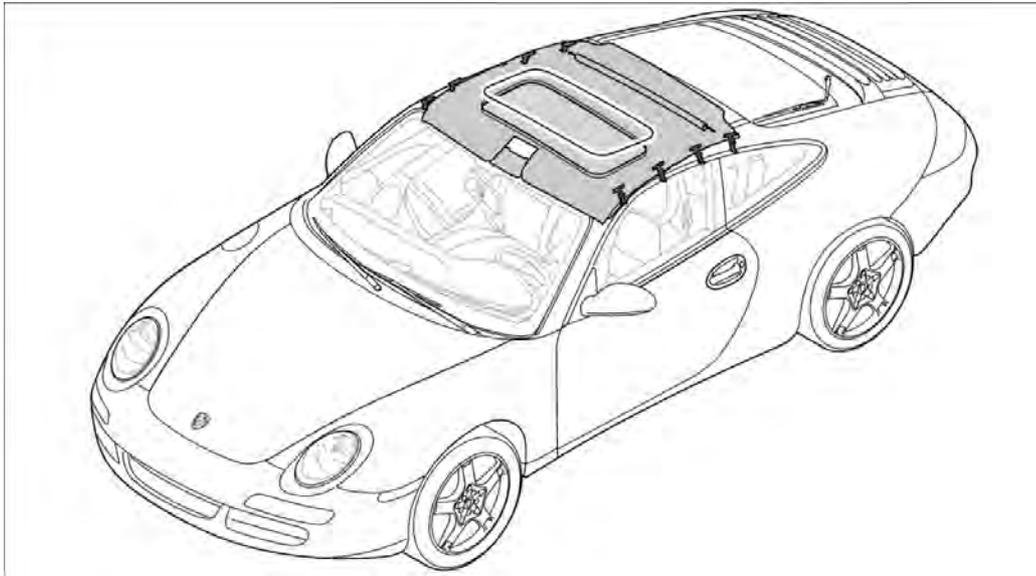


Installation position for headliner

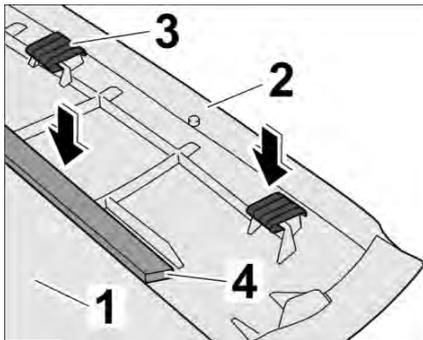

Checking roof lining

1. Before installing the headliner **-1-**, carry out a visual inspection of the rear plastic lining **-2-** to check that the Styrofoam cover **-4-** and the self-adhesive fabric parts **-3-** on the locking peg are completely seated.

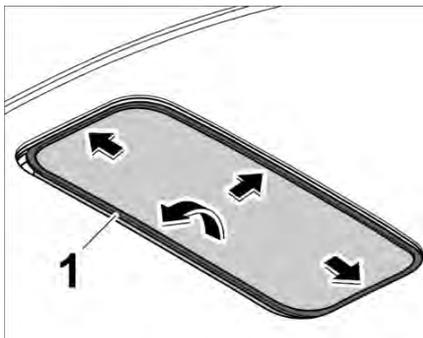


Fitting frame

2. Insert the roof frame **-1-** diagonally from the inside via the sliding roof cut-out of the passenger compartment. At the same time, pull the frame backwards in the centre at the front of the sliding


Diagnostic system: reading out fault memory and activating systems

roof cut-out, so that the frame overlap at the corners is reduced and it is possible to insert the frame into the sliding roof cut-out.

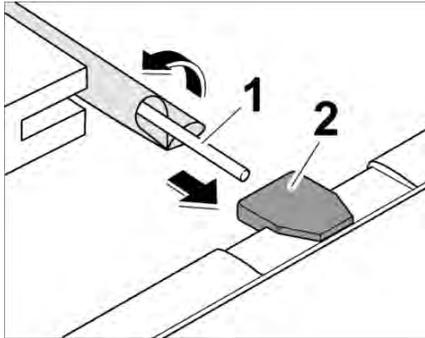


Engaging metal strut

3. Pull the metal brace contained in the fabric pocket **-1-** down in the centre so that it bends. Engage the metal strut in the bracket **-2-** on the left and right.

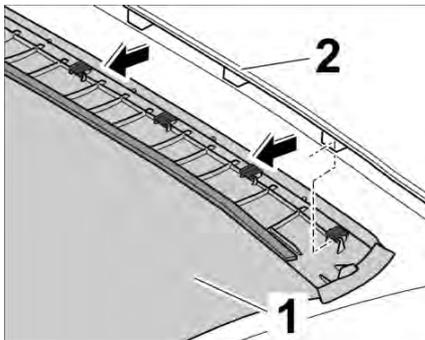


Engaging headliner at the rear

4. Engage the headliner towards the rear into the roof frame evenly on the left and right.

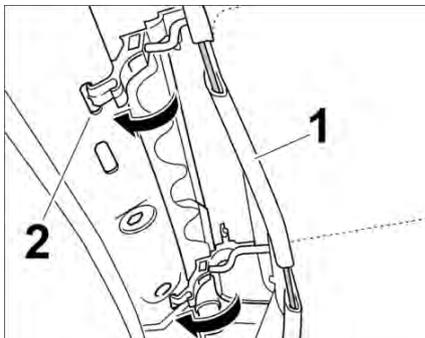

Engaging headliner at the sides

5. Engage the metal strut of the roof liner **-1-** in the plastic clips **-2-** at the left and right.

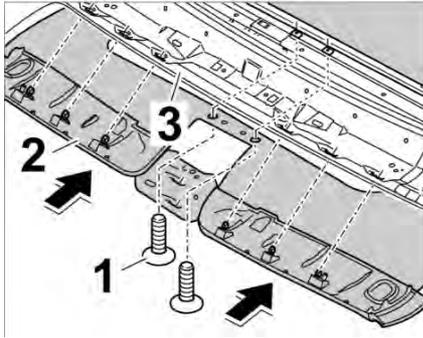


Clipping in headliner at the front


6. Position the headliner **-2-** at the left and right on the cowl panel frame **-3-** and clip in. Tighten fastening screws **-1-**.

Installing mounting saddle and pivot bearing for sun visor

Installation Location:

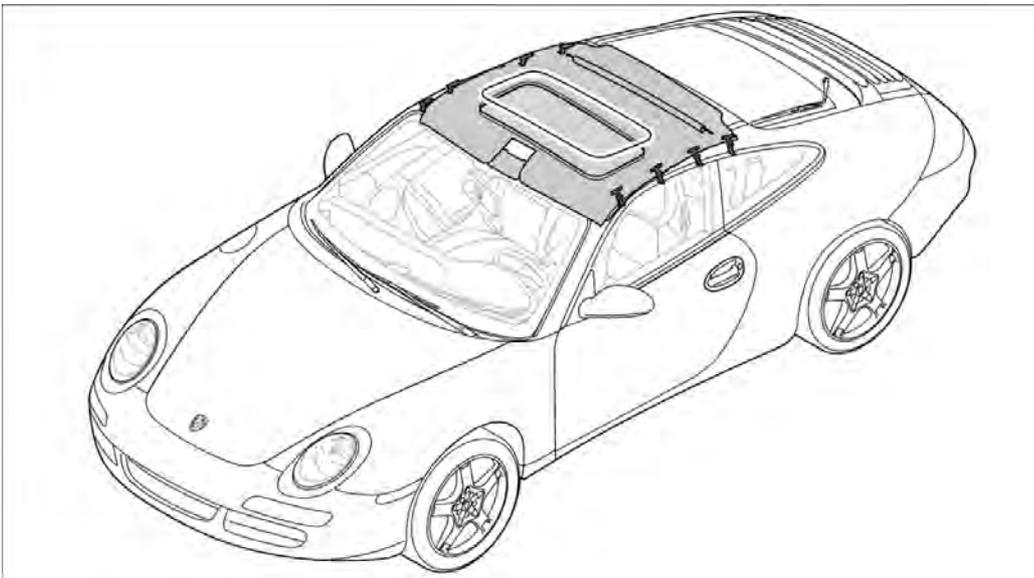

Installation position for headliner

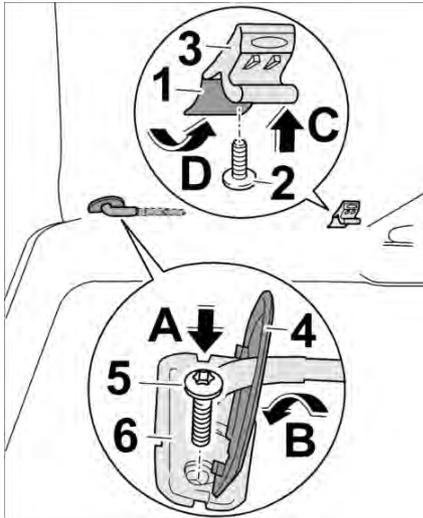


Installing mounting saddle and pivot bearing


1. Press in pivot bearing **-6-** until it clicks into place **-arrow A-** and tighten with fastening screw **-5-**.
Tightening screw **Tightening torque: 5 (3.5 ftlb.) Nm +0.5 (0.5 ftlb.) Nm**
2. Press in cover for pivot bearing **-4-** **-arrow B-**.
3. Position mounting saddle **-3-** at the top on the roof liner **-arrow C-** and secure using the fastening screw **-2-**. Tightening torque **Tightening torque: 2.5 (2 ftlb.) Nm +0.5 (0.5 ftlb.) Nm**
4. Press in cap **-1-** on mounting saddle **-arrow D-**.

Locking electric plug connection

Installation Location:

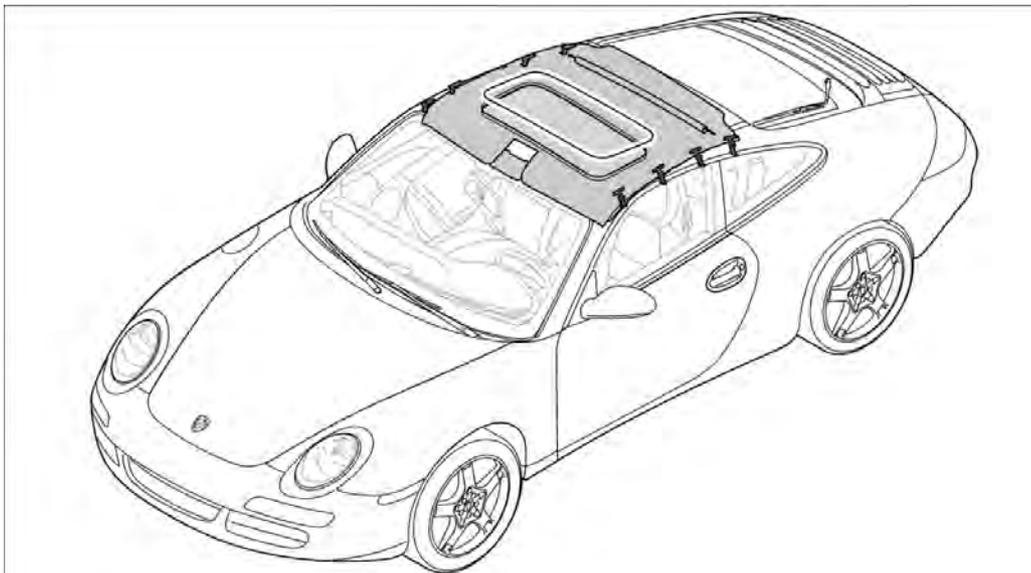


Installation position for headliner

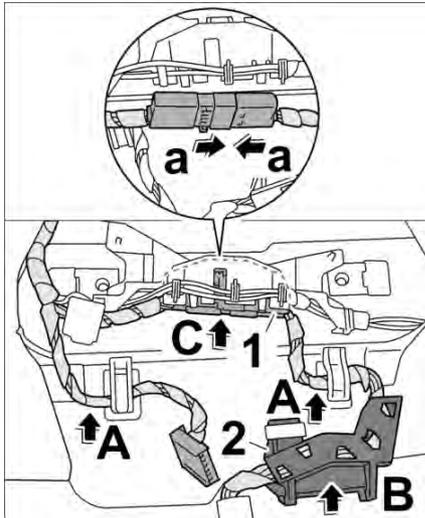

Locking plug connections


1. Engage electric lines **-arrows A-** and clip in support for wire harness **-2- -arrow B-** .
2. Connect electric plug connection for interior mirror **-1- -arrows a-** and clip into the support **-arrow C-** .

Installing cover for sunroof motor

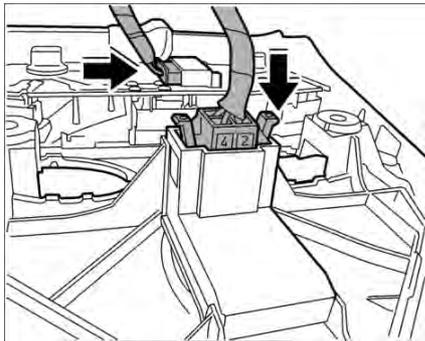

Plugging in connectors on interior light and sunroof switch

1. Position cover for sunroof motor. Plug in the connectors on the interior light and the sunroof switch until they are felt to engage.

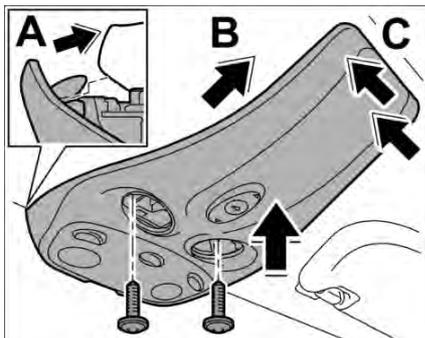


Clipping in cover of sunroof motor

- 2.

Diagnostic system: reading out fault memory and activating systems

Using the clips, engage cover for sunroof motor on roof frame **-arrow A-** , push back towards sunroof **-arrow B-** and clip in at the rear to the left and right **-arrows C-** .

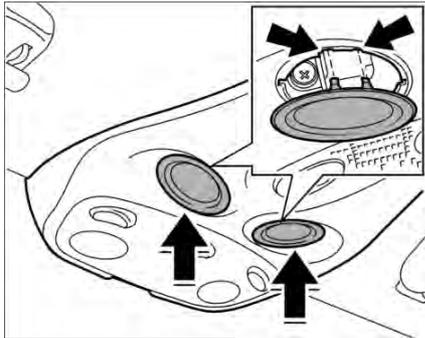

Clipping in cover for fastening screws

3. Insert cover of fastening screws into the mounts on the sunroof motor cover **-arrows-** and clip it in.
4. Switch on ignition and check that sunroof switch and interior light are working.

[top of page](#)

Subsequent work

Subsequent work

1. Install sliding-roof panel. [604019 Removing and installing sliding-roof panel - chapter on "Installing"](#)
2. Install A-pillar trim. [705719 Removing and installing A-pillar trim - "Installing" section](#)
3. Install C-pillar trim. [706819 Removing and installing C-pillar trim - chapter on "installing"](#)

997110, 997111, 997120, 997121, 997410, 997411, 997430, 997431

as of MY 2005

Country C00, C02, C05, C07, C08, C09, C10, C11, C12, C13, C14, C15, C16, C18, C19, C20, C21, C22, C23, C24, C25, C26, C27, C28, C32, C33, C34, C35, C36, C37, C38, C39, C45, C46, C98, C99



WARNUNG

Gefahr des Verlusts der Text-Bild-Zuordnung beim Ausdruck.

- **Aus technischen Gründen kann derzeit nicht ausgeschlossen werden, dass trotz einwandfreier Darstellung auf dem Bildschirm beim Ausdruck der Zusammenhang von Text und zugehörigem Bild verloren geht.**
- **Wird der Fehler nicht bemerkt, besteht die Gefahr, daß Arbeiten nicht korrekt durchgeführt werden und es dadurch zu Personen- und Sachschäden kommt.**

Diagnostic system: reading out fault memory and activating systems

Vergleichen Sie deshalb nach dem Druckvorgang unbedingt die Ausdrücke mit der Bildschirmdarstellung. Korrigieren Sie die Ausdrücke im Fehlerfall so, daß der Inhalt der Bildschirmdarstellung zutreffend wiedergegeben wird.



WARNING

Danger of losing text-figure correspondence when printing out.

- **For technical reasons, it can currently not be ruled out that the correspondence between text and associated figure can be lost when it is printed out, even though the display on the screen is correct.**
- **If the fault is not noticed, there is the danger that work will not be performed correctly which can cause injury and damage.**

Therefore, always compare printouts with the screen display after printing them out. Correct the printouts if they are faulty so that the content of the screen display matches that on the printouts.



AVERTISSEMENT

Risque de perte de la correspondance texte-illustration lors de l'impression papier.

- **Pour des raisons techniques, il ne peut pas être exclu à l'heure actuelle que, même en cas d'affichage correct à l'écran, la correspondance entre le texte et l'illustration puisse être erronée sur l'impression papier.**
- **Si l'erreur passe inaperçue, on court le risque d'exécuter certaines opérations de manière incorrecte pouvant conduire à des dommages corporels et matériels.**

Comparez impérativement pour cette raison les impressions papier avec l'affichage à l'écran. Corrigez-les en cas d'erreur de manière à reproduire correctement l'affichage à l'écran.



ATTENZIONE

Pericolo di perdita dell'abbinamento testo-immagine nella stampa.

- **Per motivi tecnici non è escluso che, nonostante la rappresentazione sullo schermo risulti perfetta, durante la stampa venga persa la corrispondenza fra testo e relativa immagine.**
- **Se tale difetto non viene rilevato vi è il pericolo che i lavori non siano eseguiti correttamente; ciò può avere come conseguenza lesioni e danneggiamenti.**

Per questo motivo, dopo la stampa è assolutamente necessario confrontare le stampe con la rappresentazione sullo schermo. In caso di errore si prega di correggere le stampe, così da garantire la riproduzione esatta della rappresentazione sullo schermo.



ADVERTENCIA

Al imprimir se corre el riesgo de perder la correcta asignación de las figuras al texto.

Diagnostic system: reading out fault memory and activating systems

- **Por motivos técnicos, por el momento no se puede descartar que, aun siendo correcta la imagen que aparezca en la pantalla, al imprimir se pierda la correlación entre el texto y la figura correspondiente.**
- **Si este error pasara desapercibido, existe el riesgo de que los trabajos no se ejecuten de forma correcta y, por tanto, se produzcan daños personales y materiales.**

Por ello le rogamos que tras el proceso de impresión compare siempre las copias impresas con la imagen de la pantalla. En caso de error, corrija las copias impresas de forma que se correspondan con el contenido de la imagen de la pantalla.