
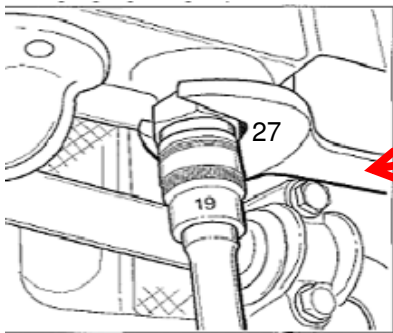
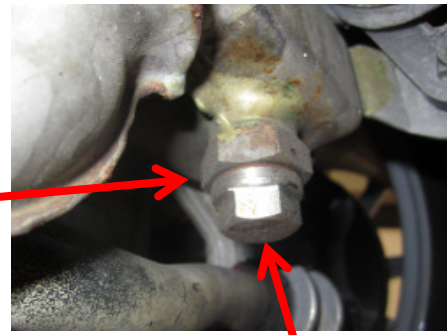


Step 5: Hold 27mm oil tank bolt and remove 19mm oil tank drain plug

Step 6: Drain into catch pan. Leave unplugged because when you remove the oil filter, more oil comes out.

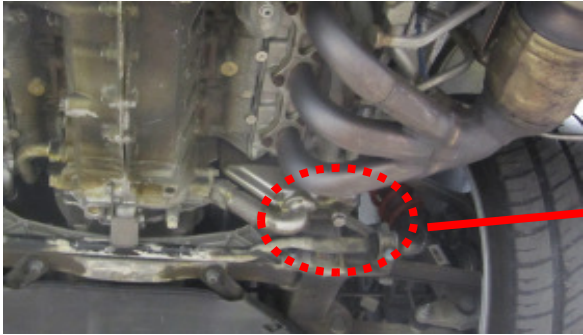

- Hold upper nut with 27mm wrench
- 19mm bolt with copper crush washer

Step 7: Remove Oil Filter

- Note: Go and buy oil filter wrench. 75mm 14 flute
- I used channel locks and torn the filter housing. You can find at Autozone, Pepboys, Oreilys, Advanced Auto
- Get a towel to keep oil from dripping all over

