

996 Group 1 Engine From 15.pdf (SECURED) - Adobe Reader

File Edit View Window Help


335 / 349 66.7%

Tools Sign Comment


**Bookmarks**

- Removing and installing temperature sensor for coolant - GT3
- Oil/coolant mixing
- Checking the cooling system for leaks
- Removing and installing coolant hoses - GT3
  - Removing coolant hoses**
  - Installing coolant hoses
  - Tightening torques


19. Check or renew the locking clip if necessary. Remount the locking clip onto the coolant necks.

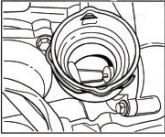

20. Remove coolant flange on the right cylinder head (cylinder 4-6). Remove the holding clamp on the coolant pipe. Loosen two hexagon-head bolts. Remove holder and coolant flange.

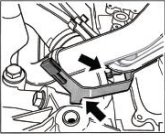

21. Loosen hose clamp -arrow- on the coolant hose and pull coolant hose off the bracket.

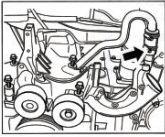

Renlist Discussion F... GT3 Service Manual 996 Group 1 Engine F... 9:42 PM