


Front axle


Measure from road contact surface to the lower edge of the hexagon-head bolt of the tension-strut screw connection to the body.

Nominal values for front and rear axles are given on Page 44 - 3.

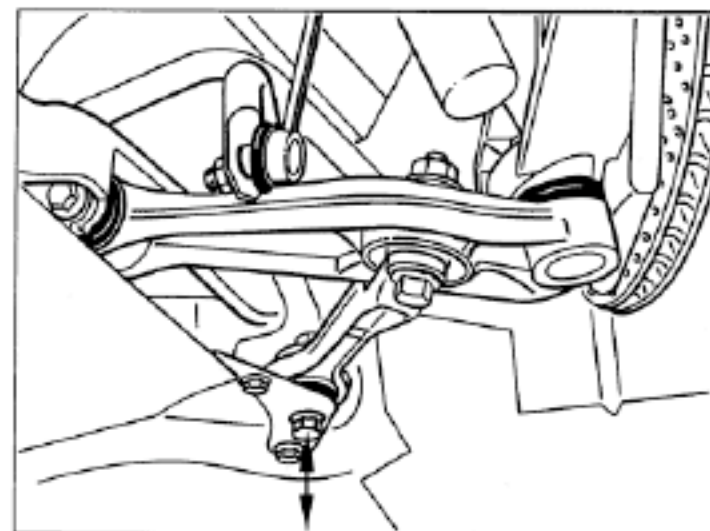

Rear axle

Measure from wheel contact surface to the locating bore in the rear-axle side section (between toe and camber eccentrics).

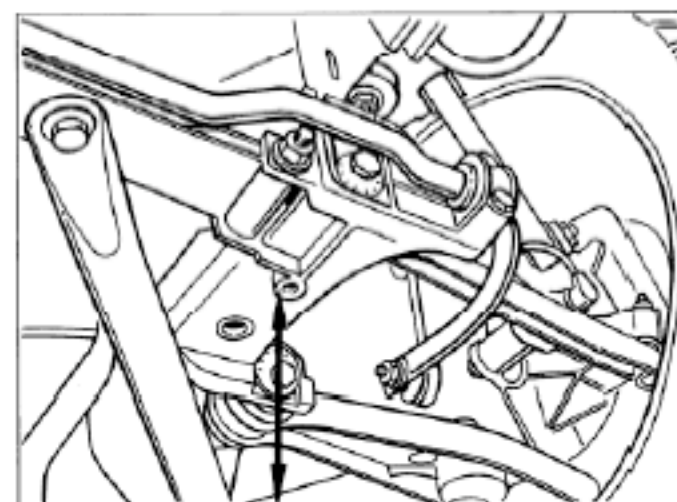

Wheel alignment

Notes