Oil Change - Mezger M64 Block Engine

Parts

996 107 225 52(53) oil filter (includes large O-ring)

999 707 465 40 separate smaller O-ring

900 123 010 20 copper ring for the oil tank 44 ft-lb torque

900 123 118 30 aluminum ring for the crankcase 52 ft-lb torque

Tools

15mm ratchet socket for crankcase drain 19mm ratchet socket for oil tank drain 27mm open ended wrench for counter torque Oil filter wrench 000 721 920 40

- 1. Slightly loosen the filter cap (one turn is plenty).
- 2. Start the car and let the engine warm up. The oil should be changed when the engine has reached normal operating temperature. Caution... the oil will be hot.
- 3. Jack up the vehicle at the correct points and install jack stands.
- 4. Remove the oil drain screw from crankcase and collect the engine oil in a disposal container.
- 5. Remove the oil filter so to allow more oil to drain out.
- 6. Identify the oil tank drain bolt and drain the oil over 20 minutes. Use a 27mm open ended wrench to counter torque the drain bolt.
- 7. While waiting for the oil to completely drain, use a syringe or turkey baster to remove the remaining oil from the oil filter canister.
- 8. Moisten the rings for the new filter with a touch of new motor oil.
- 9. Reassemble the filter, ring seal, and oil cap. Torque for the oil filter casing is 19 ft-lb.
- 10. Once both bolts have drained completely reinstall the bolts with new crush rings, 44 lb-ft torque for the oil tank with the copper crush ring, 52 lb-ft for the crankcase bolt and aluminum crush ring. Do not over-torque either bolt. The female threads can easily get stripped.
- 11. Remove jacks stands.
- 12. Add approximately 8.5 quarts of oil and check oil level. Add more as needed.



