

## 2009 Recommended Service Maintenance Quick Reference List – All 987/997

Includes 911 Turbo  
Excludes 911 GT2

	Miles										or	Years			
Use applicable Maintenance Sheets to perform actual maintenance. <b>Oil Change Service Sheet</b> (Every 10,000 mile) – P/N PNA 000 162 EF <i>Note: If the mileage for scheduled "oil change" is not reached, oil change must be performed every year.</i> <b>Intermediate Maintenance Sheet</b> (Every 20,000 mile) – P/N PNA 000 162 EG <b>Intermediate Maintenance Sheet</b> (Every 20,000 mile) – P/N PNA 000 162 HA <i>Note: If the mileage for scheduled "intermediate maintenance" is not reached, intermediate maintenance must be performed no later than after 2, 6, 10..... years.</i> <b>Maintenance Sheet</b> (Every 40,000 mile) – P/N PNA 000 162 EH <b>Maintenance Sheet</b> (Every 40,000 mile) – P/N PNA 000 162 HB <i>Note: If the mileage for scheduled "maintenance" is not reached, maintenance must be performed no later than after 4, 8, 12..... years.</i>	Every 10,000	Every 20,000	Every 30,000	Every 40,000	Every 50,000	Every 60,000	Every 70,000	Every 80,000	Every 90,000	Every 1	After 2, 6, 10, 14.....	After 4, 8, 12, 16.....	4 & 8 (then every 2 yrs.)		
Diagnosis system: Read out fault memory; reset maintenance interval		✓		✓		✓		✓		✓		✓			
Change engine oil and oil filter	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓					
Underside of vehicle & engine compartment: Visual inspection for damage & leaks		✓		✓		✓		✓		✓		✓			
Underbody covers: Visual inspection, check that all are securely fastened		✓		✓		✓		✓		✓		✓			
Air filter: Replace (More often if used in dusty environments)				✓				✓				✓			
Pollen filter: Replace filter element		✓		✓		✓		✓				✓			
Steering gear: Visual inspection of the dust boots for signs of damage				✓				✓				✓			
Tie rod ends: Check play and dust boots				✓				✓				✓			
Fuel system lines and connections: Visual inspection				✓				✓				✓			
Coolant hoses: Check condition		✓		✓		✓		✓				✓			
Radiators and air intakes: Visual inspection for exterior debris and blockage		✓		✓		✓		✓				✓			
Coolant: Check level and antifreeze protection levels		✓		✓		✓		✓				✓			
Parking brake: Check free play				✓				✓				✓			
Brake system: Visual inspection of the brake pads and brake discs		✓		✓		✓		✓				✓			
Brake hoses and lines: Visual inspection for damage, correct routing and corrosion		✓		✓		✓		✓				✓			
Axle shafts: Visual inspection of the for leaks & signs of damage				✓				✓				✓			
Axle joints: Check play; visual inspection of the dust boots for signs of damage				✓				✓				✓			
Check the screw connections of front & rear suspension adjustment points are secure				✓				✓				✓			
Drive shafts: Visual inspection of the sleeves		✓		✓		✓		✓				✓			
Exhaust system: Visual inspection for leaks and signs of damage				✓				✓				✓			
Tires: Check condition and tire pressure		✓		✓		✓		✓				✓			
Check firewall body and cabrio body section drains for debris		✓		✓		✓		✓				✓			
Check door, lid locks and safety hook for the front lid function properly		✓		✓		✓		✓				✓			
Maintain & care for convertible top		✓		✓		✓		✓				✓			
Windshield wiper/washer system, headlight washer & wiper blades		✓		✓		✓		✓				✓			
Seat belts: Check operation and condition				✓				✓				✓			
Vehicle lighting: Check operation		✓		✓		✓		✓				✓			
All headlights: Check adjustment		✓		✓		✓		✓				✓			
Horn: Check operation		✓		✓		✓		✓				✓			
Battery: Check condition		✓		✓		✓		✓				✓			
Airbag system: Check operation and condition				✓				✓				✓			
Electrical equipment as well as indicator and warning lights: Check operation		✓		✓		✓		✓				✓	✓		
<b>Additional Maintenance</b>															
Change brake fluid (use only Genuine Porsche Brake fluid)	<b>Every 2 Years</b>														
Check battery for the tire pressure monitoring system	<b>After 4 Years, then every 2 Years</b>														
Assembly & running gear: Visually inspect all mounts for damage	<b>After 4 &amp; 8 Years, then every 2 Years</b>														
Replace tire sealant	<b>Every 4 Years</b>														
Replace spark plugs - 911 Turbo	<b>Every 30,000 Miles or 4 Years</b>														
Replace spark plugs - Boxster/Cayman/911(except Turbo)	<b>Every 40,000 Miles or 4 Years</b>														
Check engine drive belt	<b>At 40,000, then every 60,000 Miles or 4 Years, then every 6 Years</b>														
Replace engine drive belt	<b>Every 60,000 Miles or 6 Years</b>														
Replace fuel filter - 911 Turbo only	<b>Every 60,000 Miles or 6 Years</b>														
Change all-wheel drive controller oil (911 Carrera 4 Models only)	<b>Every 60,000 Miles or 6 Years</b>														
Change PDK clutch oil - Boxster/Cayman/911 (except Turbo)	<b>Every 60,000 Miles or 6 Years</b>														
Change front differential oil (911 Carrera 4 & Turbo Models only)	<b>Every 120,000 Miles or 12 Years</b>														
Change manual transmission oil	<b>Every 120,000 Miles or 12 Years</b>														
Change PDK transmission oil - Boxster/Cayman/911 (except Turbo)	<b>Every 120,000 Miles or 12 Years</b>														
Change Tiptronic oil and ATF filter - 911 Turbo	<b>Every 120,000 Miles or 12 Years</b>														
Change Tiptronic final drive oil - 911 Turbo	<b>Every 120,000 Miles or 12 Years</b>														