

## Replacing ATF


### Note!

- *ATF should only be replaced when the engine/transmission is cold.*
1. Remove engine guard Refer to No. 10 80 19, *Removing and installing engine guard.*
  2. Place oil collecting container underneath the vehicle.

### Caution!

**Injuries in the eye area caused by leaking ATF.**

- ◆ **Wear personal protective equipment (e.g. safety goggles, gloves).**
3. Unscrew oil drain plug **-B-** and drain ATF.

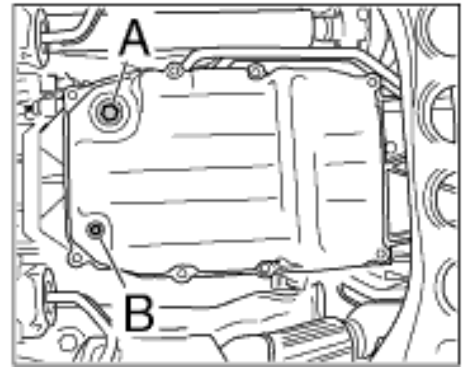

4. Screw in oil drain plug **-B-** with new sealing ring.

### Tightening torque: 28 Nm (21 ftlb.)

- The following three points also apply to the V8 Biturbo engine variant:
- ◆ Disconnect the connection on the charge air cooler. To do this, remove locking clip **-1-** and pull off the line.

