


Interrupting the opening or closing operation in the event of danger


The opening or closing operation is interrupted immediately if one of the following buttons is pressed:

- ▷ Press the button  on the key
- or**
- Release the button in the driver's door
- or**
- Briefly press the button in the rear lid trim panel
- or**
- Briefly press the release button on the rear lid.

Automatic operation can be continued again at any time. To do this, press the corresponding button.

Detection of obstacles during opening

The rear lid will stop moving if opening is blocked by an obstacle. A warning signal then sounds. When the obstacle has been removed, the rear lid can be opened by pressing


- the button  on the key
- or**
- the button in the driver's door
- or**
- the release button on the rear lid.

Detection of obstacles during closing

The closing operation is interrupted if closing of the rear lid is blocked by an obstacle. A warning signal sounds and the rear lid opens again by a few inches. When the obstacle has been removed, the rear lid can be closed by pressing one of the corresponding buttons.

Adjusting the opening height of the rear lid

The opening height of the rear lid can be individually adjusted so that the rear lid does not collide with the garage ceiling, for example. On vehicles with level control, the vehicle height changes depending on the setting of the level control system. For this reason, always adjust the opening height with the vehicle at the highest level setting so that the rear lid cannot accidentally collide with the garage ceiling, for example.

1. Stand behind the vehicle and open the rear lid.
2. Press the button  on the key to stop the automatic opening operation at around 2/3 of the opening height.
3. Now move the rear lid up by hand until the desired opening height is reached. Make sure that there is a sufficient minimum clearance from any obstacle.

4. Press and hold the button in the rear lid trim panel for approx. 3 seconds. An acknowledgement signal sounds, and the direction indicators light up once. The opening height of the rear lid has now been programmed. The rear lid can now be closed by briefly pressing the button.

This setting cannot be deleted. If a different setting is required, repeat steps 1 to 4.

Malfunctions of the rear lid drive

The automatic function is not active if the battery voltage is too low.

If a button is pressed, the rear lid lock is unlocked and a warning signal sounds for 3 seconds. The rear lid can now be opened by hand.

- ▷ Charge the vehicle battery.

Emergency operation of the rear lid

A warning signal sounds for approx. 3 seconds if the automatic opening or closing operation is interrupted by a fault.

- ▷ Open or close the rear lid by hand.