


CAM: Rear camera "+" line (activate camera, blue line).

DVD: 12 V/DC out, signal to external amp.

- Install in a small box with 3 cables out, "12 V IN" (white red), "CAM IN"(blue) and "GND"(brown).
- Cable length 30 cm with open ends.
- If possible use connector to connect cables to the box!
- Box as small as possible!

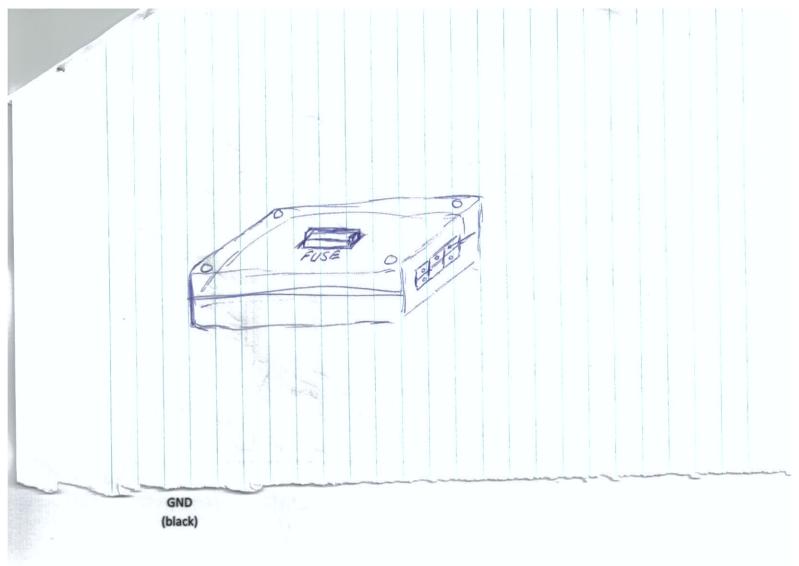

- Install in a small box with 3 cables out, "12 V IN" (white red), "CAM IN"(blue) and "GND"(brown).
- Cable length 30 cm with open ends.
- If possible use connector to connect cables to the box!
- Box as small as possible!