



PORSCHE



**Cayenne**

**Maintenance/Entretien**



## **Oil maintenance**

**As per fixed service reminder indicator, at the latest after 10,000 mls or 1 year.**

If the mileage for scheduled maintenance is not reached, oil maintenance must be performed after 1 year at the latest.

Drain engine oil

Replace oil filter

Underbody panels: Visual inspection for completeness, secure installation and damage

Visual inspection for leaks from underneath (oils and fluids)

Tires: Check condition

Brake lines: Visual inspection for damage, correct routing and corrosion

Brake hoses: Visual inspection for damage

Fill in engine oil

Reset maintenance interval



# Maintenance

At 20,000, 40,000, 60,000, 80,000 mls etc.

If the mileage for scheduled maintenance is not reached, maintenance must be performed every 2 years at the latest.

|                     |  | every 20,000 mls/2 years | every 30,000 mls/4 years | every 40,000 mls/4 years | every 60,000 mls/4 years | every 80,000 mls/4 years | every 160,000 mls/16 years | every 2 years |
|---------------------|--|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|----------------------------|---------------|
| Electrics           | Windshield wiper/washer system, headlight cleaning system: check function            | ✓                        |                          |                          |                          |                          |                            |               |
|                     | Horn: check function   | ✓                        |                          |                          |                          |                          |                            |               |
|                     | Tires: check tire pressure (TPMS)  | ✓                        |                          |                          |                          |                          |                            |               |
|                     | Diagnostic system: read out fault memory; reset maintenance interval                 | ✓                        |                          |                          |                          |                          |                            |               |
|                     | Check actuator travel of brake shoes   | ✓                        |                          |                          |                          |                          |                            |               |
| Inside the vehicle  | Particle filter: replace filter element  | ✓                        |                          |                          |                          |                          |                            |               |
|                     | Seat belts: check function and condition   |                          |                          | ✓                        |                          |                          |                            |               |
| Outside the vehicle | Check wiper blades   | ✓                        |                          |                          |                          |                          |                            |               |
|                     | Headlights: check adjustment   | ✓                        |                          |                          |                          |                          |                            |               |
|                     | Tires and spare wheel: check condition   | ✓                        |                          |                          |                          |                          |                            |               |
|                     | Brake system: check brake pads and brake discs for wear (without removing wheels)    | ✓                        |                          |                          |                          |                          |                            |               |
|                     | Brake system: check brake pads and brake discs for wear (remove wheels)              |                          |                          | ✓                        |                          |                          |                            |               |
|                     | Trailer hitch: check function  |                          |                          | ✓                        |                          |                          |                            |               |
|                     | Lubricate door arrester and fastening bolts  |                          |                          | ✓                        |                          |                          |                            |               |
|                     | Radiators and air intakes: visual inspection for external contamination and blockage | ✓                        |                          |                          |                          |                          |                            |               |



|                   |  | every 20,000 mls/2 years | every 30,000 mls/4 years | every 40,000 mls/4 years | every 60,000 mls/4 years | every 80,000 mls/4 years | every 160,000 mls/16 years | every 2 years |
|-------------------|--|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|----------------------------|---------------|
| Under the vehicle | Drain engine oil   | ✓                        |                          |                          |                          |                          |                            |               |
|                   | Underbody panels: visual inspection for completeness, secure installation and damage |                          |                          | ✓                        |                          |                          |                            |               |
|                   | Visual inspection for leaks from underneath (oils and other fluids)                  | ✓                        |                          |                          |                          |                          |                            |               |
|                   | Brake lines: visual inspection for damage, correct routing and corrosion             | ✓                        |                          |                          |                          |                          |                            |               |
|                   | Brake hoses: visual inspection for damage  | ✓                        |                          |                          |                          |                          |                            |               |
|                   | Drive shafts: visual inspection of the boots for leaks and damage                    | ✓                        |                          |                          |                          |                          |                            |               |
|                   | Cardan shaft: visual inspection of the rubber bellows for damage                     | ✓                        |                          |                          |                          |                          |                            |               |
|                   | Steering gear: visual inspection of the bellows for damage                           | ✓                        |                          |                          |                          |                          |                            |               |
|                   | Tie rod joints: check play and dust bellows  | ✓                        |                          |                          |                          |                          |                            |               |
|                   | Axle joints: check the play and visually inspect the dust boots for damage           |                          |                          | ✓                        |                          |                          |                            |               |
|                   | Exhaust system: visual inspection for leaks and damage, check mounting               |                          |                          | ✓                        |                          |                          |                            |               |
|                   | Transfer gear: change oil  |                          |                          | ✓                        |                          |                          |                            |               |
|                   | Tiptronic transmission: change ATF and ATF filter                                    |                          |                          |                          |                          |                          |                            | ✓             |
|                   | All-wheel final drive: change oil  |                          |                          |                          |                          |                          |                            | ✓*            |
|                   | Rear final drive: change oil   |                          |                          |                          |                          |                          |                            | ✓             |



|                    | every 20,000 mls/2 years  | every 30,000 mls/4 years | every 40,000 mls/4 years | every 60,000 mls/4 years | every 80,000 mls/4 years | every 160,000 mls/16 years | every 2 years |
|--------------------|---|--------------------------|--------------------------|--------------------------|--------------------------|----------------------------|---------------|
| Engine compartment | Replace oil filter  | ✓                        |                          |                          |                          |                            |               |
|                    | Fill in engine oil  | ✓                        |                          |                          |                          |                            |               |
|                    | Windshield wiper/washer system: check fluid level; check window cleaner and antifreeze, depending on time of year, only use windshield cleaners approved by Porsche   | ✓                        |                          |                          |                          |                            |               |
|                    | Coolant: check level and antifreeze   | ✓                        |                          |                          |                          |                            |               |
|                    | Check drive belt (only if vehicle is used for off-road driving)   | ✓                        |                          |                          |                          |                            |               |
|                    | Visual inspection for leaks from above (oils and other fluids)  |                          |                          | ✓                        |                          |                            |               |
|                    | Fuel lines and connections: visual inspection   |                          |                          | ✓                        |                          |                            |               |
|                    | Replace spark plugs   |                          | ✓                        |                          |                          |                            |               |
|                    | Air cleaner: replace filter element   |                          |                          |                          |                          | ✓                          |               |
| Additional work    | Change brake fluid (use only original Porsche brake fluid)  |                          |                          |                          |                          |                            | ✓             |
|                    | Prepare condition report for long-life guarantee  |                          |                          |                          |                          |                            | ✓             |
|                    | Tire sealing compound: check use-by date and replace if necessary   |                          |                          |                          |                          |                            | ✓             |
| Test drive         | Remote control, front seats, electric parking brake and footbrake, engine, transmission, steering, ParkAssist, cruise control, PSM switch, heating, sports exhaust system, air conditioning and instruments: check function | ✓                        |                          |                          |                          |                            |               |
|                    | Oils, fluids: visual inspection for leaks   | ✓                        |                          |                          |                          |                            |               |

\* Cayenne Turbo S E-Hybrid: every 100,000 mls/10 years