


Fig 5: Removing Swivel Mechanism

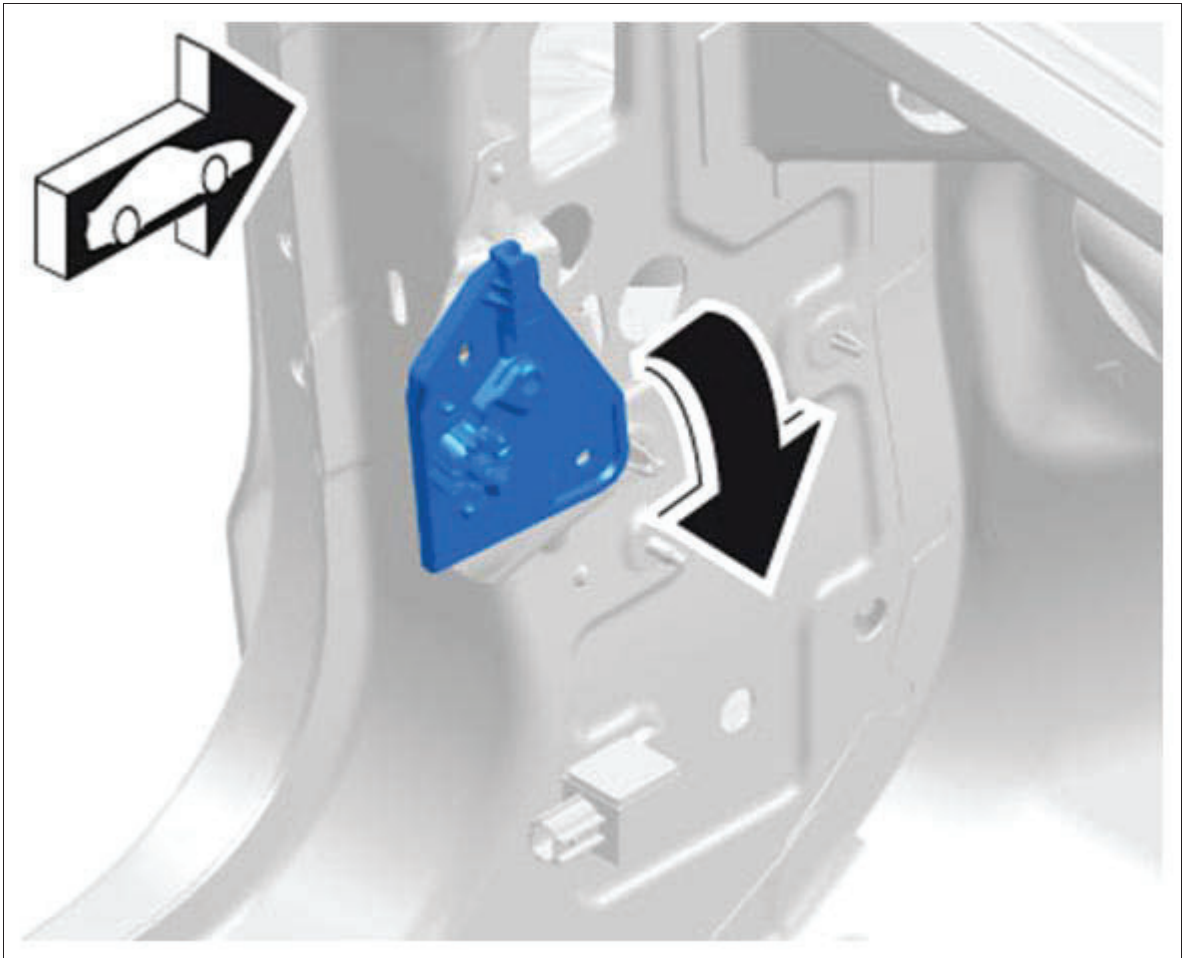


Courtesy of PORSCHE CARS NORTH AMERICA, INC.

**WM 551019 REMOVING AND INSTALLING FRONT LID RELEASE (EXCEPT PANAMERA EXECUTIVE, PANAMERA 4S SPORT EDITION, PANAMERA 4 EXECUTIVE) > INSTALLING FRONT LID RELEASE**

1. Guide in retaining lug for front lid release **-A-** and fold up the release mechanism **-B-** .


Fig 1: Positioning Front Lid

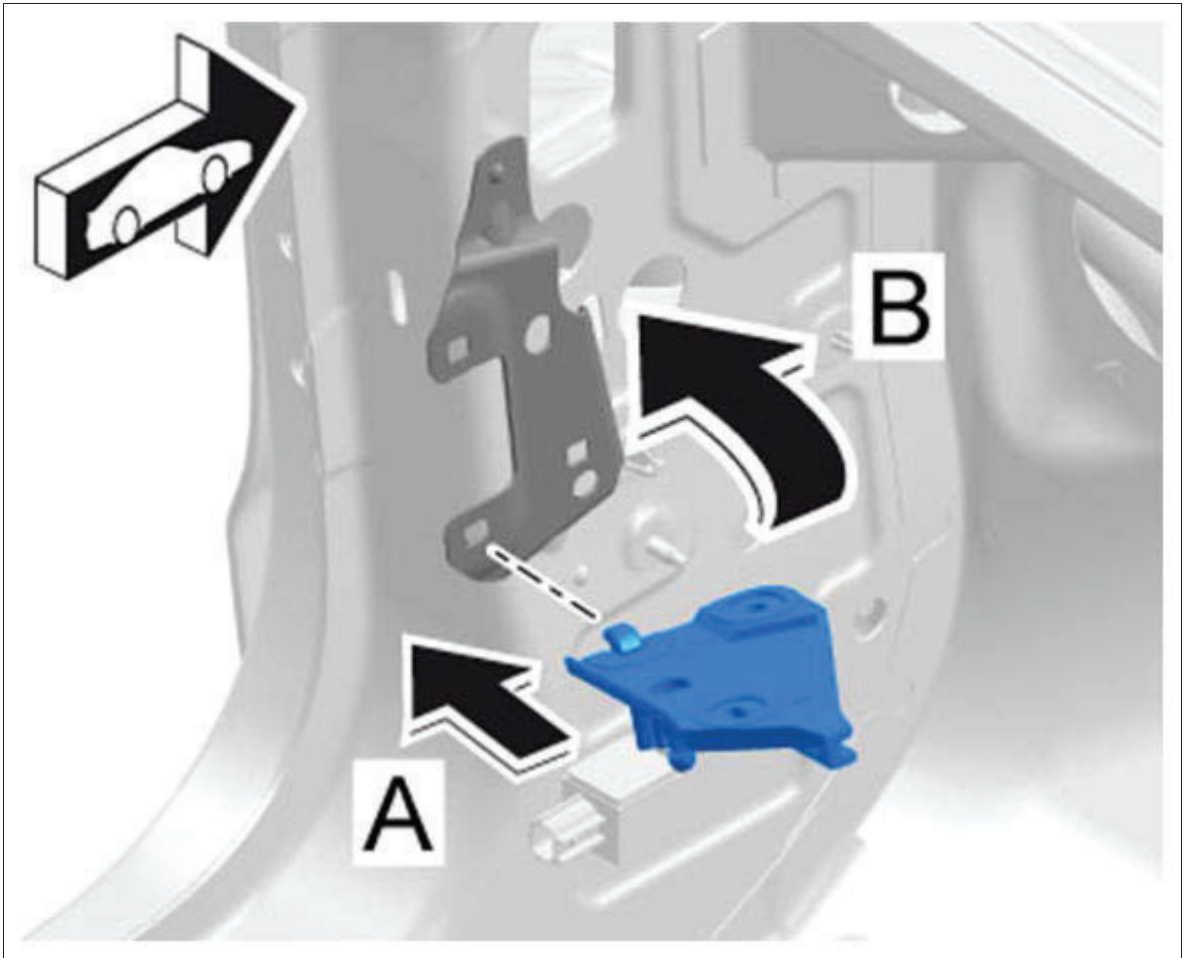

Courtesy of PORSCHE CARS NORTH AMERICA, INC.

2. Screw in fastening screws -2- → Tightening torque: 2 Nm (1.5 ftlb.) .

Fig 2: Securing Fastening Screws Mechanism

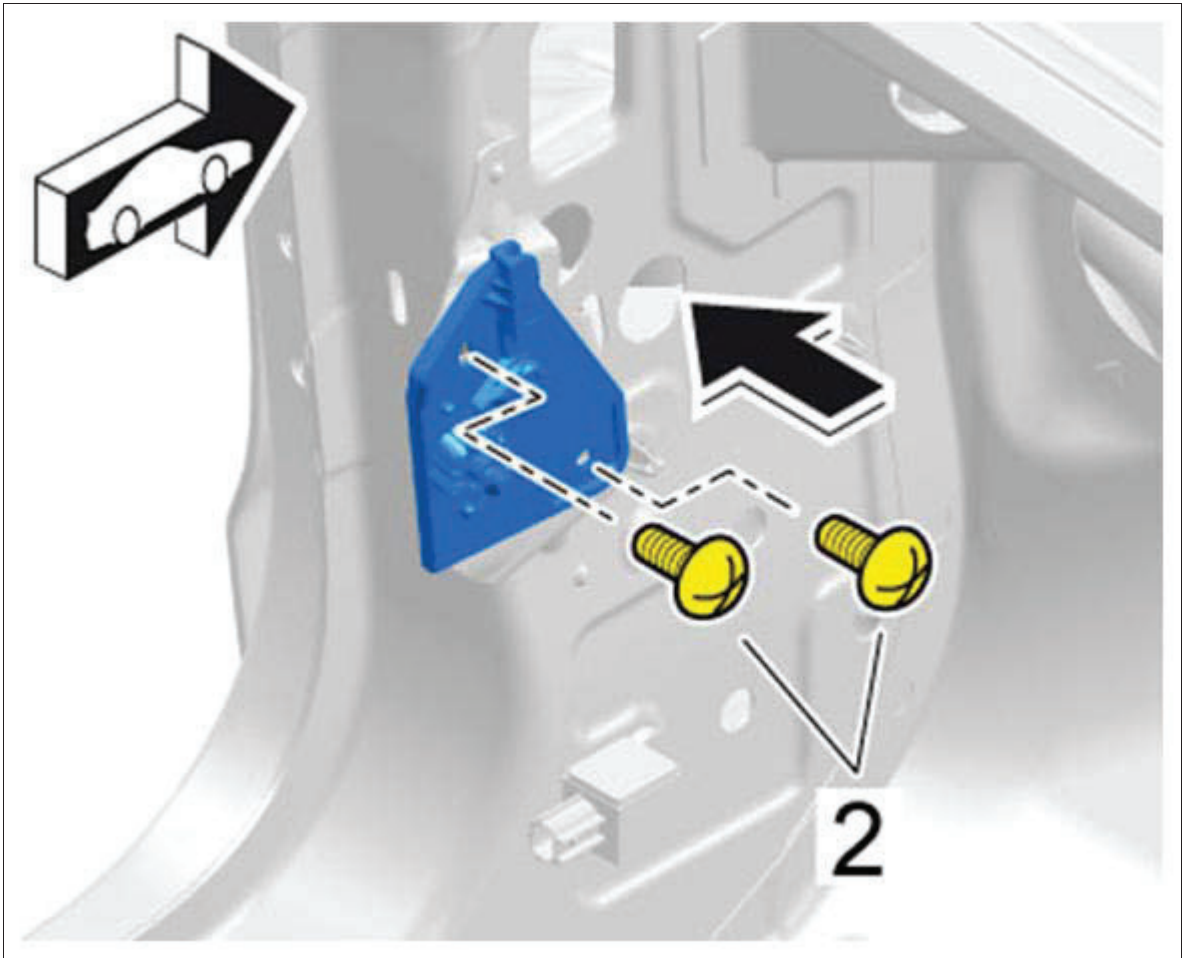


Courtesy of PORSCHE CARS NORTH AMERICA, INC.

3. Secure cable for front lid release.

1. 3.1. Fit driver into the bracket **-A-** .
2. 3.2. Clip guide tube into the bracket **-B-** .

Fig 3: Securing Cable Form Front Lid

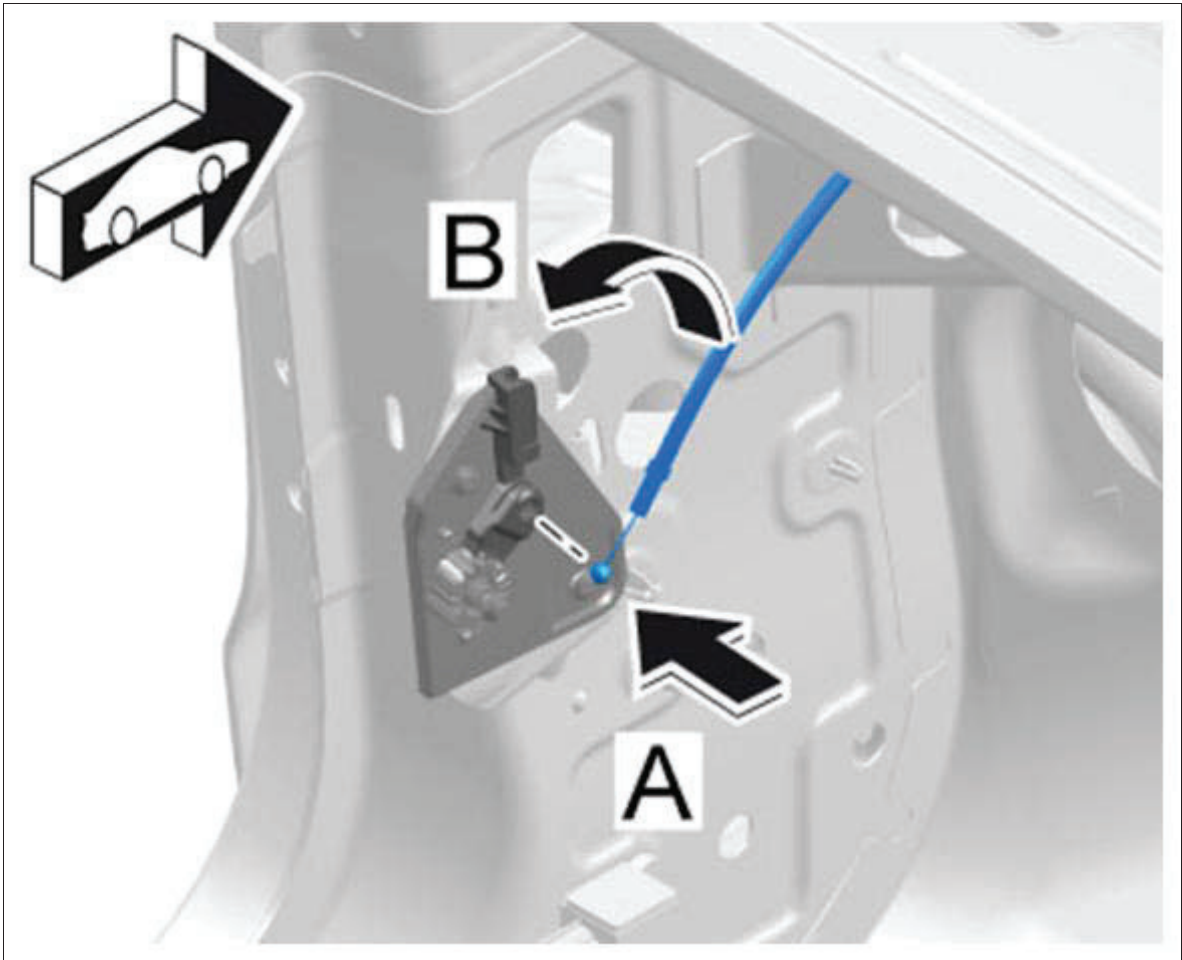


Courtesy of PORSCHE CARS NORTH AMERICA, INC.

4. Secure cable for release mechanism for lower part of front lid lock.

1. 4.1. Clip driver into installation position.

2. 4.2. Clip in cable -1- on lower part of lid lock.

Fig 4: Securing Cable On Lower Part Of Lid Lock

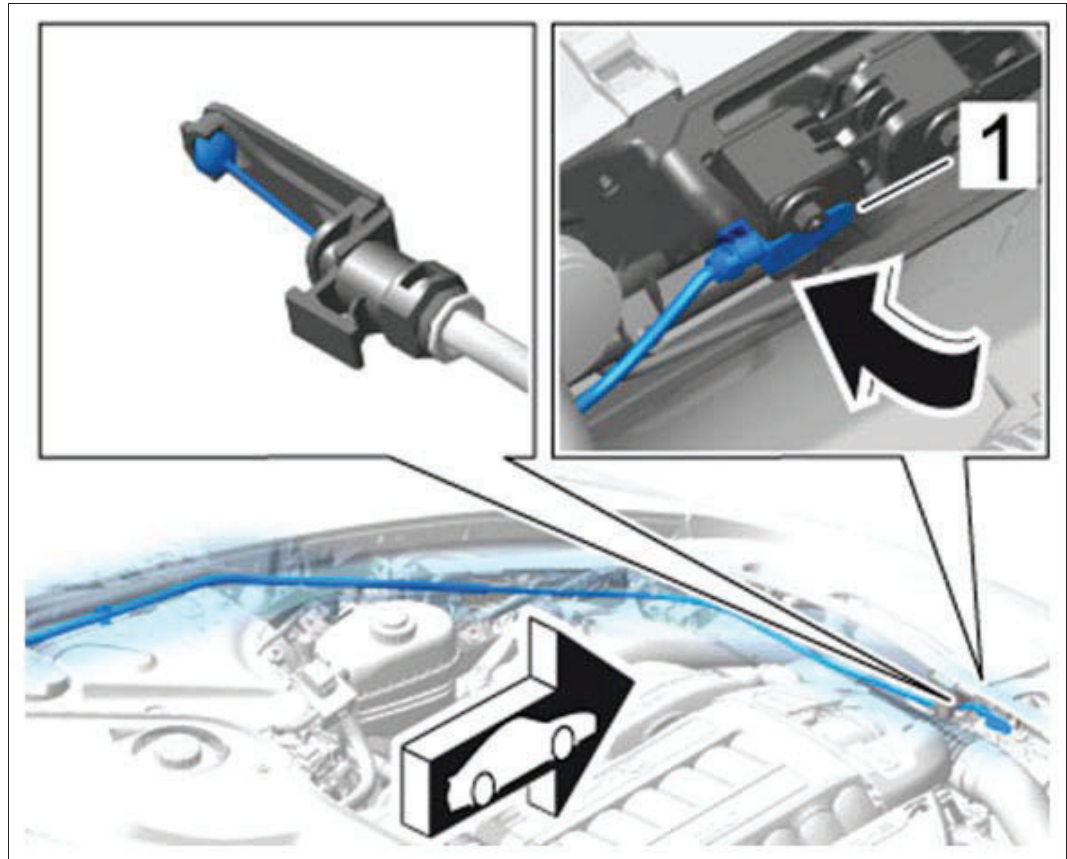

Courtesy of PORSCHE CARS NORTH AMERICA, INC.

## **WM 551019 REMOVING AND INSTALLING FRONT LID RELEASE (EXCEPT PANAMERA EXECUTIVE, PANAMERA 4S SPORT EDITION, PANAMERA 4 EXECUTIVE) > CHECKING FRONT LID LOCK > FUNCTION TEST ON FRONT LID LOCK**

### **Information**

The lid lock does not have an emergency release.

When working close to the front apron and on the various parts of the lock, carry out the following function test before closing the lid:

1. Check that the release cable is clipped fully into the bracket.
2. Lock lower part of lid lock with a screwdriver.
3. Release the lid lock using the lever in the passenger compartment.
4. Perform a visual inspection to check that the lock releases correctly.