
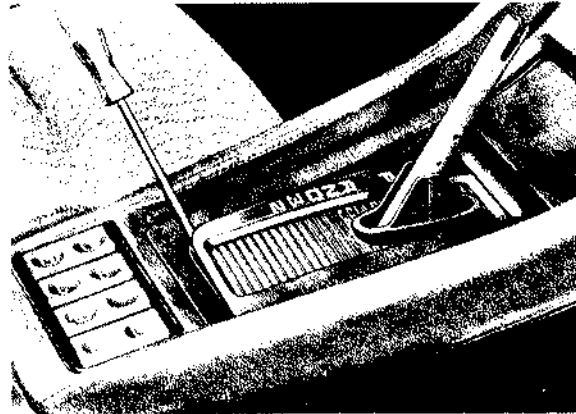


## REMOVING AND INSTALLING SELECTOR LEVER COVER FRAME

## Removing

1. Remove selector lever grip and take off rubber boot.
2. Move selector lever to position "2" and push rear locking bar forward against stop with a suitable tool (e. g. scribe).


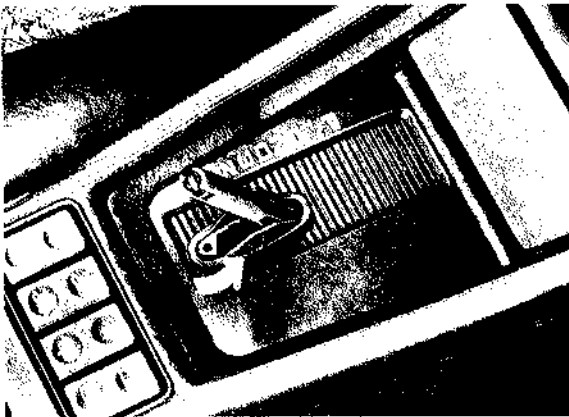


6. Move selector lever to position "N" and remove frame inclined toward rear.

## Installing

3. Move selector lever to position "R", disconnect gate and push forward as far as possible.
  4. Push front locking bar forward against stop with a suitable tool (e. g. scribe).
  5. Move selector lever to position "P" and press out cover frame carefully with a suitable screwdriver applied at the left rear corner.
1. Move selector lever to position "3".
  2. Push gate in frame forward all the way.
  3. Install cover frame in correct position and move selector lever to position "P".
  4. Push cover frame forward and move right side to correct installed position (this is done by lifting left rear corner slightly and pushing down on right side).
  5. Push down on left rear corner until frame fits in center console correctly.

6. Position selector lever between "R" and "P", disconnect gate on selector lever and push forward.
7. Push front locking bar toward rear until it engages.
8. Move selector lever to position "3" and push rear locking bar toward rear until it engages.
9. Attach gate in selector lever, install rubber boot in correct position and install selector lever grip.
10. Move selector lever in and out of all positions and make sure that cover frame fits properly.

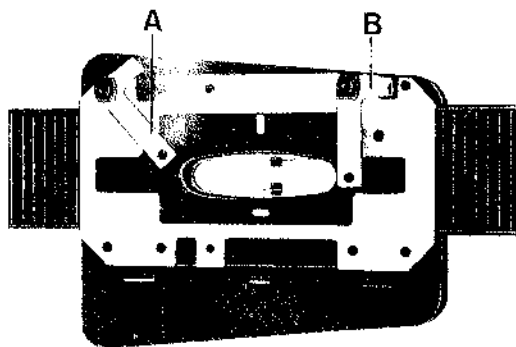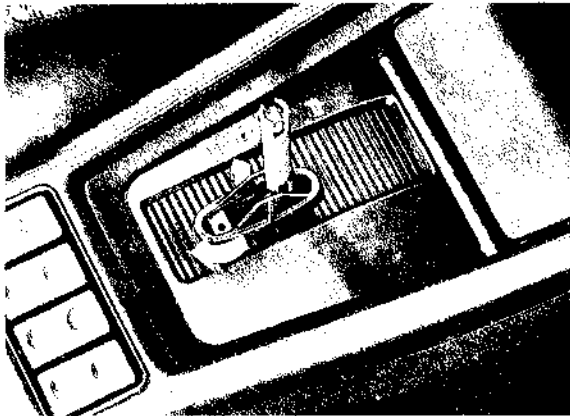

A — Locked  
B — Unlocked