


## Porsche 964, 993

### View on Wire Harness Receptacle K-Connector

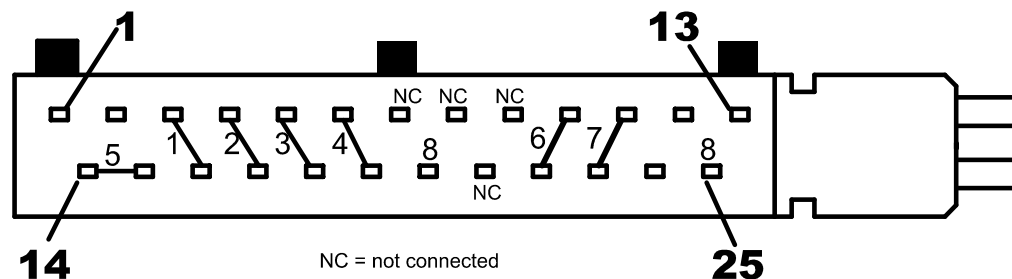

#### Pinout Servo Motors:

Connection to motors, for testing apply 12V in both directions

- |                       |           |
|-----------------------|-----------|
| 1: Fresh Air Flap:    | Pin 3-16  |
| 2: Mix Chamber Right: | Pin 4-17  |
| 3: Mix Chamber left:  | Pin 5-18  |
| 4: Footwell Flap:     | Pin 6-19  |
| 5: Defroster Flap:    | Pin 14-15 |

- Pin 12: Recirculation Flap (only 993)  
Pin 13: To DME, Coasting Prevention  
Pin 24: A/C Compressor

#### Pinout Blower Motors:

Apply Ground for the relays to turn on.

- |                                      |        |
|--------------------------------------|--------|
| 6: Oilcooler Blower Stage 1:         | Pin 10 |
| Oilcooler Blower Stage 2:            | Pin 22 |
| 7: Condenser Blower Stage 1:         | Pin 23 |
| Condenser Blower Stage 2:            | Pin 11 |
| 8: Compartment (Aux) Blower Stage 1: | Pin 20 |
| Compartment (Aux) Blower Stage 2:    | Pin 25 |

Alternated pin function for late 993 models (from 1995)  
Vacuum flap for air inlet. Located in motor compartment close to Aux blower.

**PARTisan**

Tulpenstrasse 13  
82061 Neuried  
+49 89 74495250

Germany

msattler@partisan-autoteile.de