


# 968 ENGINEERING

## AIR BOX FLOW MODIFICATIONS

(AS SEEN IN 9 MAGAZINE!)

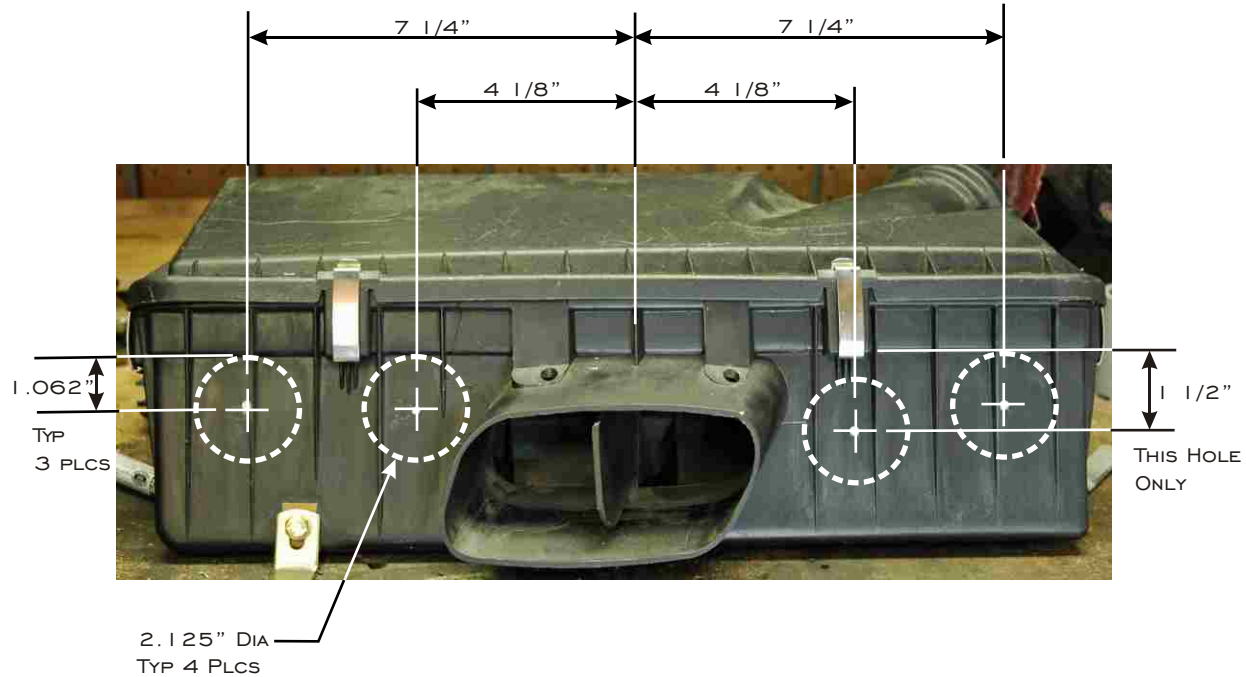

1. USING A 2.125" DIAMETER HOLE SAW, CUT 4 HOLES IN THE AIR BOX FACE AS SHOWN.



2. HOT MELT GLUE IN THE TRIM RINGS FOR A FINISHED LOOK. OTHER BONDING METHODS ARE ACCEPTABLE TOO, BUT CAN YOU ACTUALLY WAIT 5 MINUTES FOR THE EPOXY TO CURE TO TRY THIS OUT??? :)

ALSO: REMOVE THE RUBBER GASKET IN THE SHEETMETAL OPENING WHERE THE SNORKEL WAS TO ALLOW FULL AIR FLOW. YOU WILL NOT REUSE THE SNORKEL.