
Parts Information

All
D16

8

Painted Driver's Keys (hand-held transmitters)

Information: **Retrofitting**


Model Year: **As of 2010**

Vehicle Type: **911 (991), Boxster/Cayman (981), Panamera (970), Cayenne (92A)**

Note: The key fob side casings (in Black as standard) on the driver's key can be replaced with painted key fob side casings.

The colors available are listed in the Porsche Electronic Parts Catalog (PET)

The key housing is not designed to withstand repeated replacement of the key fob side casings. For this reason, the key fob side casings can **only** be replaced once.

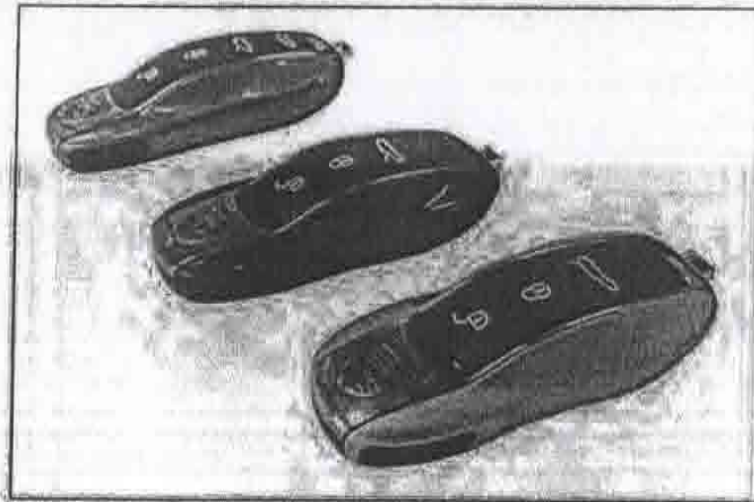

Parts List:

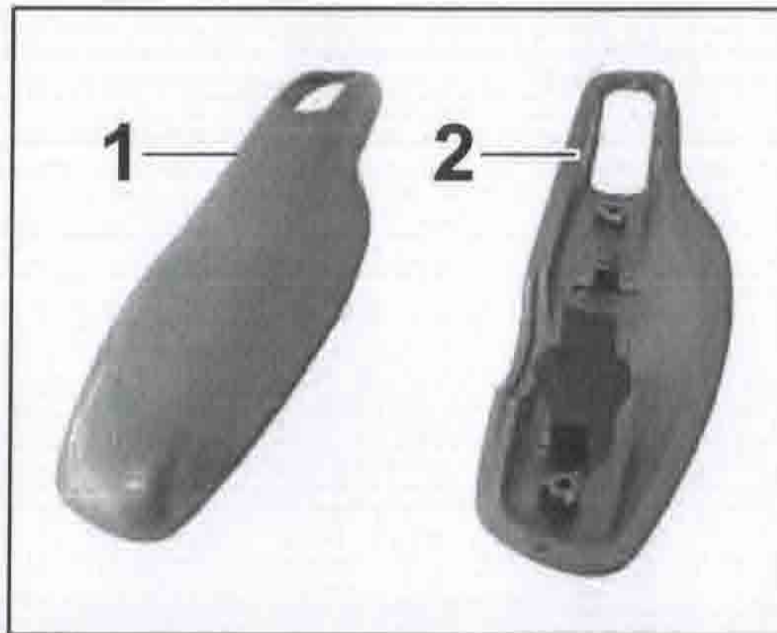


Figure 2

- 1 x Key fob side casing, left ⇒ Figure 2-1-
- 1 x Key fob side casing, right ⇒ Figure 2-2-

Work
Procedure:

NOTICE

Frequent replacement and incorrect removal and fitting of key fob side casings

- Damage to key housing (remote control/hand-held transmitter)
 - Damage to key fob side casing
 - Key fob side casings fall off as a result of damage to the catch on the remote control/hand-held transmitter or the locking lugs on the key fob side casings
 - Hairline crack(s) in chrome trim
 - Chrome coating on key housing (remote control/hand-held transmitter) flakes/chips off
 - Exclusion of warranty claims in the event of the defects/damage described above.
- ⇒ Only replace key fob side casings once.
- ⇒ Only replace key fob side casings as described.

- 1 Remove key fob side casing.

1.1 Insert a plastic pry bar (molding tool) into the gap between the key fob side casing and key housing ⇒ *Figure 3* -arrow- (at the back).

- 1 - Key fob side casing
- 2 - Key housing

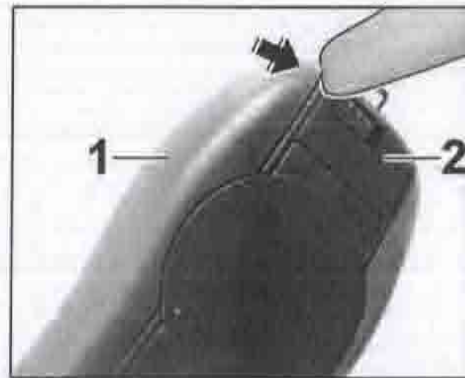


Figure 3

Carefully continue to push the pry bar (molding tool) against the resistance **without levering it** ⇒ *Figure 4* -arrow a- until the retaining lugs ⇒ *Figure 4* -1- disengage from the key housing ⇒ *Figure 4* -arrows b- (key fob side casing is lifted by approx. 3 - 4 mm).

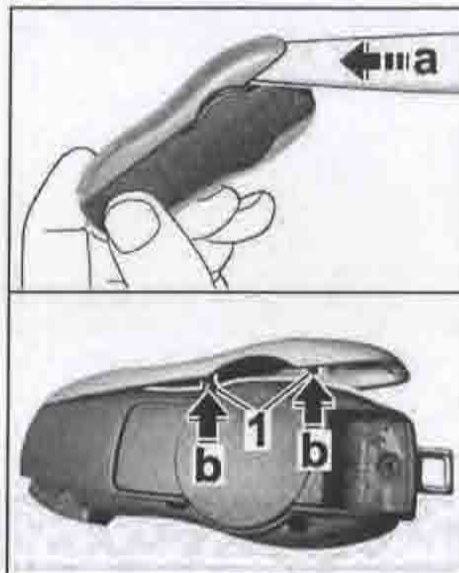


Figure 4

1.2 Slide the key fob side casing forward ⇒ *Figure 5* -arrow- until the retaining lug ⇒ *Figure 5* -1- disengages from the key housing.

2 Fit key fob side casing.



Figure 5

- 2.1 Position key fob side casing on the key housing. Move the key fob side casing to the right ⇒ *Figure 6 -arrow-* until the retaining lug ⇒ *Figure 6-1-* engages in the key housing.

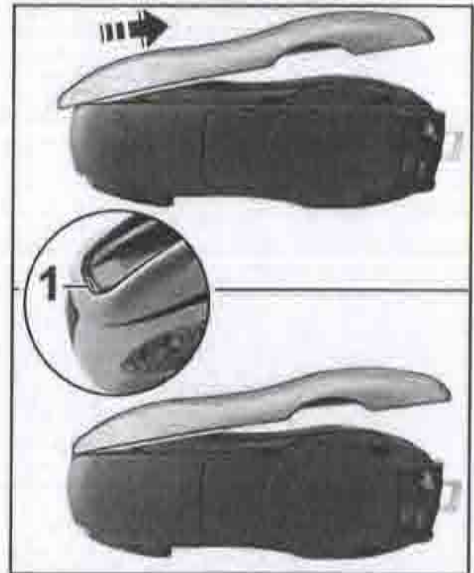


Figure 6

- 2.2 Hold the key fob side casing and key housing securely ⇒ *Figure 7 -arrows a-* and press the key fob side casing down at the rear ⇒ *Figure 7 -arrow b-* until the retaining lugs engage.

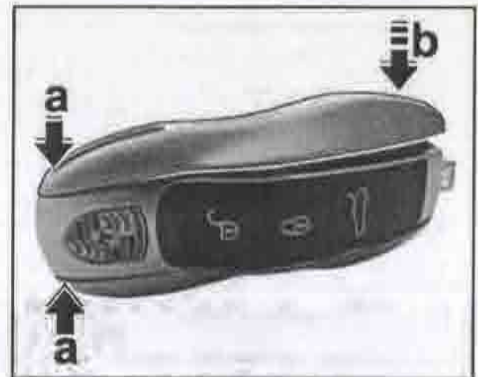


Figure 7

- 3 Replace the second key fob side casing as described in Steps 1 to 2.2.

Working Time: 96623140 Replacing key fob side casings (driver's key)

Labor time: 0 TU

Dealership	Parts Manager	Parts Specialist							
Distribution	Asst. Manager	Parts Specialist							
Routing									

Dr. Ing. h.c. F. Porsche AG is the owner of numerous trademarks, both registered and unregistered, including without limitation the Porsche Crest®, Porsche®, Boxster®, Carrera®, Cayenne®, Cayman®, Panamera®, Speedster®, Spyder®, 918 Spyder®, Tiptronic®, VarioCam®, PCM®, PDK®, 911®, 4S®, FOUR, UNCOMPROMISED®, and the model numbers and the distinctive shapes of the Porsche automobiles such as, the federally registered 911 and Boxster automobiles. The third party trademarks contained herein are the properties of their respective owners. Porsche Cars North America, Inc. believes the specifications to be correct at the time of printing. Specifications, performance standards, standard equipment, options, and other elements shown are subject to change without notice. Some options may be unavailable when a car is built. Some vehicles may be shown with non-U.S. equipment. The information contained herein is for internal authorized Porsche dealer use only and cannot be copied or distributed. Porsche recommends seat belt usage and observance of traffic laws at all times.