


(Figure B)

4

MoTAV
99-96058

Kit Preparation

1. Cut and remove the center bar and the mounting positions from the inside of the radio frame assembly removed in dash disassembly to allow room for the radio. (Figure A)
 2. Re-route the climate control wiring to the lower console area of the dash.
- Continue to kit assembly

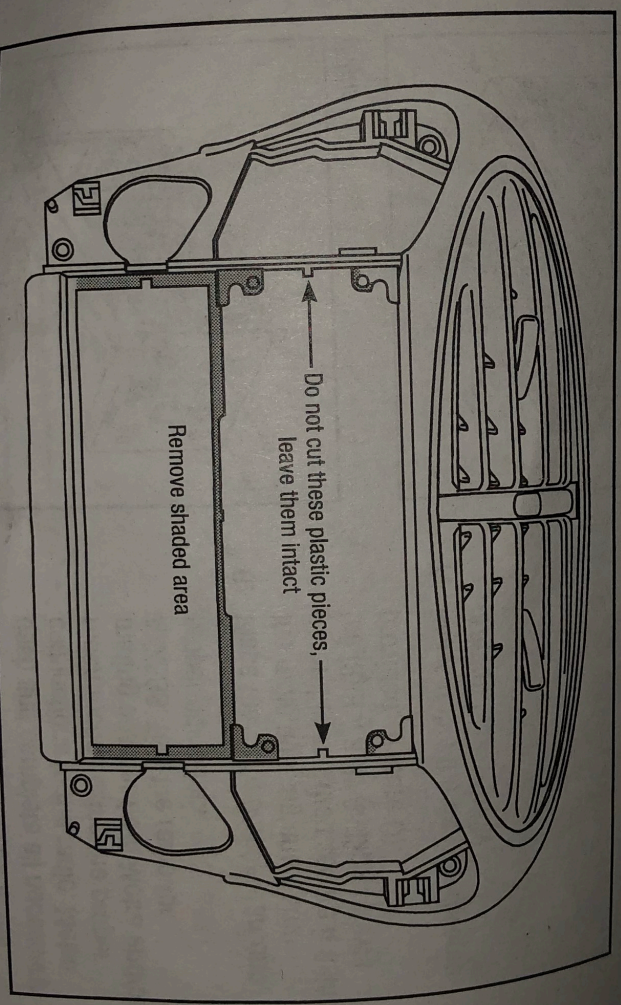

(Figure A)

5