


Floor

The surface upon which the vehicle rests is flat and approximately level.

Screen

The screen upon which headlamp beams are projected is perpendicular to the floor and the vehicle's longitudinal axis, flat, uniformly light in color, unobstructed, and wide and high enough to accommodate the vehicle beam patterns to be aimed.


The screen should be wide enough to provide at least 1 m of space outboard of the vehicle's headlamp spacing.

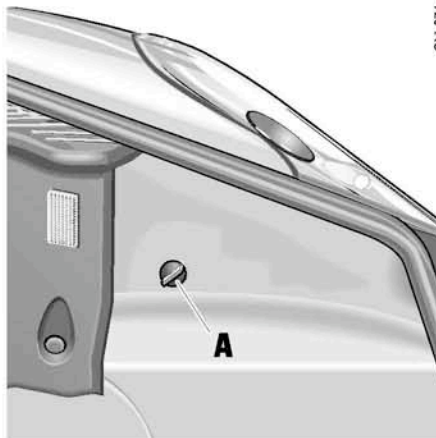

C11 074

Adjustment screws

- ▷ Detach side carpeting in luggage compartment.
Therefore unscrew plastic nut **A**.
Open the cover of the appropriate adjustment screw.
The setting is adjusted by turning the hexagon socket screws right or left, as appropriate.

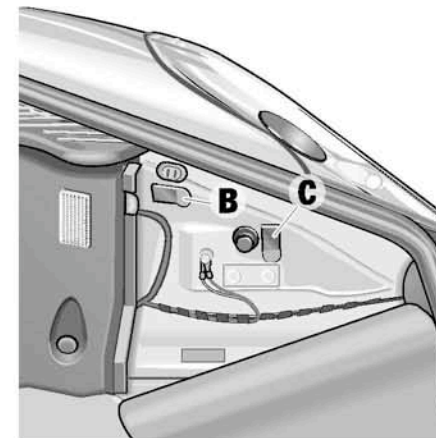

C13 077

- B** - Headlight vertical adjustment
- C** - Fog light height adjustment

Vertical adjustment (screw B)

- ▷ turn clockwise = beam moves down
- ▷ turn counterclockwise = beam moves up

Note

- ▷ Do not alter the lateral adjustment.

Fog light adjustment

The fog light adjustment **C** should only be done at a specialist workshop with an optical adjustment unit.