

GT3 Muffler Bypass System Instructions Modified from Sharkwerks with pictures

Package Contents:

- 1x Shark Werks Muffler Bypass
- 2x 3 inch t-clamp
- 2x 2.5 inch t-clamp
- 2x 2 inch t-clamp
- 3x M8 1.25 stainless bolts
- 3x large stainless washers


NOTE: Before removing any nuts you must lubricate the threads with some type of penetrating lubricant (liquid wrench).

Tools Required

- Philips screw driver
- 3/8th's ratcheting inch wrench
- 3/8th's swivel socket
- 10mm Socket
- 11mm deep socket
- 13mm Socket
- 16mm Socket
- 13mm spanner
- M6 Hex Drive
- T30 Torx Driver
- T25 Torx Driver

Remove bumper cover

1. Open rear deck lid.
2. Jack up car and put on jack stands. Remove tires. Makes it easier to reach at all screws.
3. Remove left and right tail lights – for 2007/2008 models, unscrew one large Philips head each side. On 2010+ models, mark position of screws with felt pen, then remove two Philips head per side. Some models may have T25 torx screws on each side. Slide lights back toward rear of car for removal. Unplug connector and remove lights.

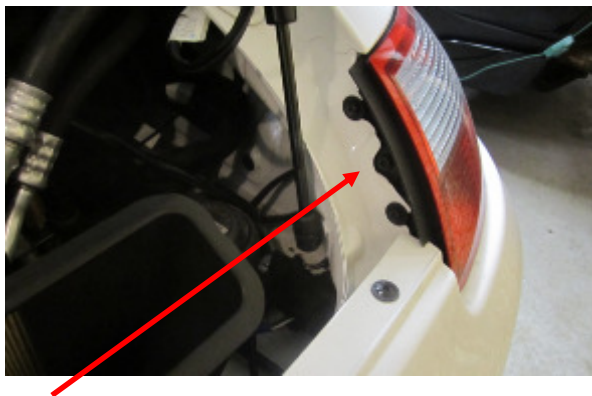

Remove center screw



Make note of assembly for installation