


12. Next take a 13mm socket and loosen all ten nuts on the center muffler (two for upper tube and three for lower tube on each side). A swivel joint may be helpful for this.

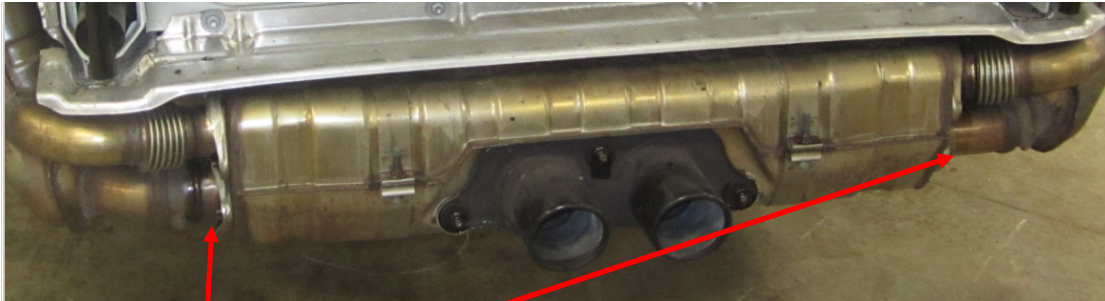

Loosen all these nuts  
Use penetrating fluid