

Current Flow Diagram Type 928 S Model 83

| | |
|------------------|---|
| PART I | POWER SUPPLY, STARTER IGNITION FUEL PUMP |
| PART II | IGNITION/STARTER SWITCH, LIGHT SWITCH HEADLIGHT |
| PART III | PARKING LIGHT FOG LIGHT, LICENSE PLATE LIGHT HEADLIGHT, PARKING LIGHT FRONT TURN SIGNAL HAZARD FLASHER |
| PART IV | REAR LIGHTS, LAMP CONTROL UNIT WINDSHIELD WIPER |
| PART V | WASHER PUMPS REAR WINDOW WIPER REAR WINDOW DEFOGGER INTERIOR LIGHT CENTRAL LOCKING SYSTEM |
| PART VI | DOOR LIGHT SEAT BELT OUTSIDE MIRROR POWER WINDOWS BRAKE PADS |
| PART VII | AUTOMATIC AIR CONDITIONER |
| PART VIII | AUTOMATIC AIR CONDITIONER SENDER UNITS |
| PART IX | CENTRAL WARNING UNIT, INSTRUMENT CLUSTER |
| PART X | CLOCK CIGARETTE LIGHTER TEMPOSTAT (CRUISE CONTROL) HORNS |

Current Flow Diagram Type 928 S Model 83

WIRE CONNECTORS

T1 - ONE-POLE

- A - NEAR SUPPLEMENTARY HEAD LIGHT LEFT
- B - NEAR SUPPLEMENTARY HEAD LIGHT RIGHT
- C - NEAR AC-COMPRESSOR
- D - IN FENDER FRONT, RIGHT
- E - IN FENDER FRONT, LEFT
- F - NEAR FRESH AIR BLOWER
- G - NEAR GLOVE COMPARTMENT
- H - NEAR FUSE/RELAY BOARD
- I - IN CENTER CONSOLE
- K - NEAR FUEL PUMP

T2 - TWO-POLE

- A - BEHIND ACCELERATOR PEDAL
- B - BEHIND REAR BUMPER
- C - BEHIND REAR BUMPER
- D - NEAR LEFT BACKWHEEL
- E - NEAR RIGHT BACKWHEEL
- F - NEAR RIGHT FRONT WHEEL
- G - NEAR LEFT FRONT WHEEL
- H - NEAR DRIVER SEAT
- I - NEAR PASSENGER SEAT

T4 - FOUR-POLE

- A - IN SPARE WHEEL WELL
- B - IN CONSOLE, RIGHT
- C - IN CONSOLE, RIGHT
- D - IN CONSOLE
- E - IN CONSOLE
- F - IN CONSOLE

T6 - SIX-POLE

- A - BEHIND SIDE COVERING, RIGHT
- B - IN REAR LID, RIGHT
- C - IN SPARE WHEEL WELL
- D - IN CONSOLE

T7 - SEVEN-POLE

- A - BEHIND LUGGAGE COMPARTMENT COVERING LEFT
- B - BEHIND LUGGAGE COMPARTMENT COVERING RIGHT

T18 - EIGHTEEN-POLE

- A - IN FOOT WELL, DRIVER SIDE
- B - IN FOOT WELL, PASSENGER SIDE

T14 - FOURTEEN-POLE


- IN ENGINE COMPARTMENT, RIGHT

GROUND TERMINALS

- ① ON FRONT LOCK MEMBER, RIGHT
- ② AT REAR OF WHEEL ARCH UNDERNEATH RIGHT REAR TRIM PANEL
- ③ ON STEERING CONSOLE
- ④ ON FRONT LOCK MEMBER, LEFT
- ⑤ ON UPPER MOUNTING FOR FUSE/RELAY BOARD
- ⑥ ON FRONT WALL

WIRE COLOURS

- | | | |
|------------|-------------|-------------|
| BK - BLACK | GN - GREEN | BR - BROWN |
| WT - WHITE | YE - YELLOW | BL - BLUE |
| RE - RED | GR - GREY | VI - VIOLET |

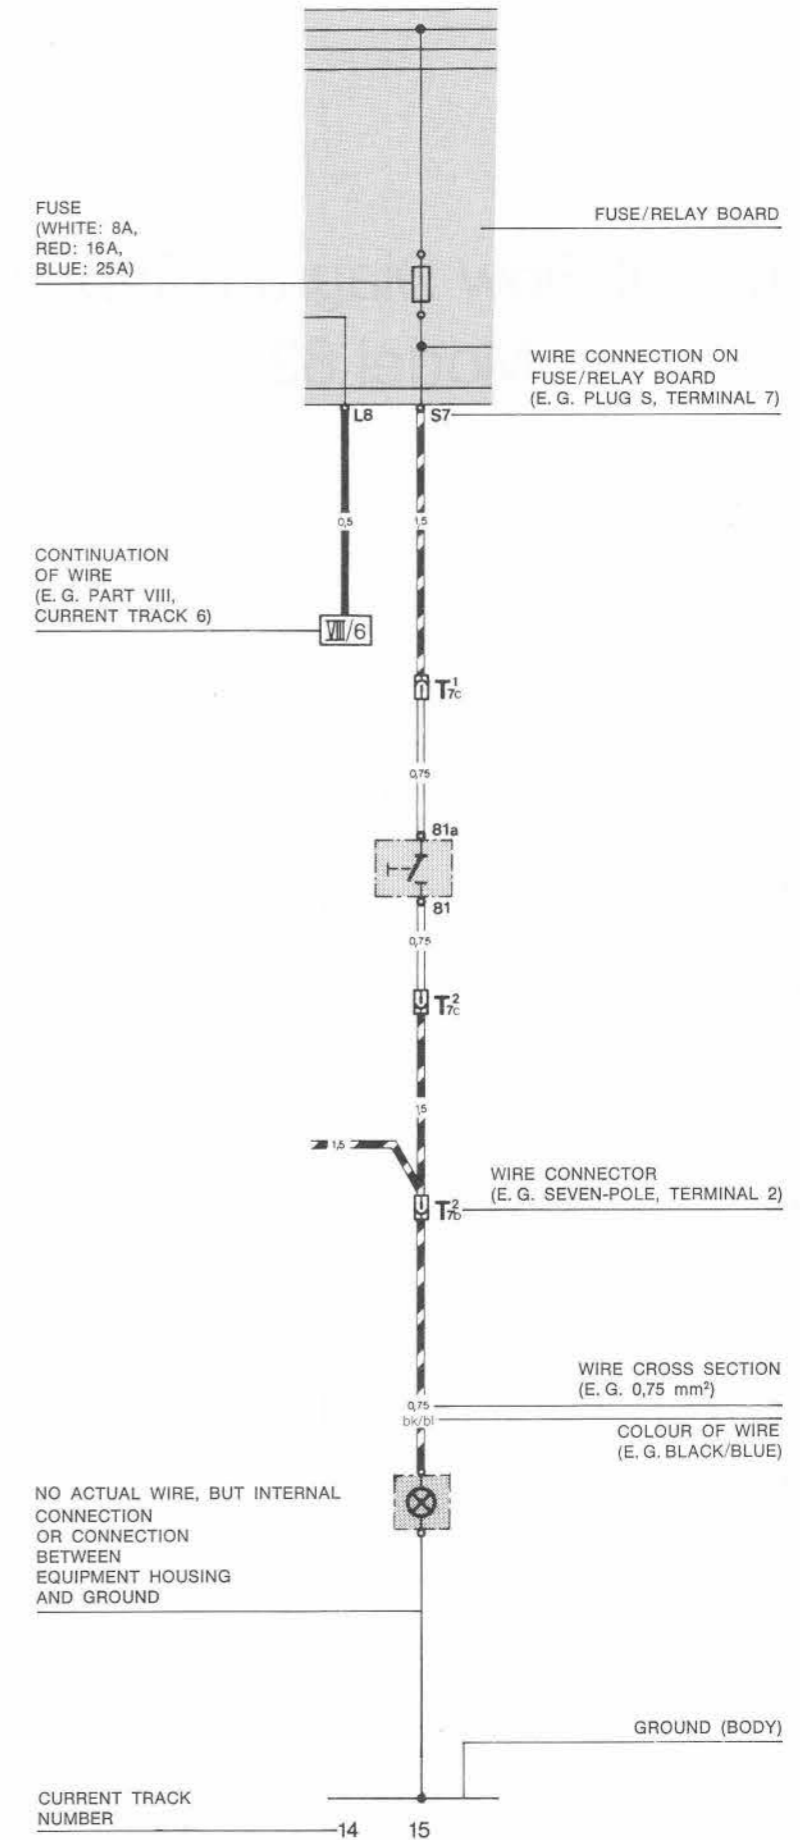


Current Flow Diagram Type 928 S Model 83 Part I

POWER SUPPLY, STARTER


IGNITION

FUEL PUMP

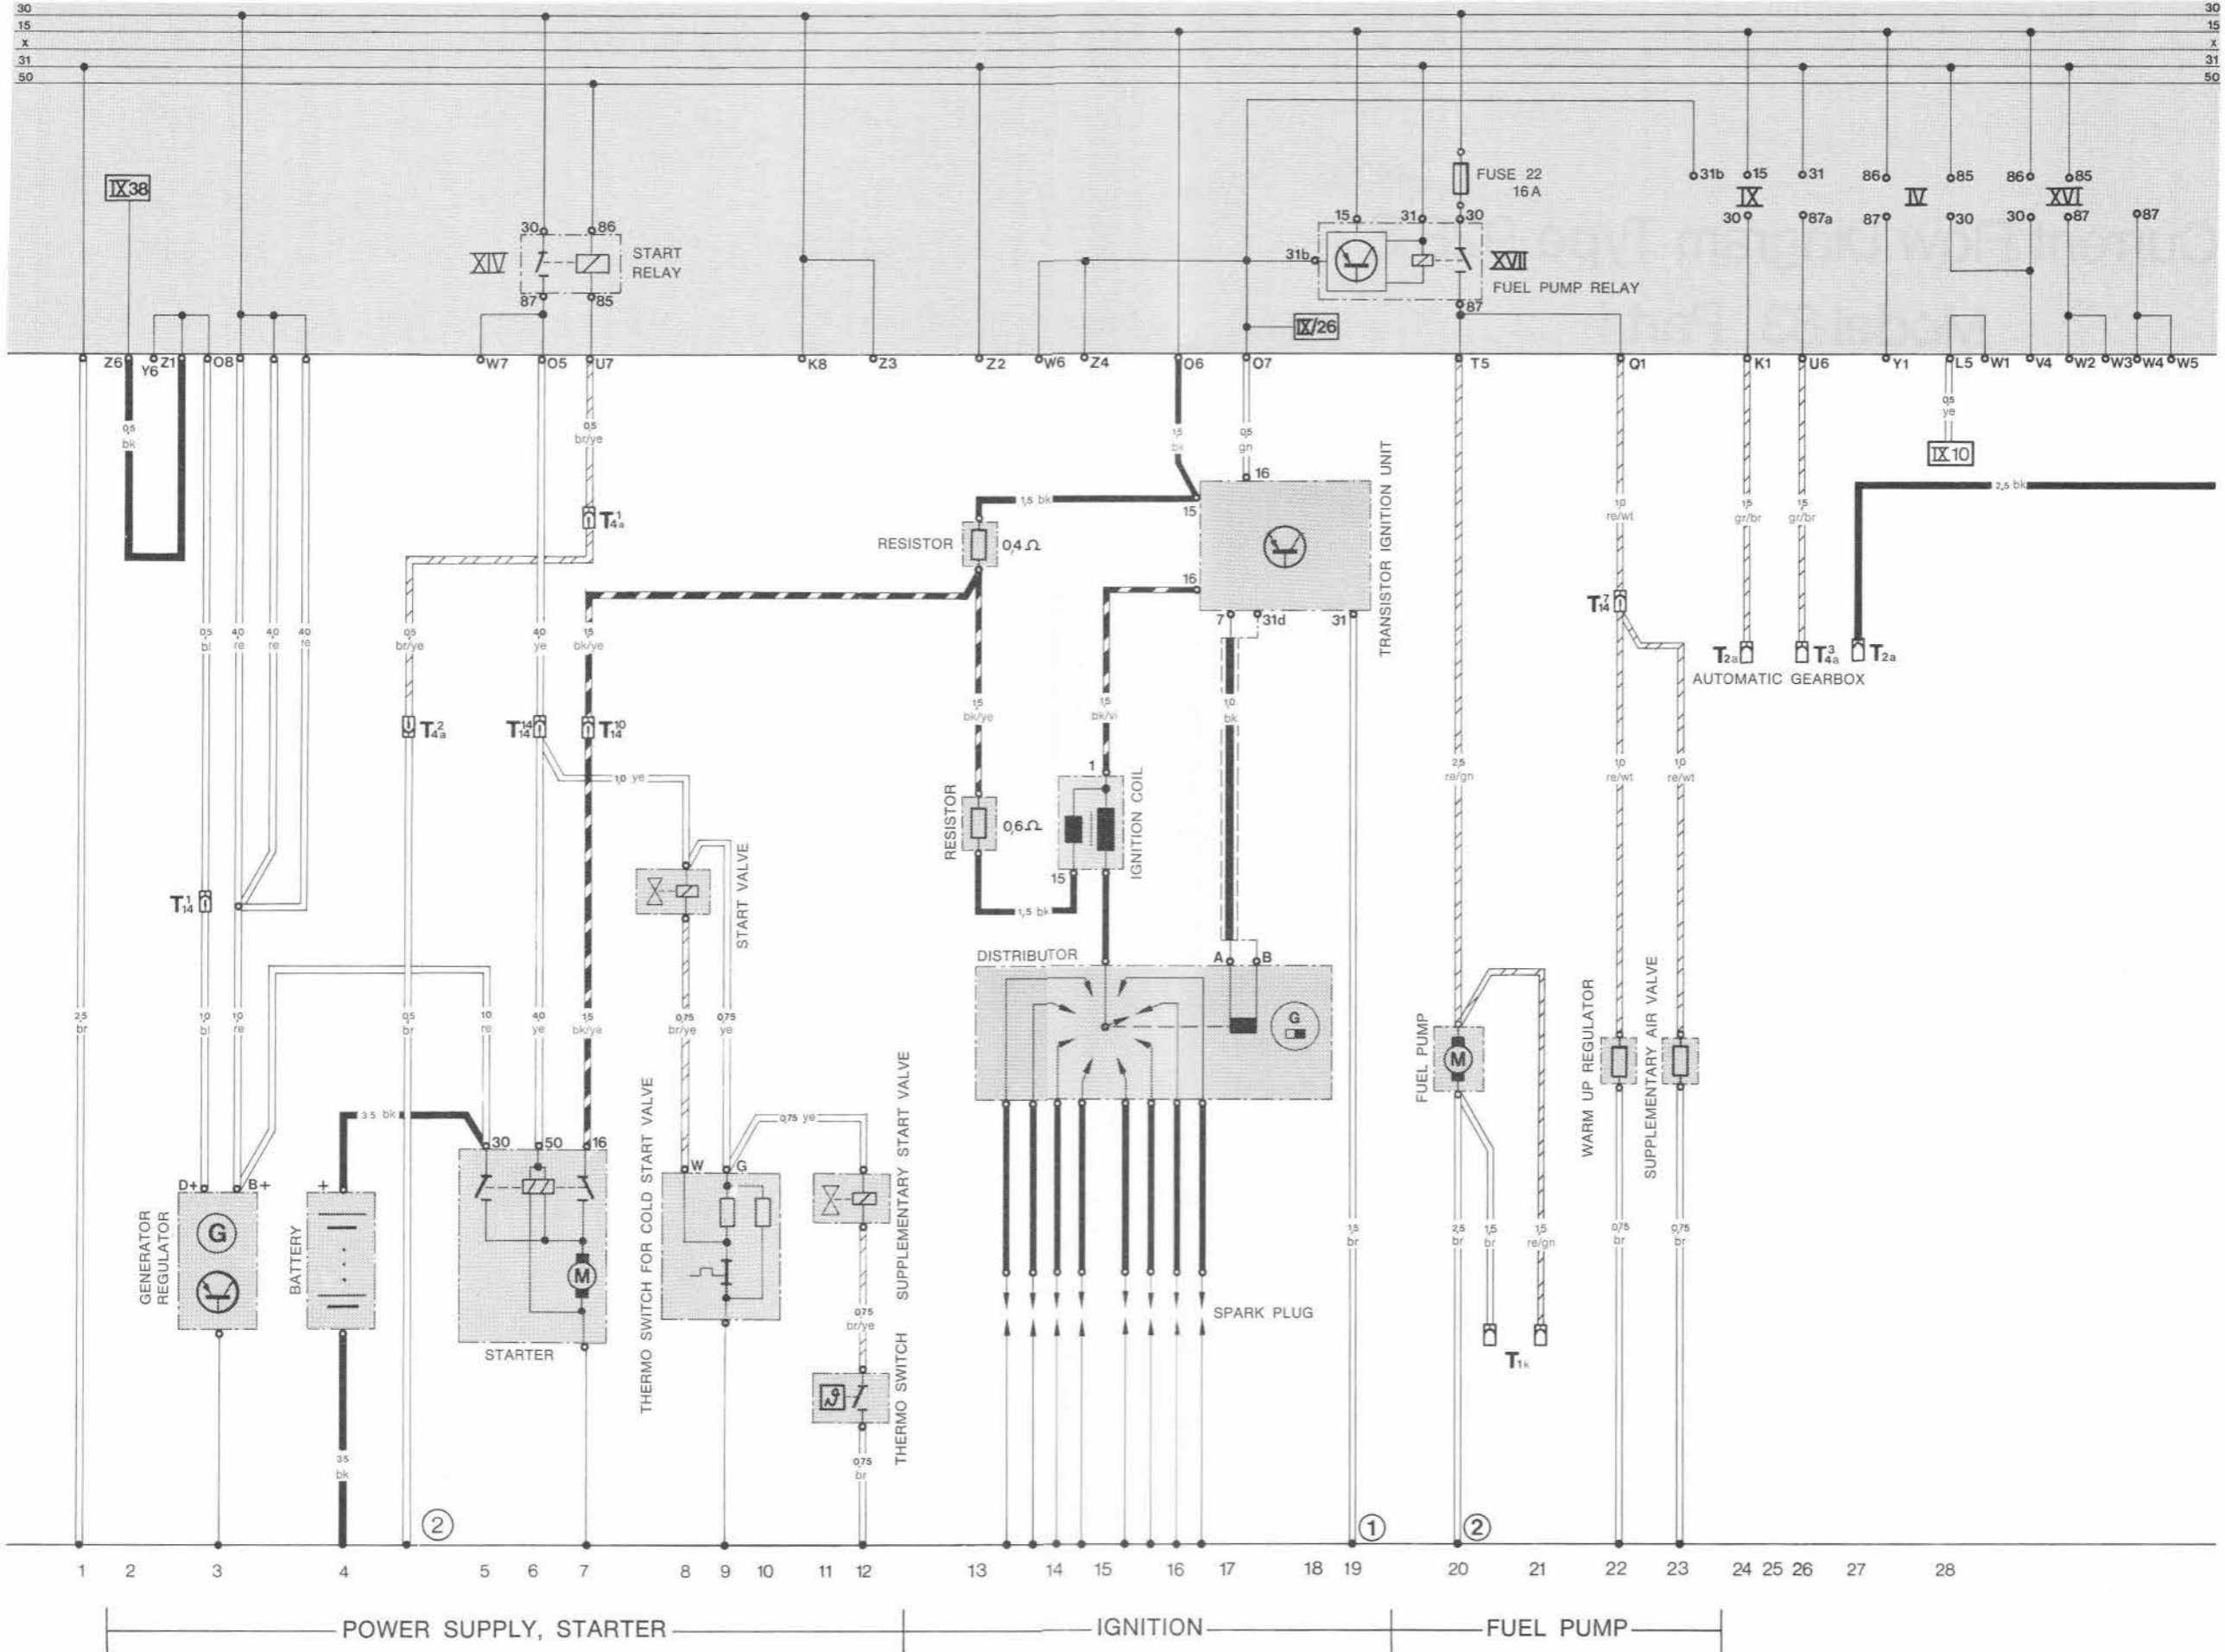


Current Flow Diagram Type 928 S Model 83 Part II

IGNITION/STARTER SWITCH, LIGHT SWITCH
HEADLIGHT

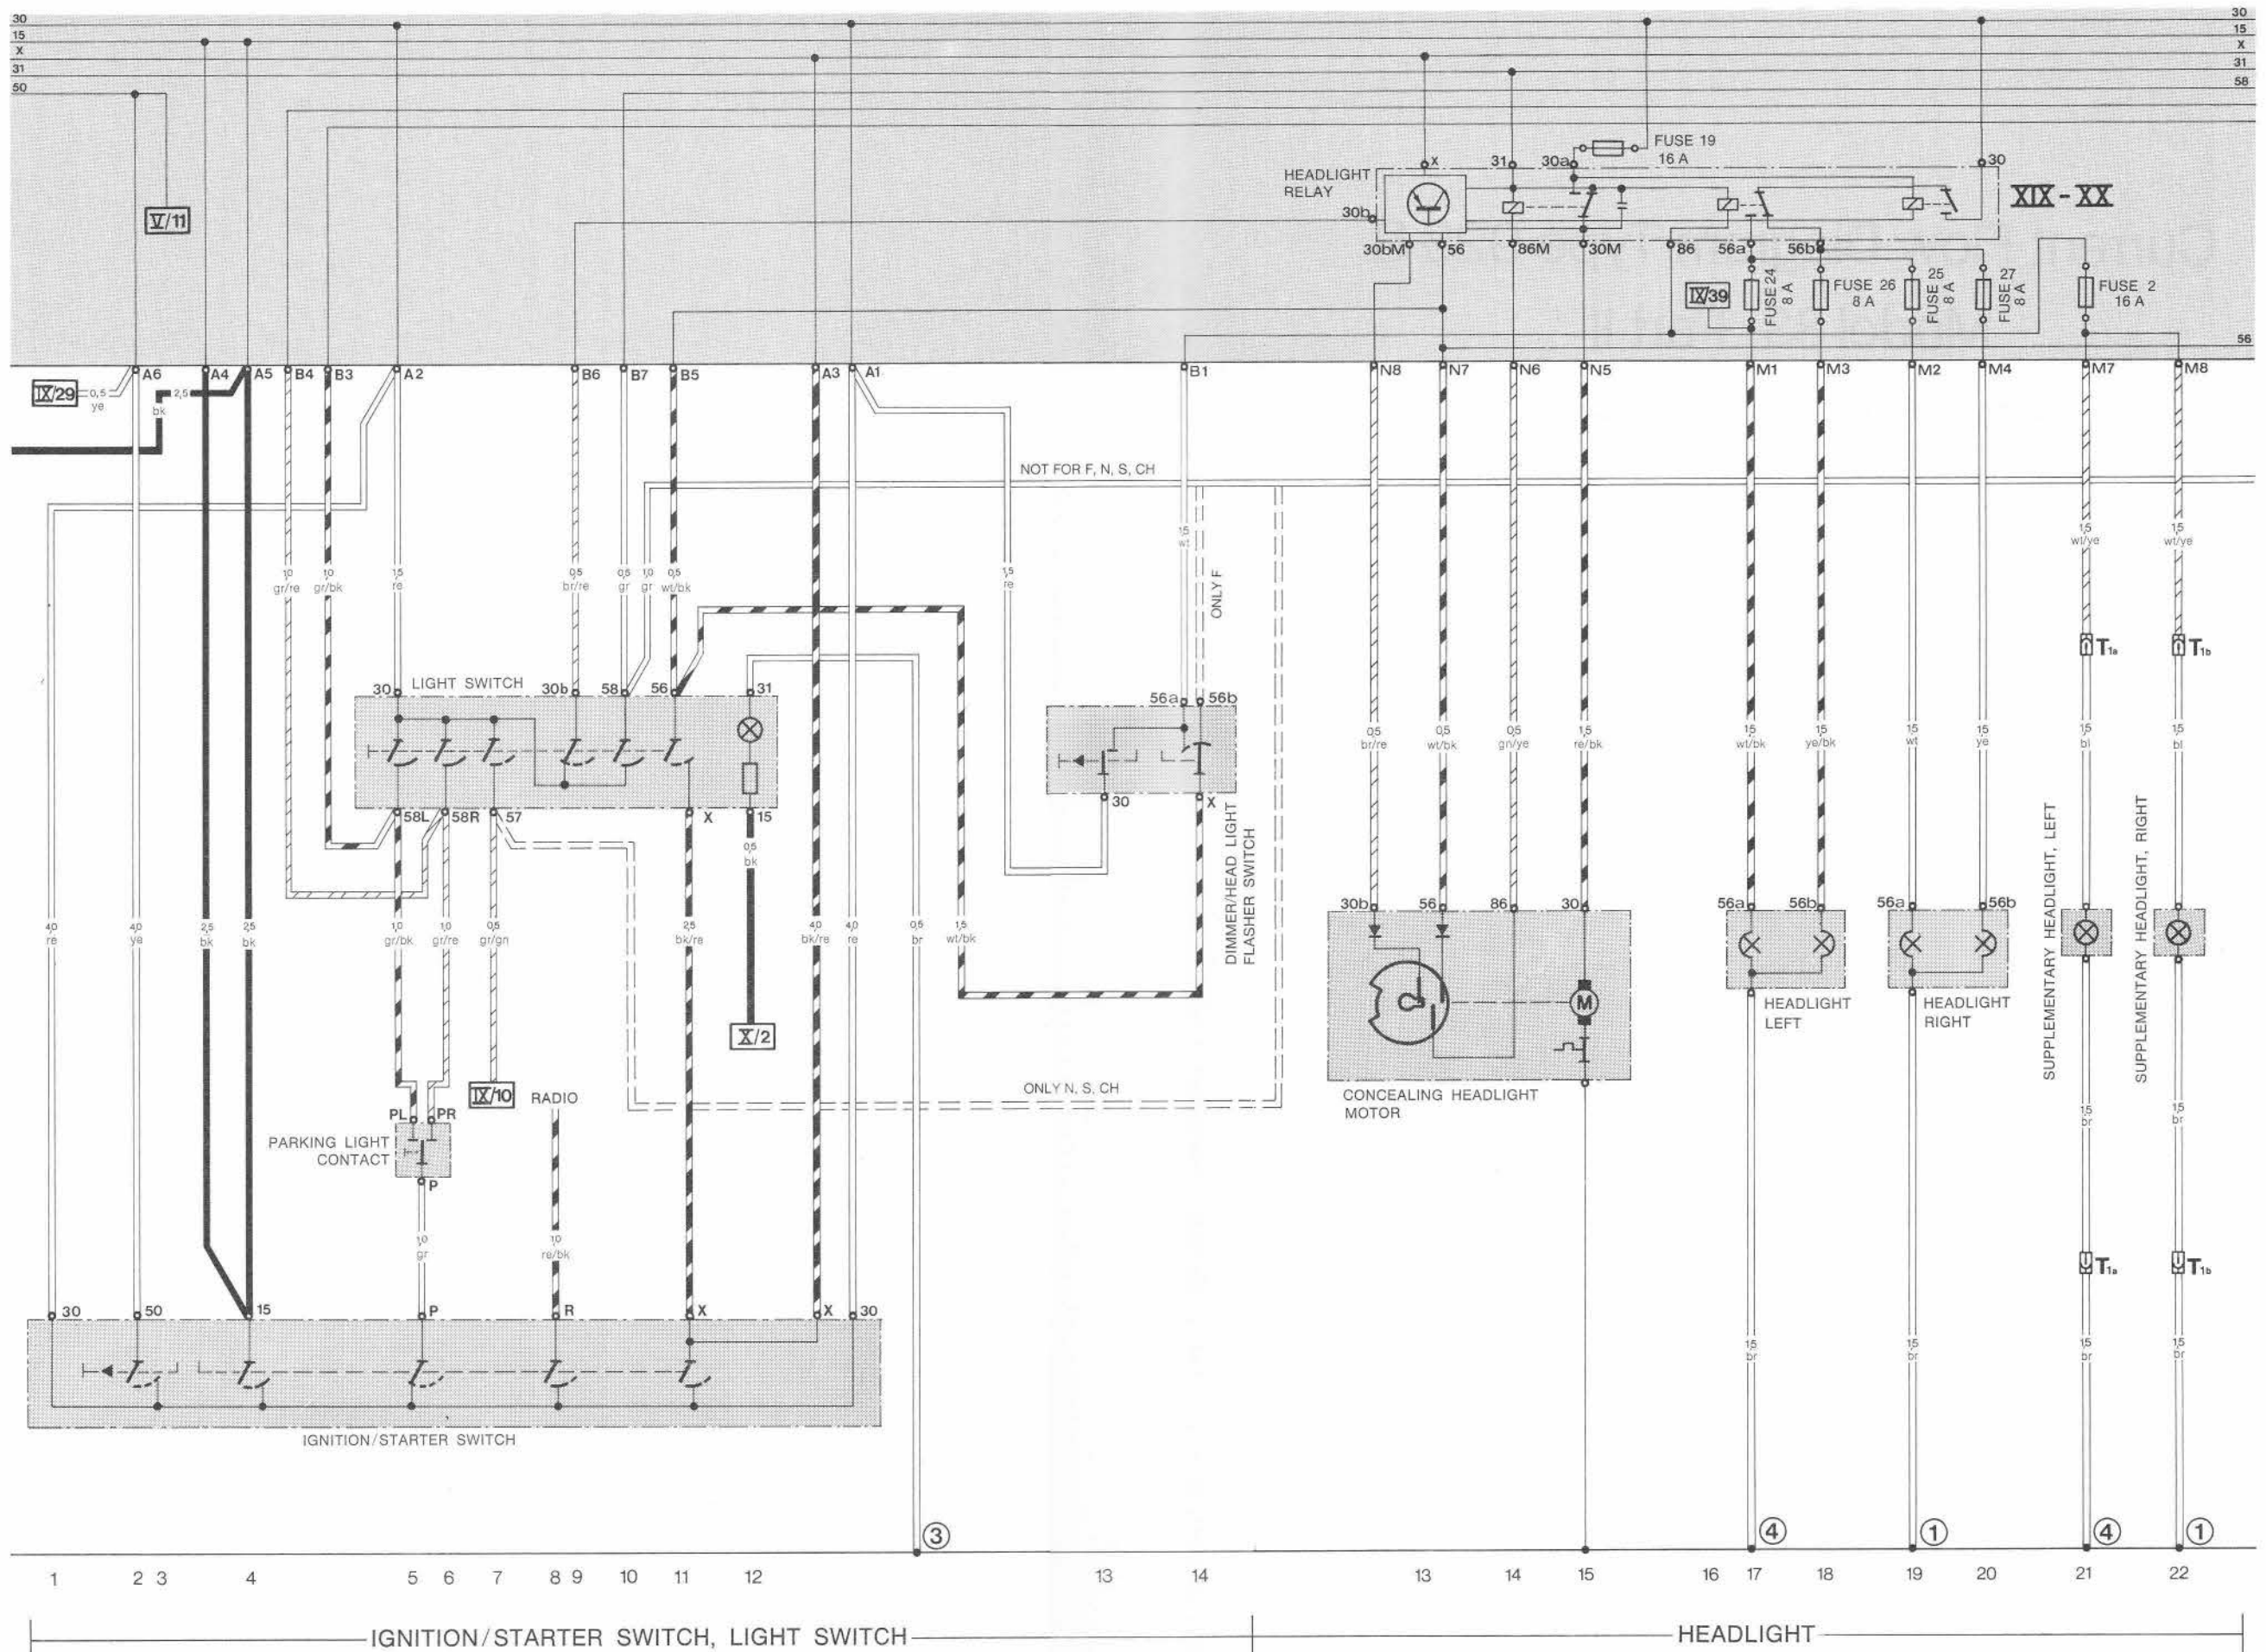

Current Flow Diagram Type 928 S Model 83 Part III

HEADLIGHT, PARKING LIGHT
FOG LIGHT, LICENSE PLATE LIGHT
FRONT TURN SIGNAL
HAZARD FLASHER

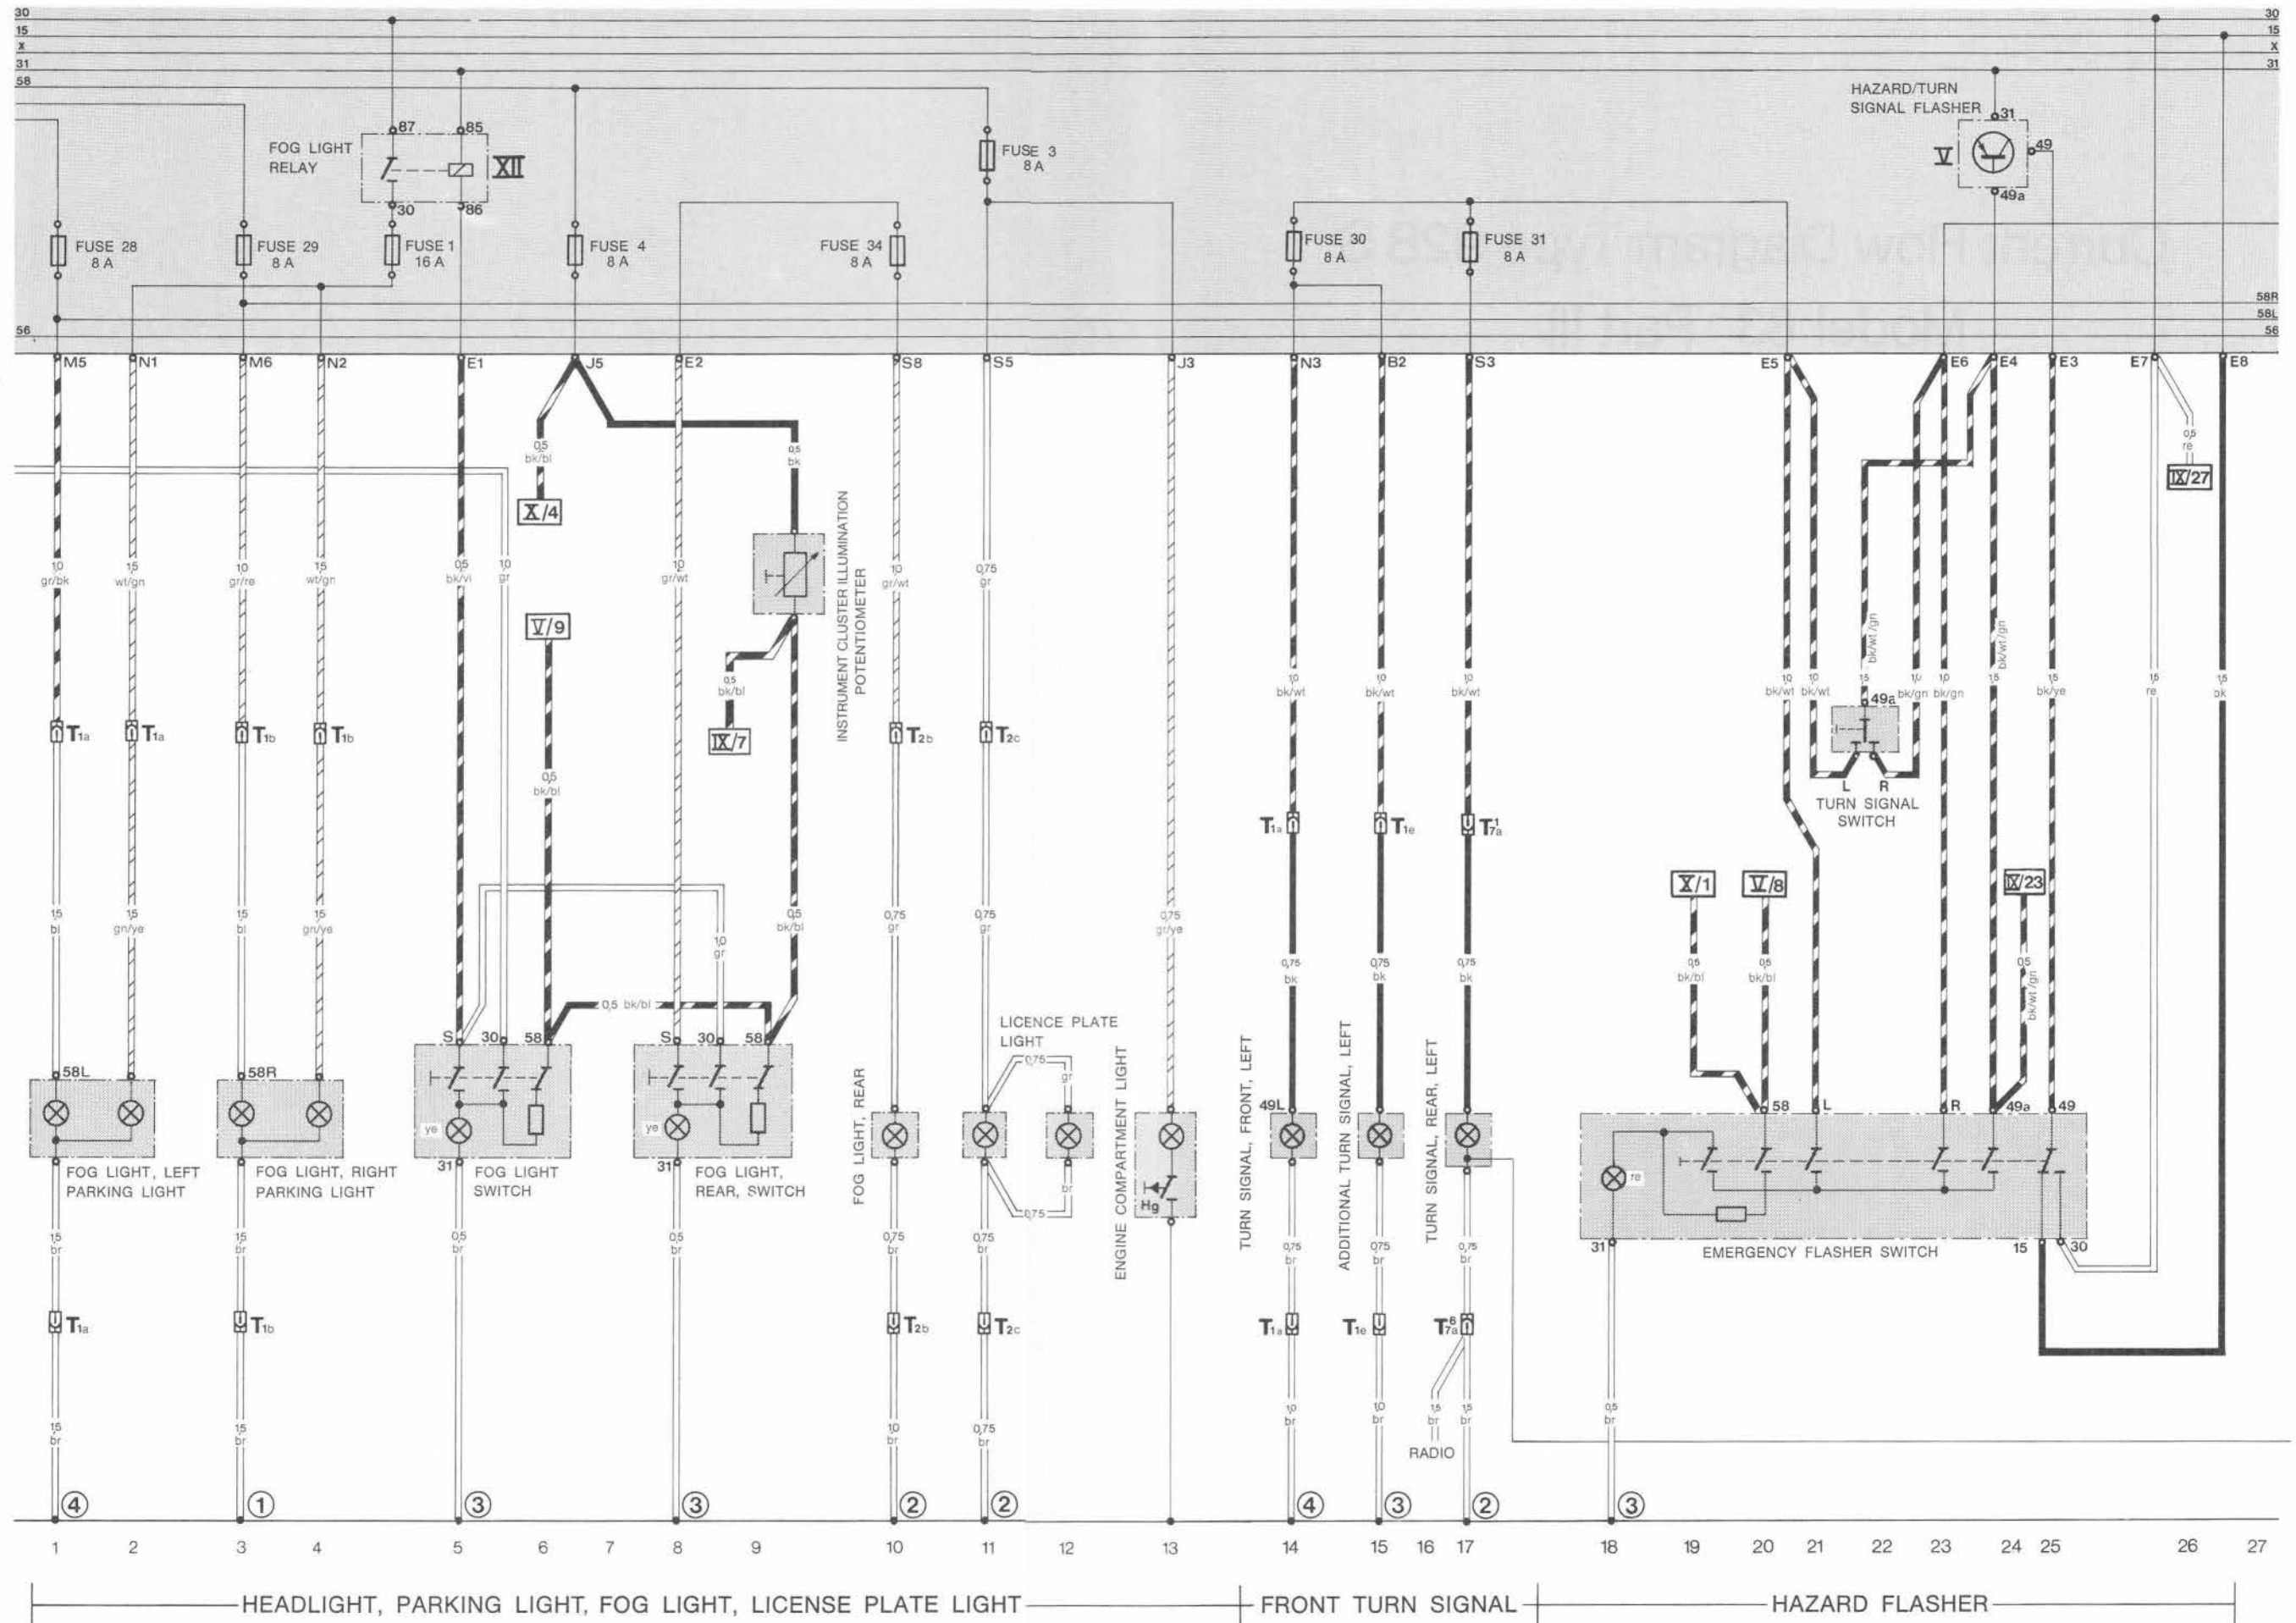


Current Flow Diagram Type 928 S Model 83 Part IV

REAR LIGHTS, LAMP CONTROL UNIT
WINDSHIELD WIPER

Current Flow Diagram Type 928 S Model 83 Part V

WASHER PUMPS
REAR WINDOW WIPER
REAR WINDOW DEFOGGER
INTERIOR LIGHT
CENTRAL LOCKING SYSTEM

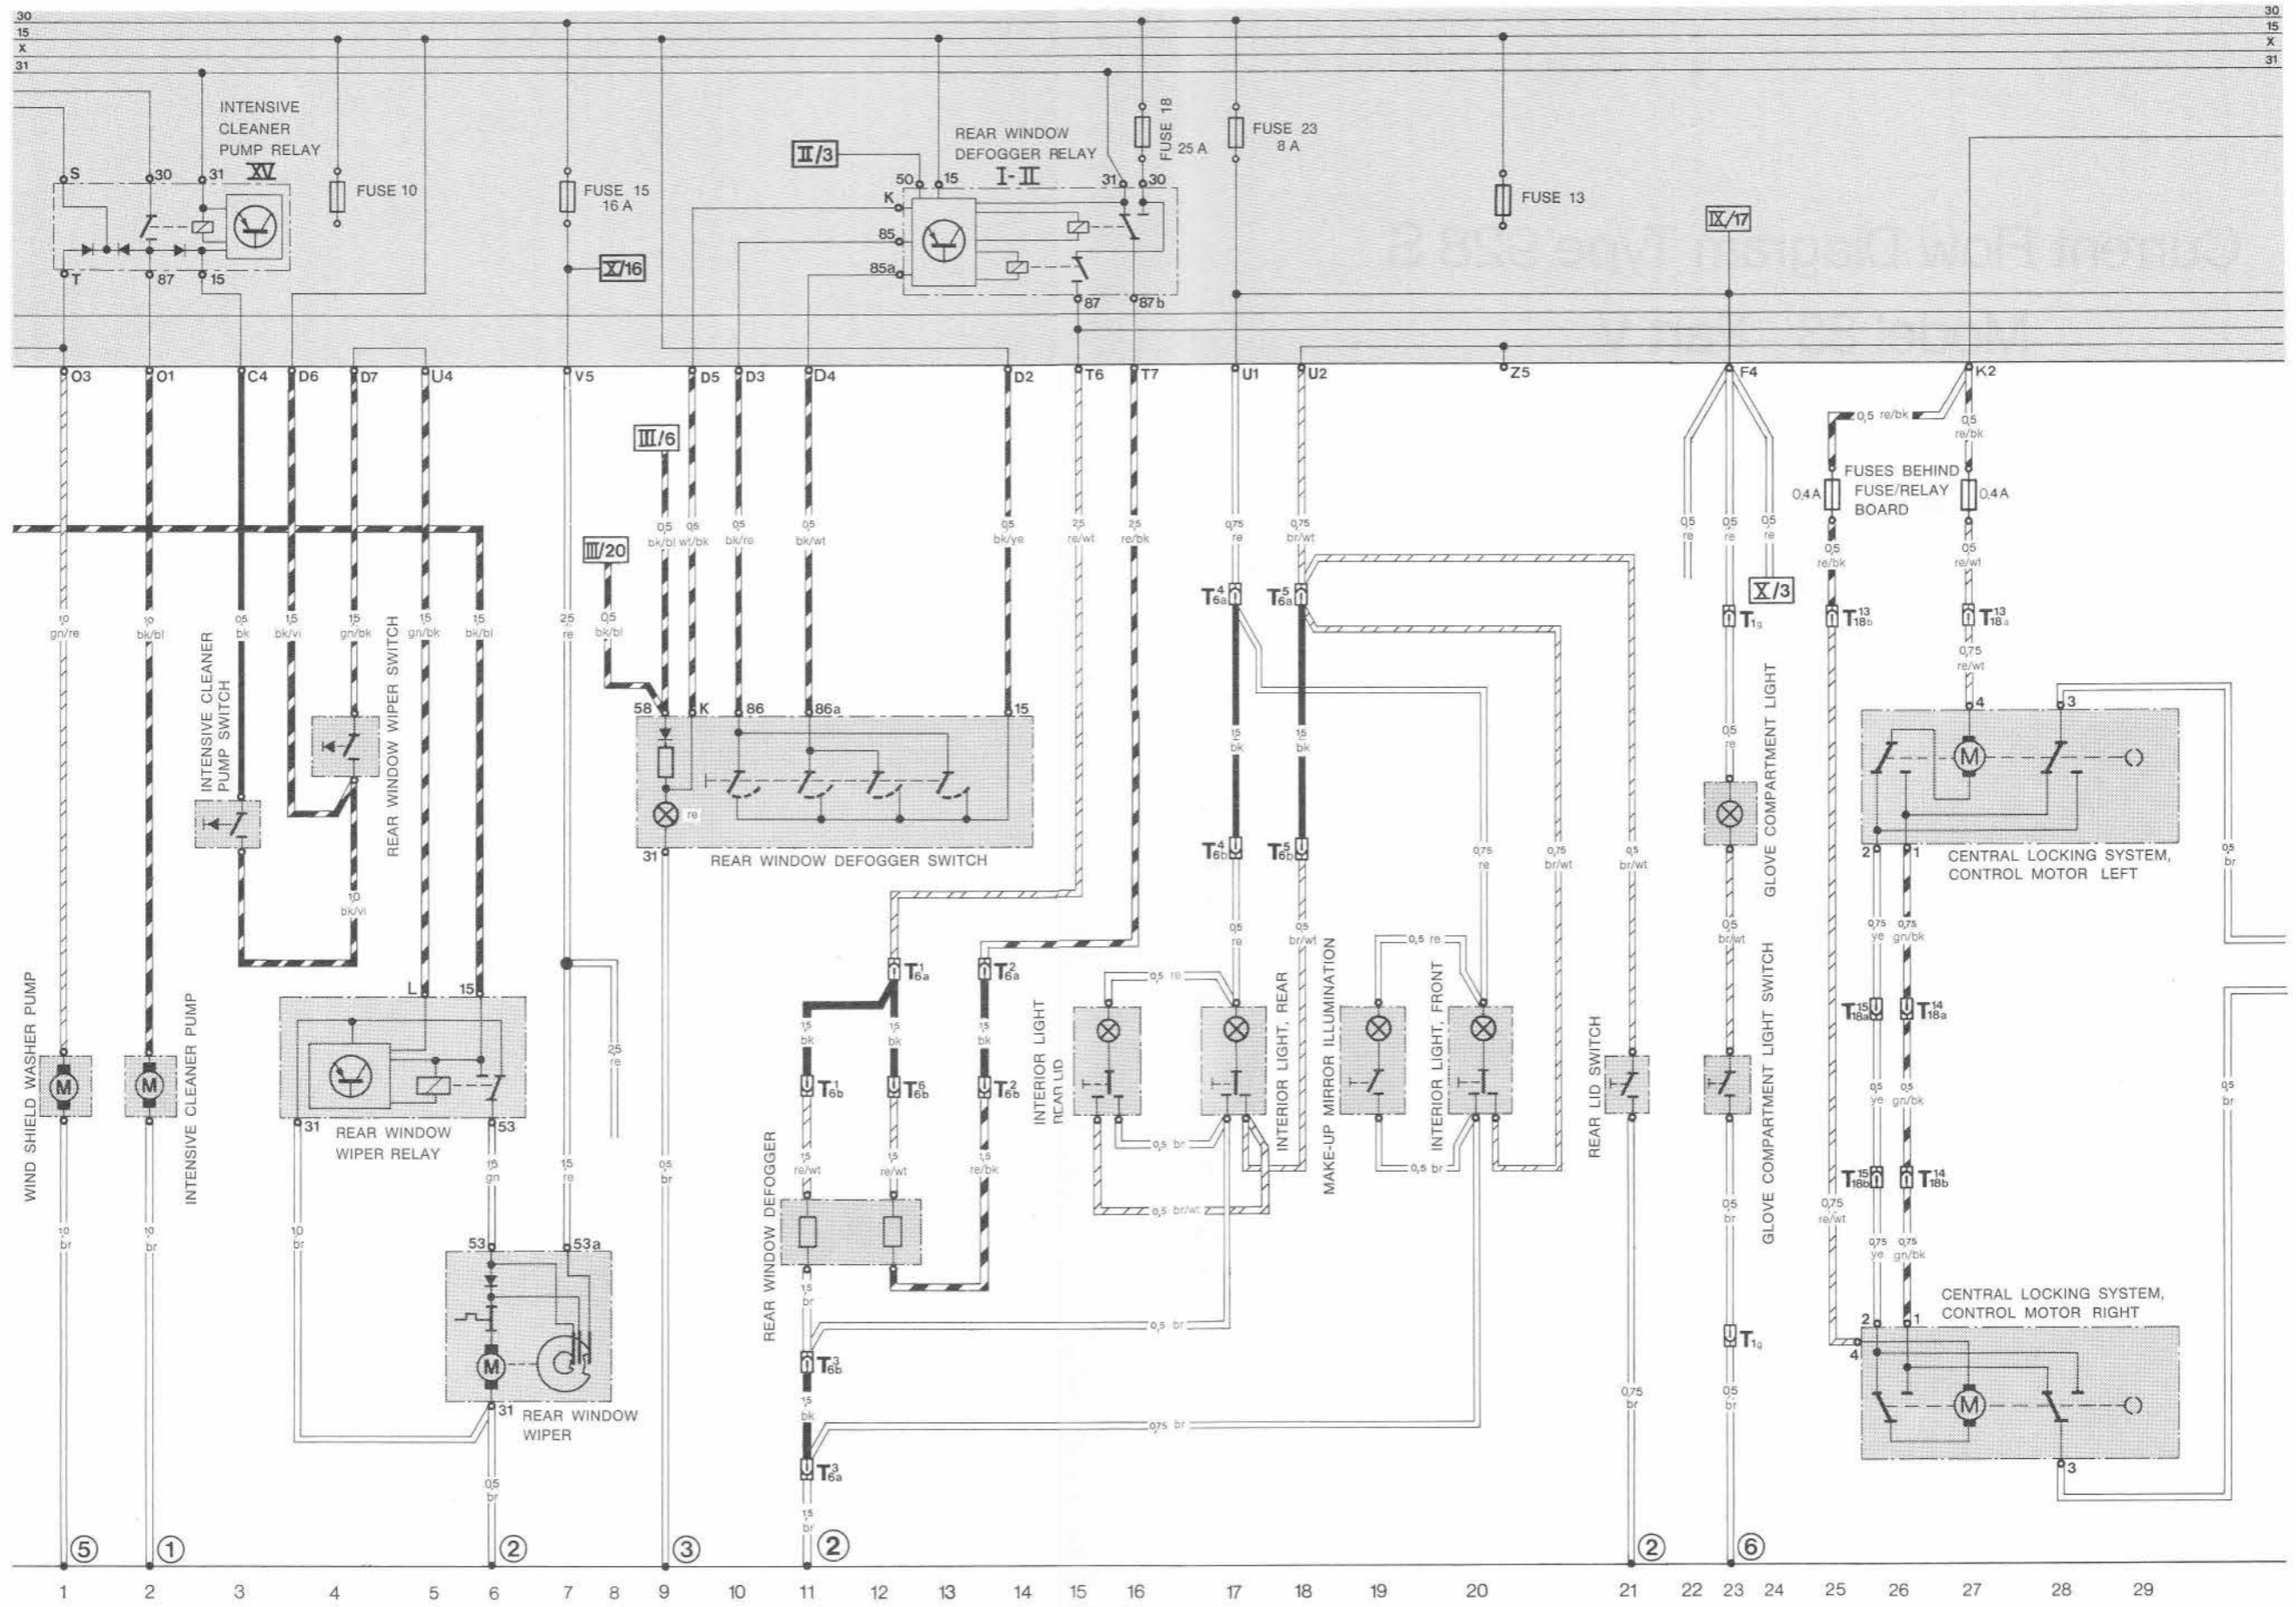


WASHER PUMPS
REAR WINDOW WIPER
REAR WINDOW DEFOGGER
INTERIOR LIGHT
CENTRAL LOCKING SYSTEM

Current Flow Diagram Type 928 S


Model 83 Part VI

DOOR LIGHT
SEAT BELT
OUTSIDE MIRROR
POWER WINDOWS
BRAKE PADS

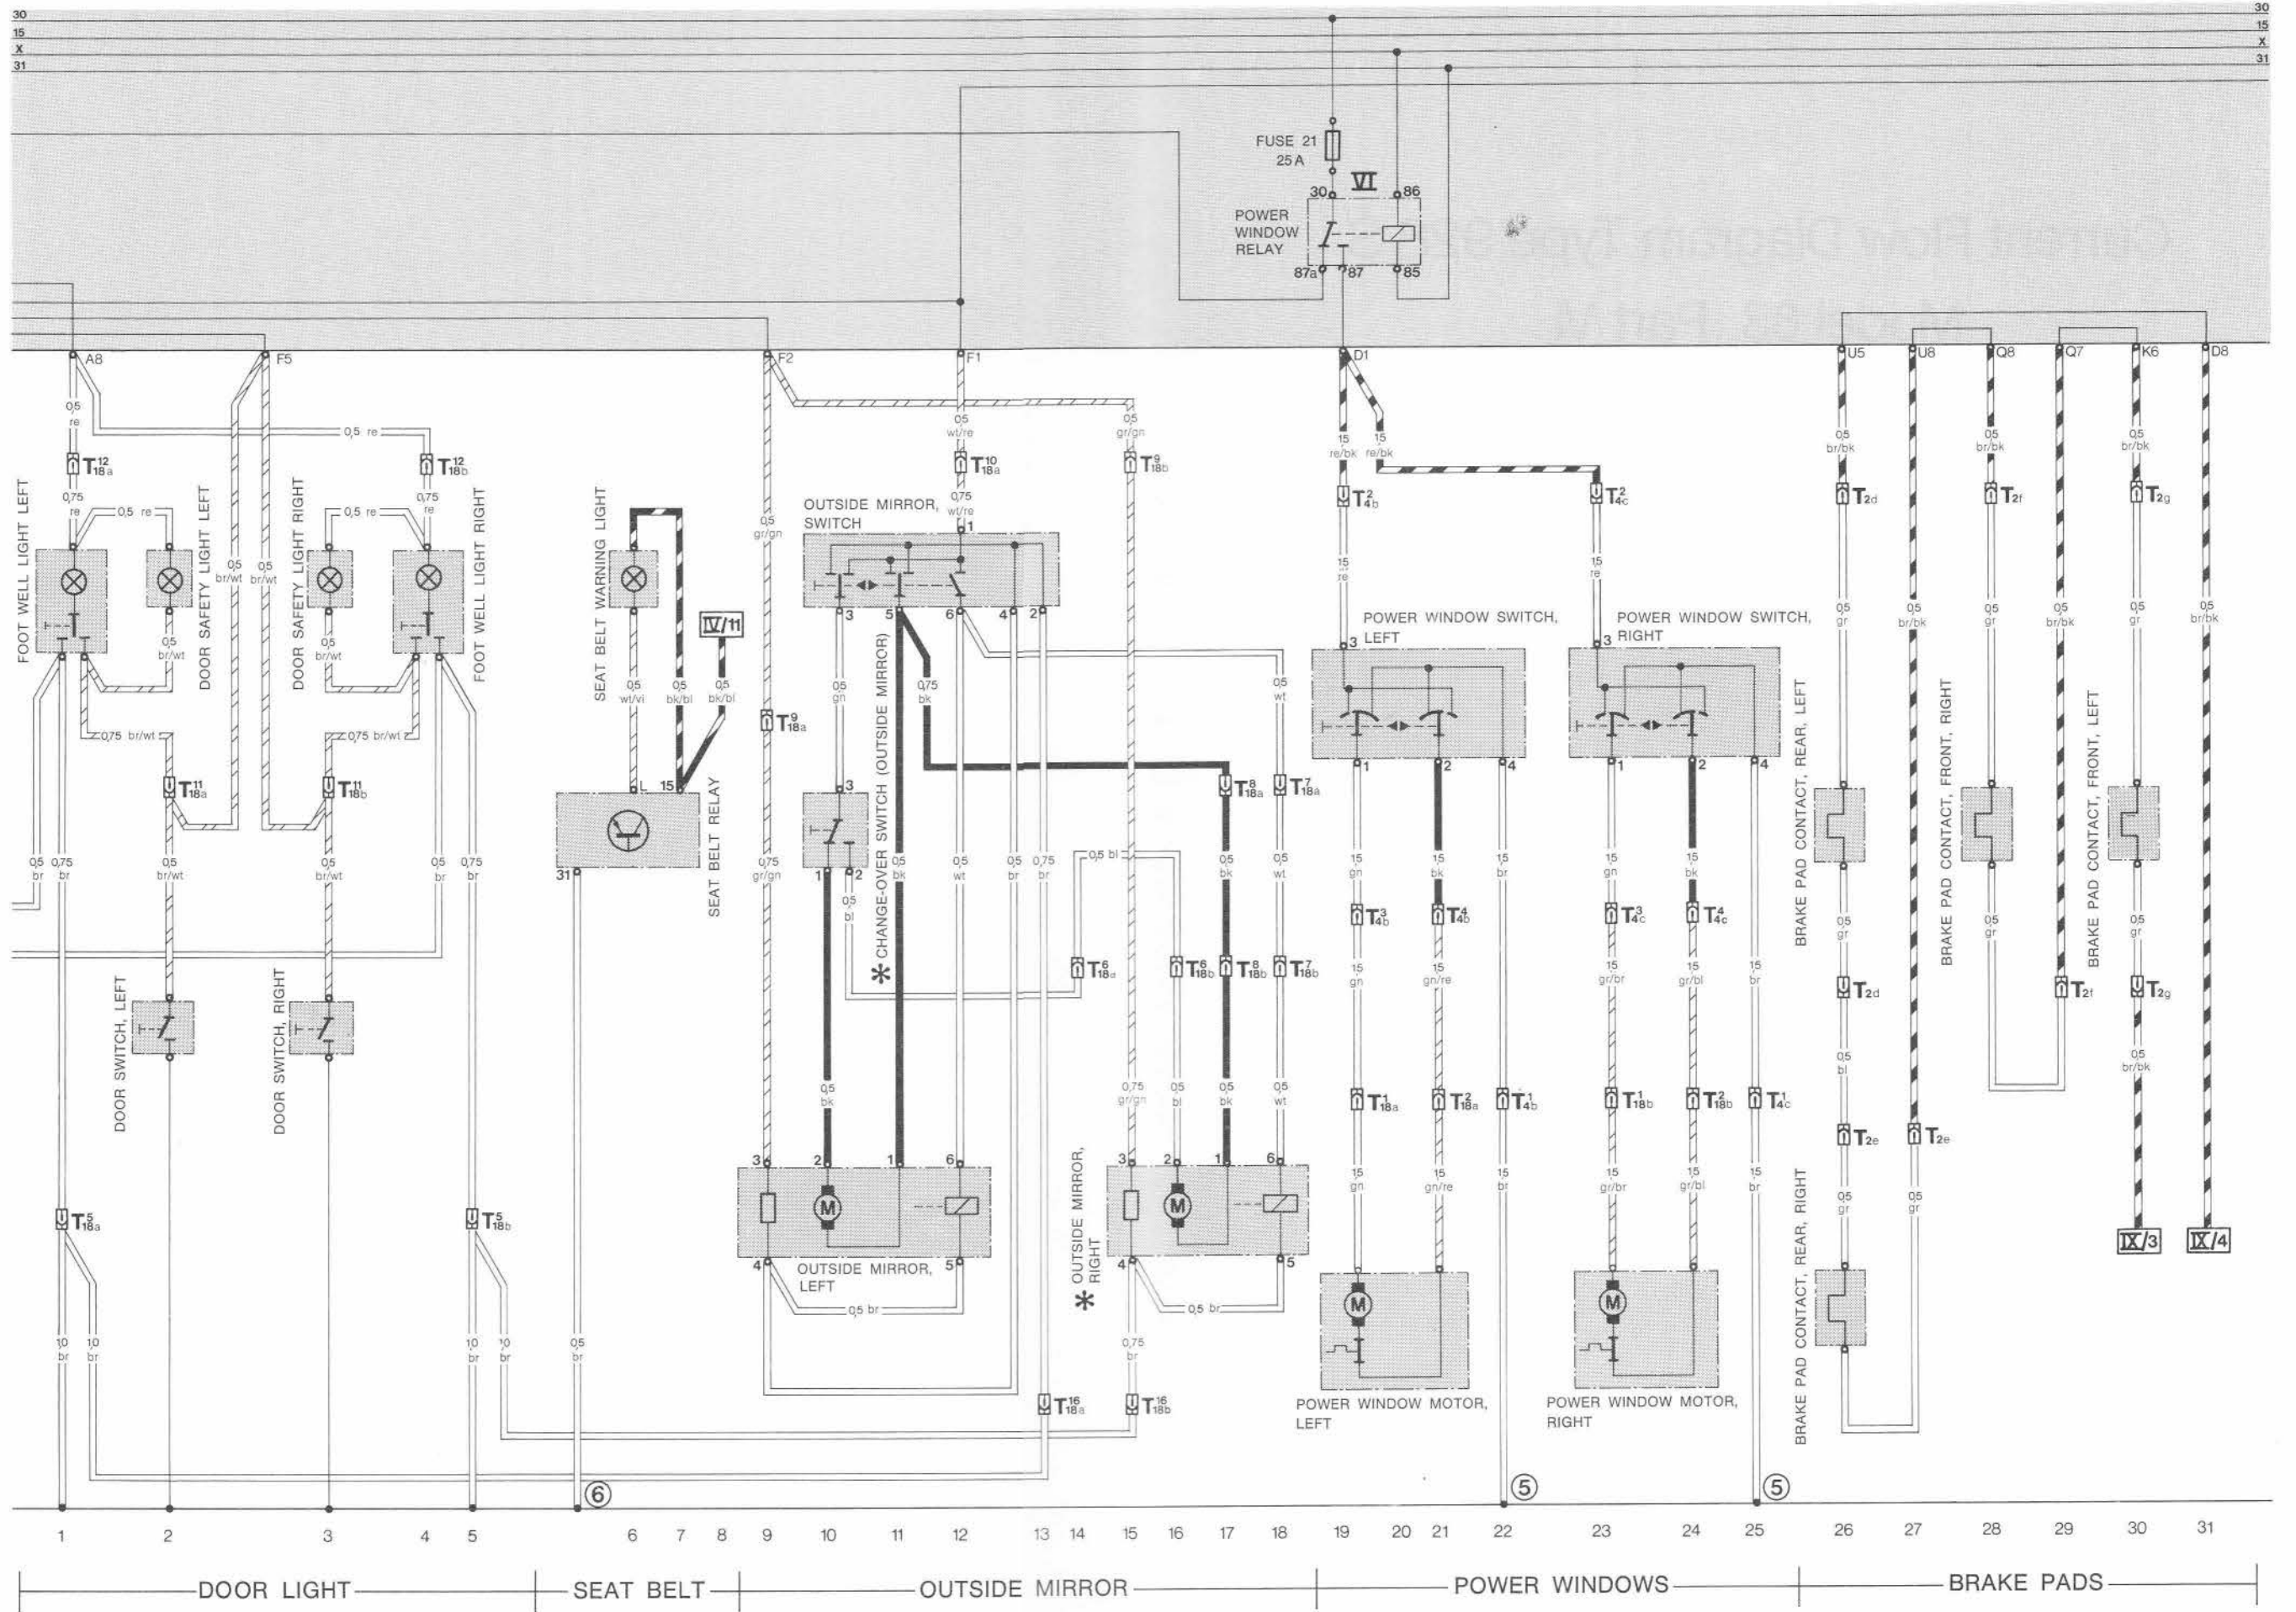

Current Flow Diagram Type 928 S Model 83 Part VI

AUTOMATIC AIR CONDITIONER

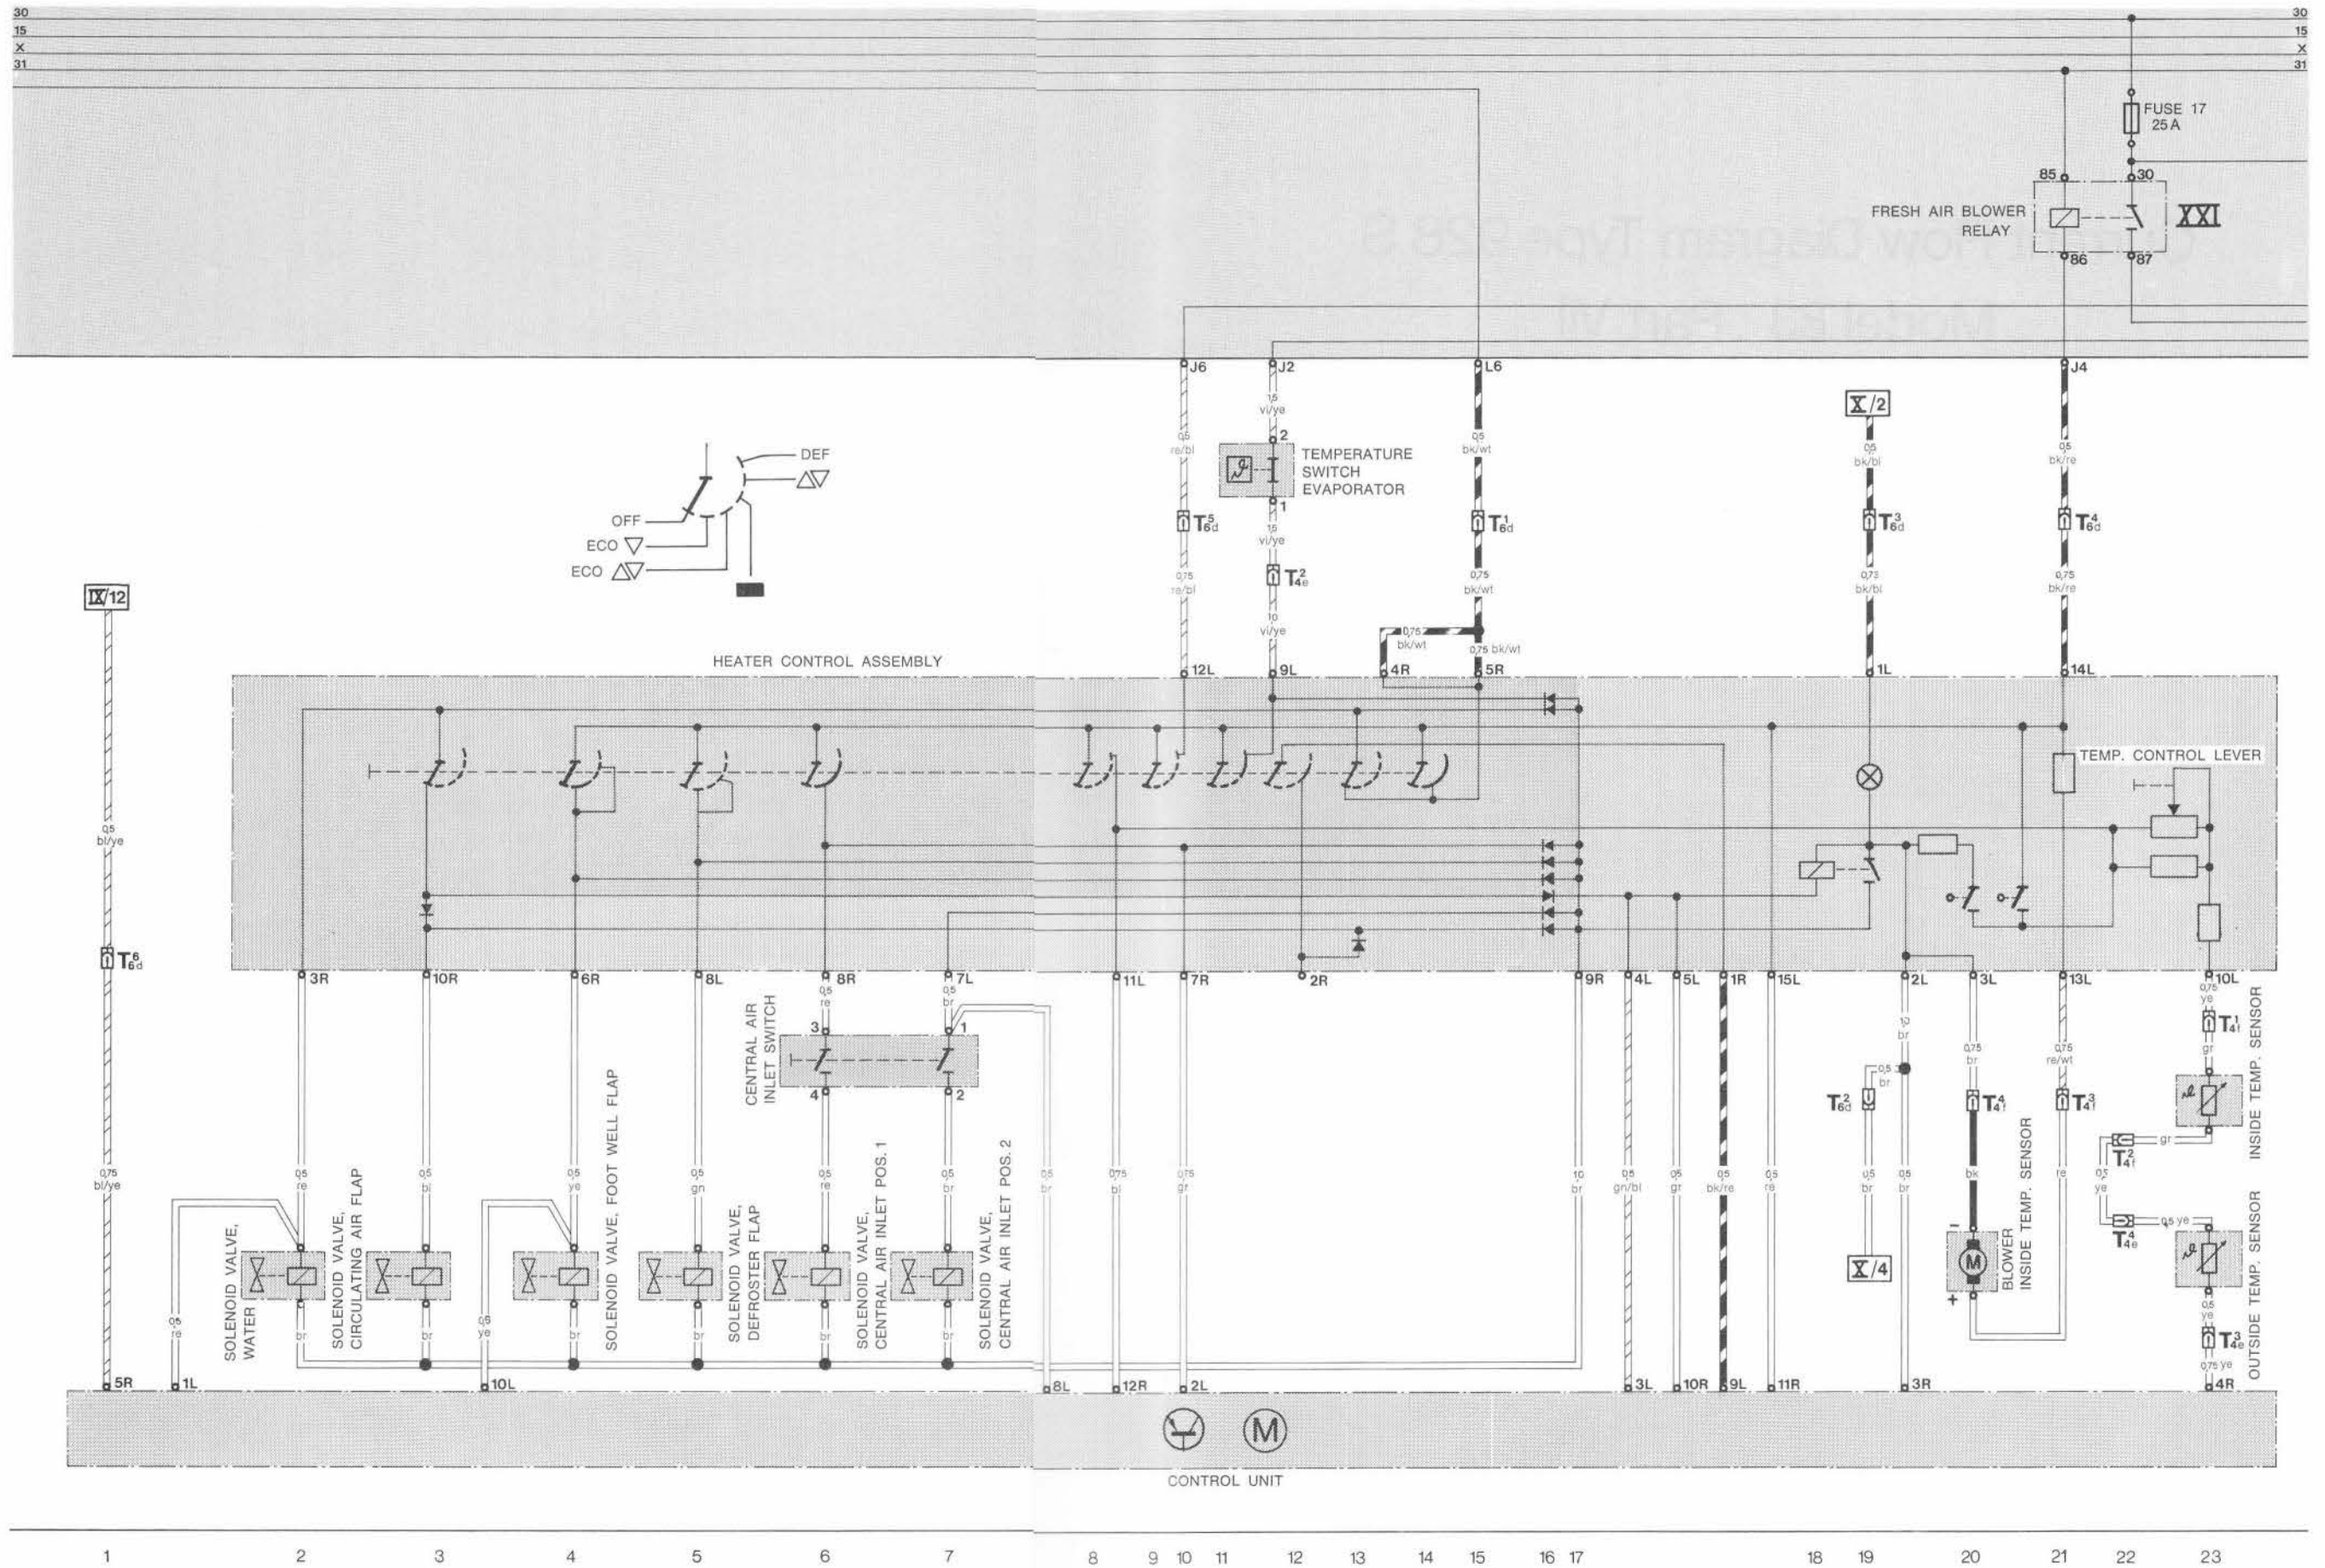

AUTOMATIC AIR CONDITIONER


Current Flow Diagram Type 928 S Model 83 Part VIII

AUTOMATIC AIR CONDITIONER

SENDER UNITS


Current Flow Diagram Type 928 S Model 83 Part IX

CENTRAL WARNING UNIT, INSTRUMENT CLUSTER

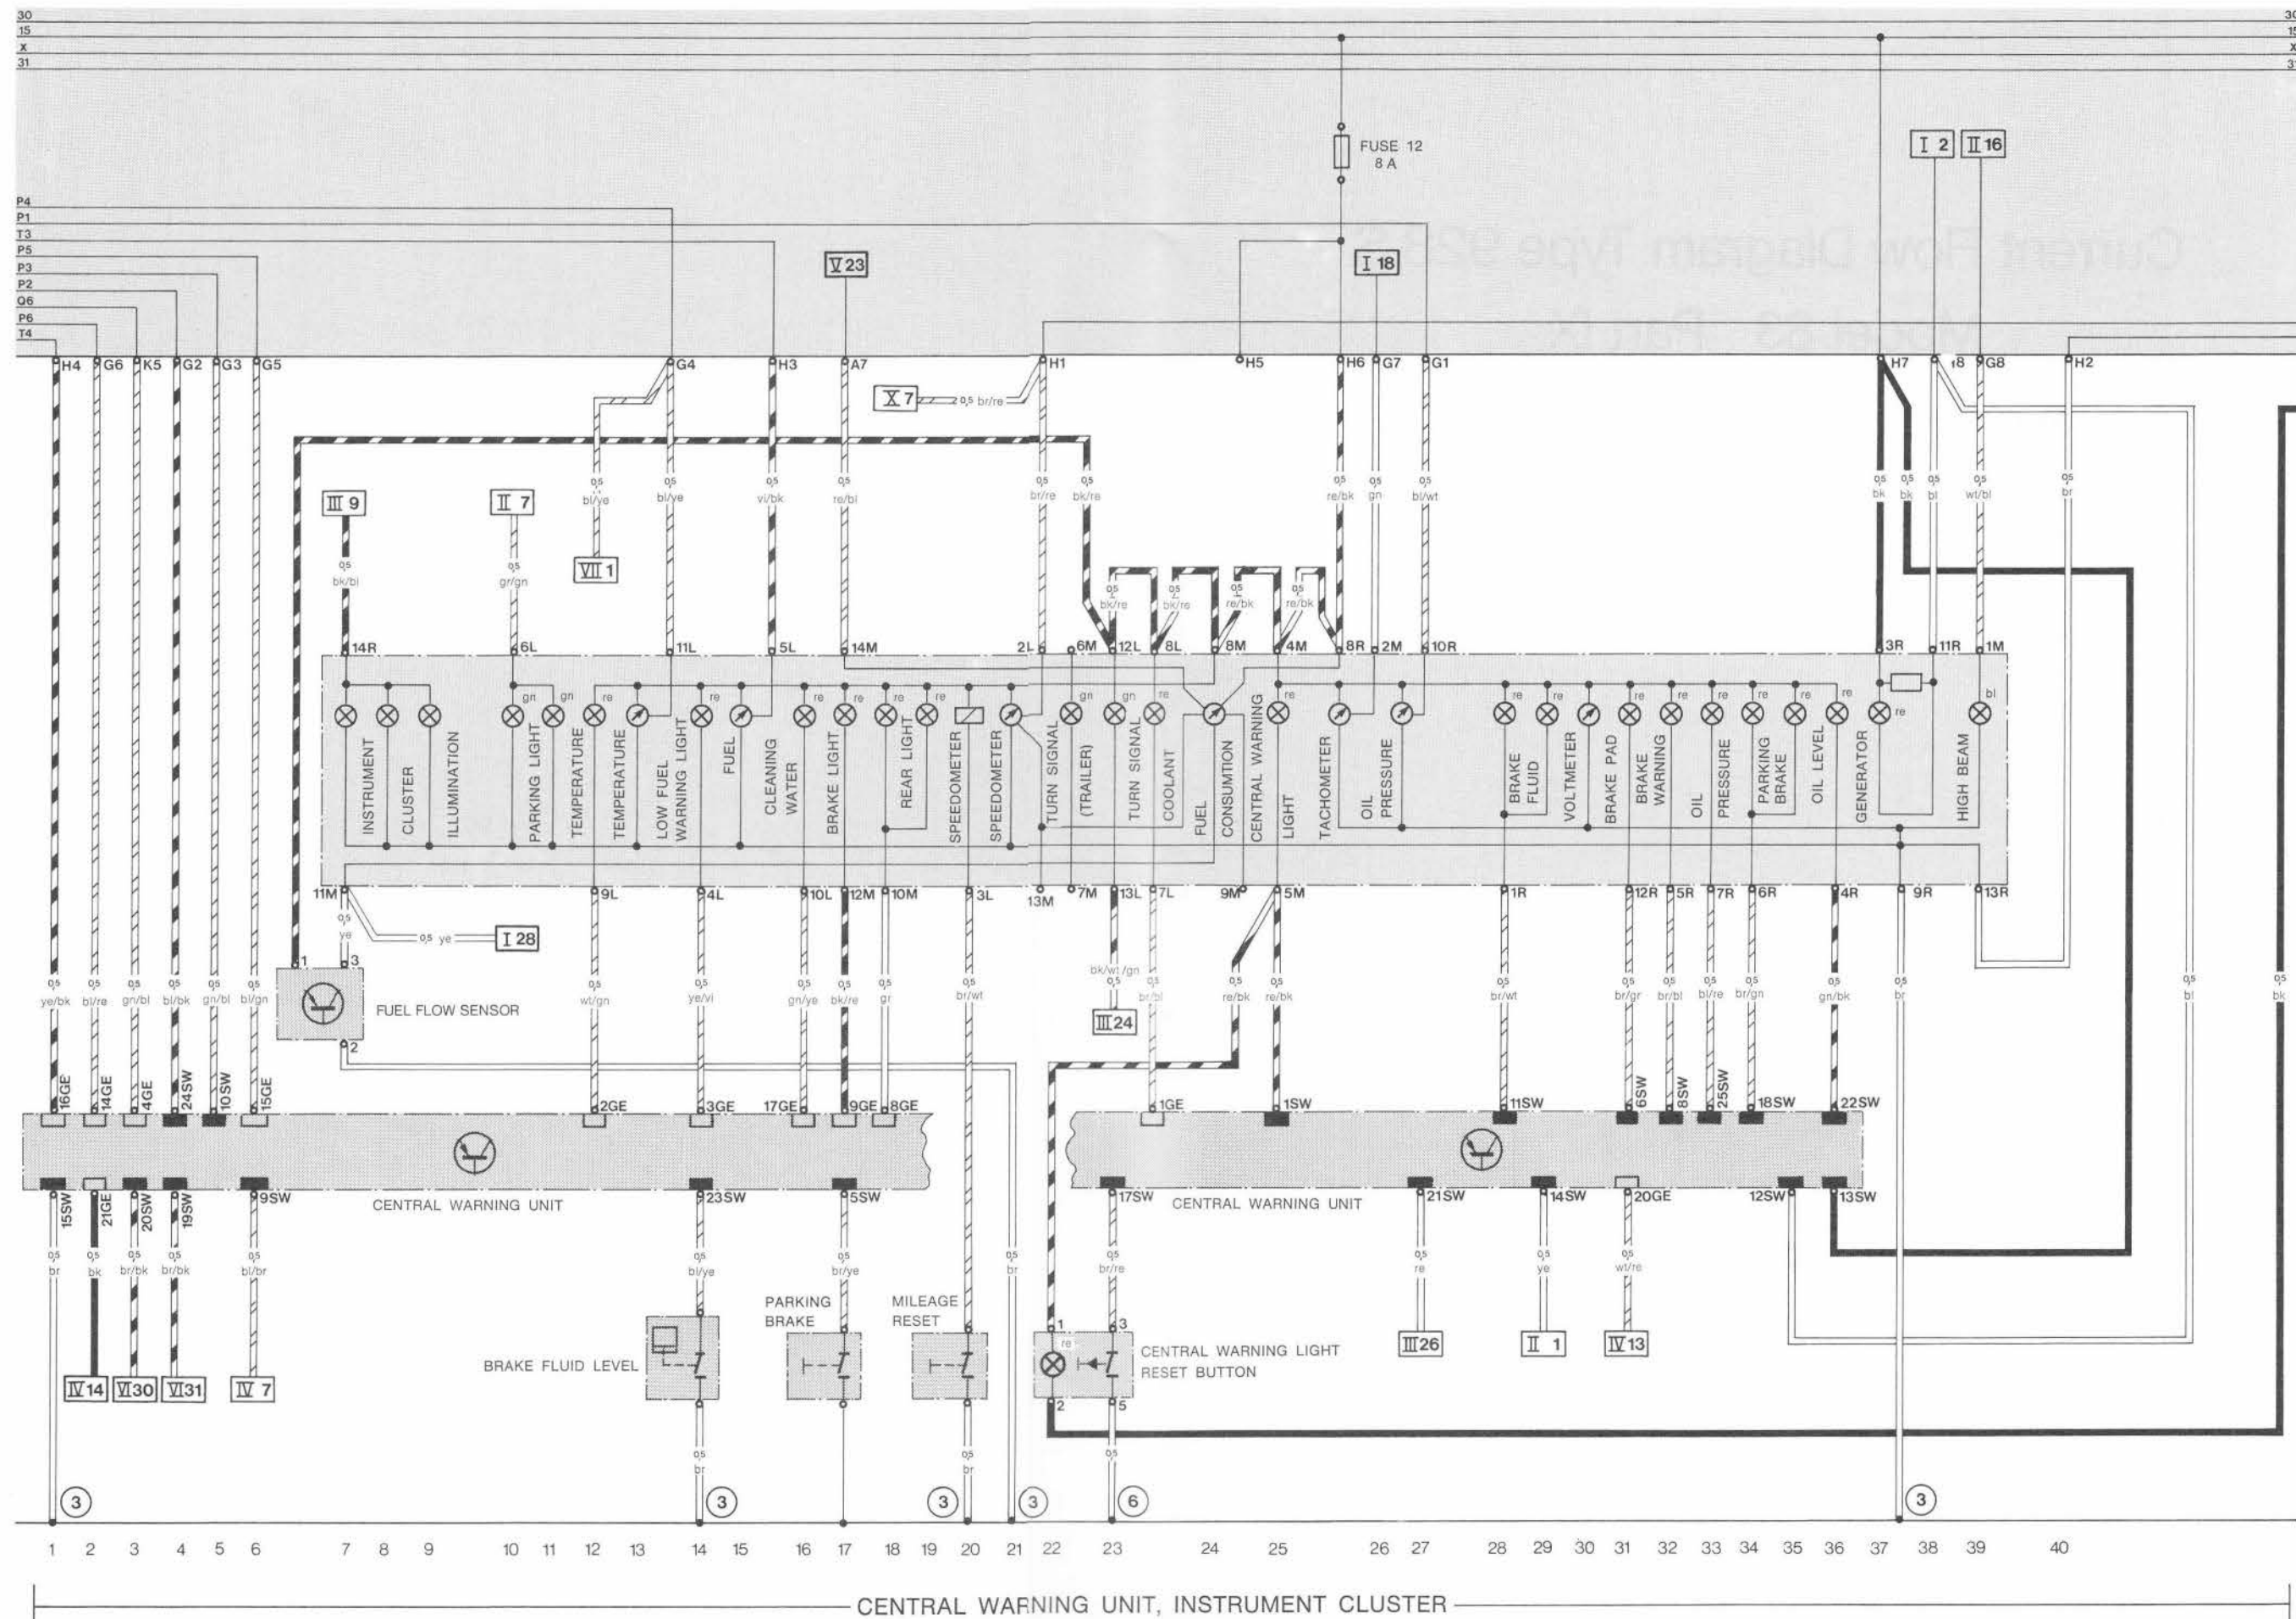


Current Flow Diagram Type 928 S Model 83 Part X

CLOCK
CIGARETTE LIGHTER
TEMPOSTAT (CRUISE CONTROL)
HORNS

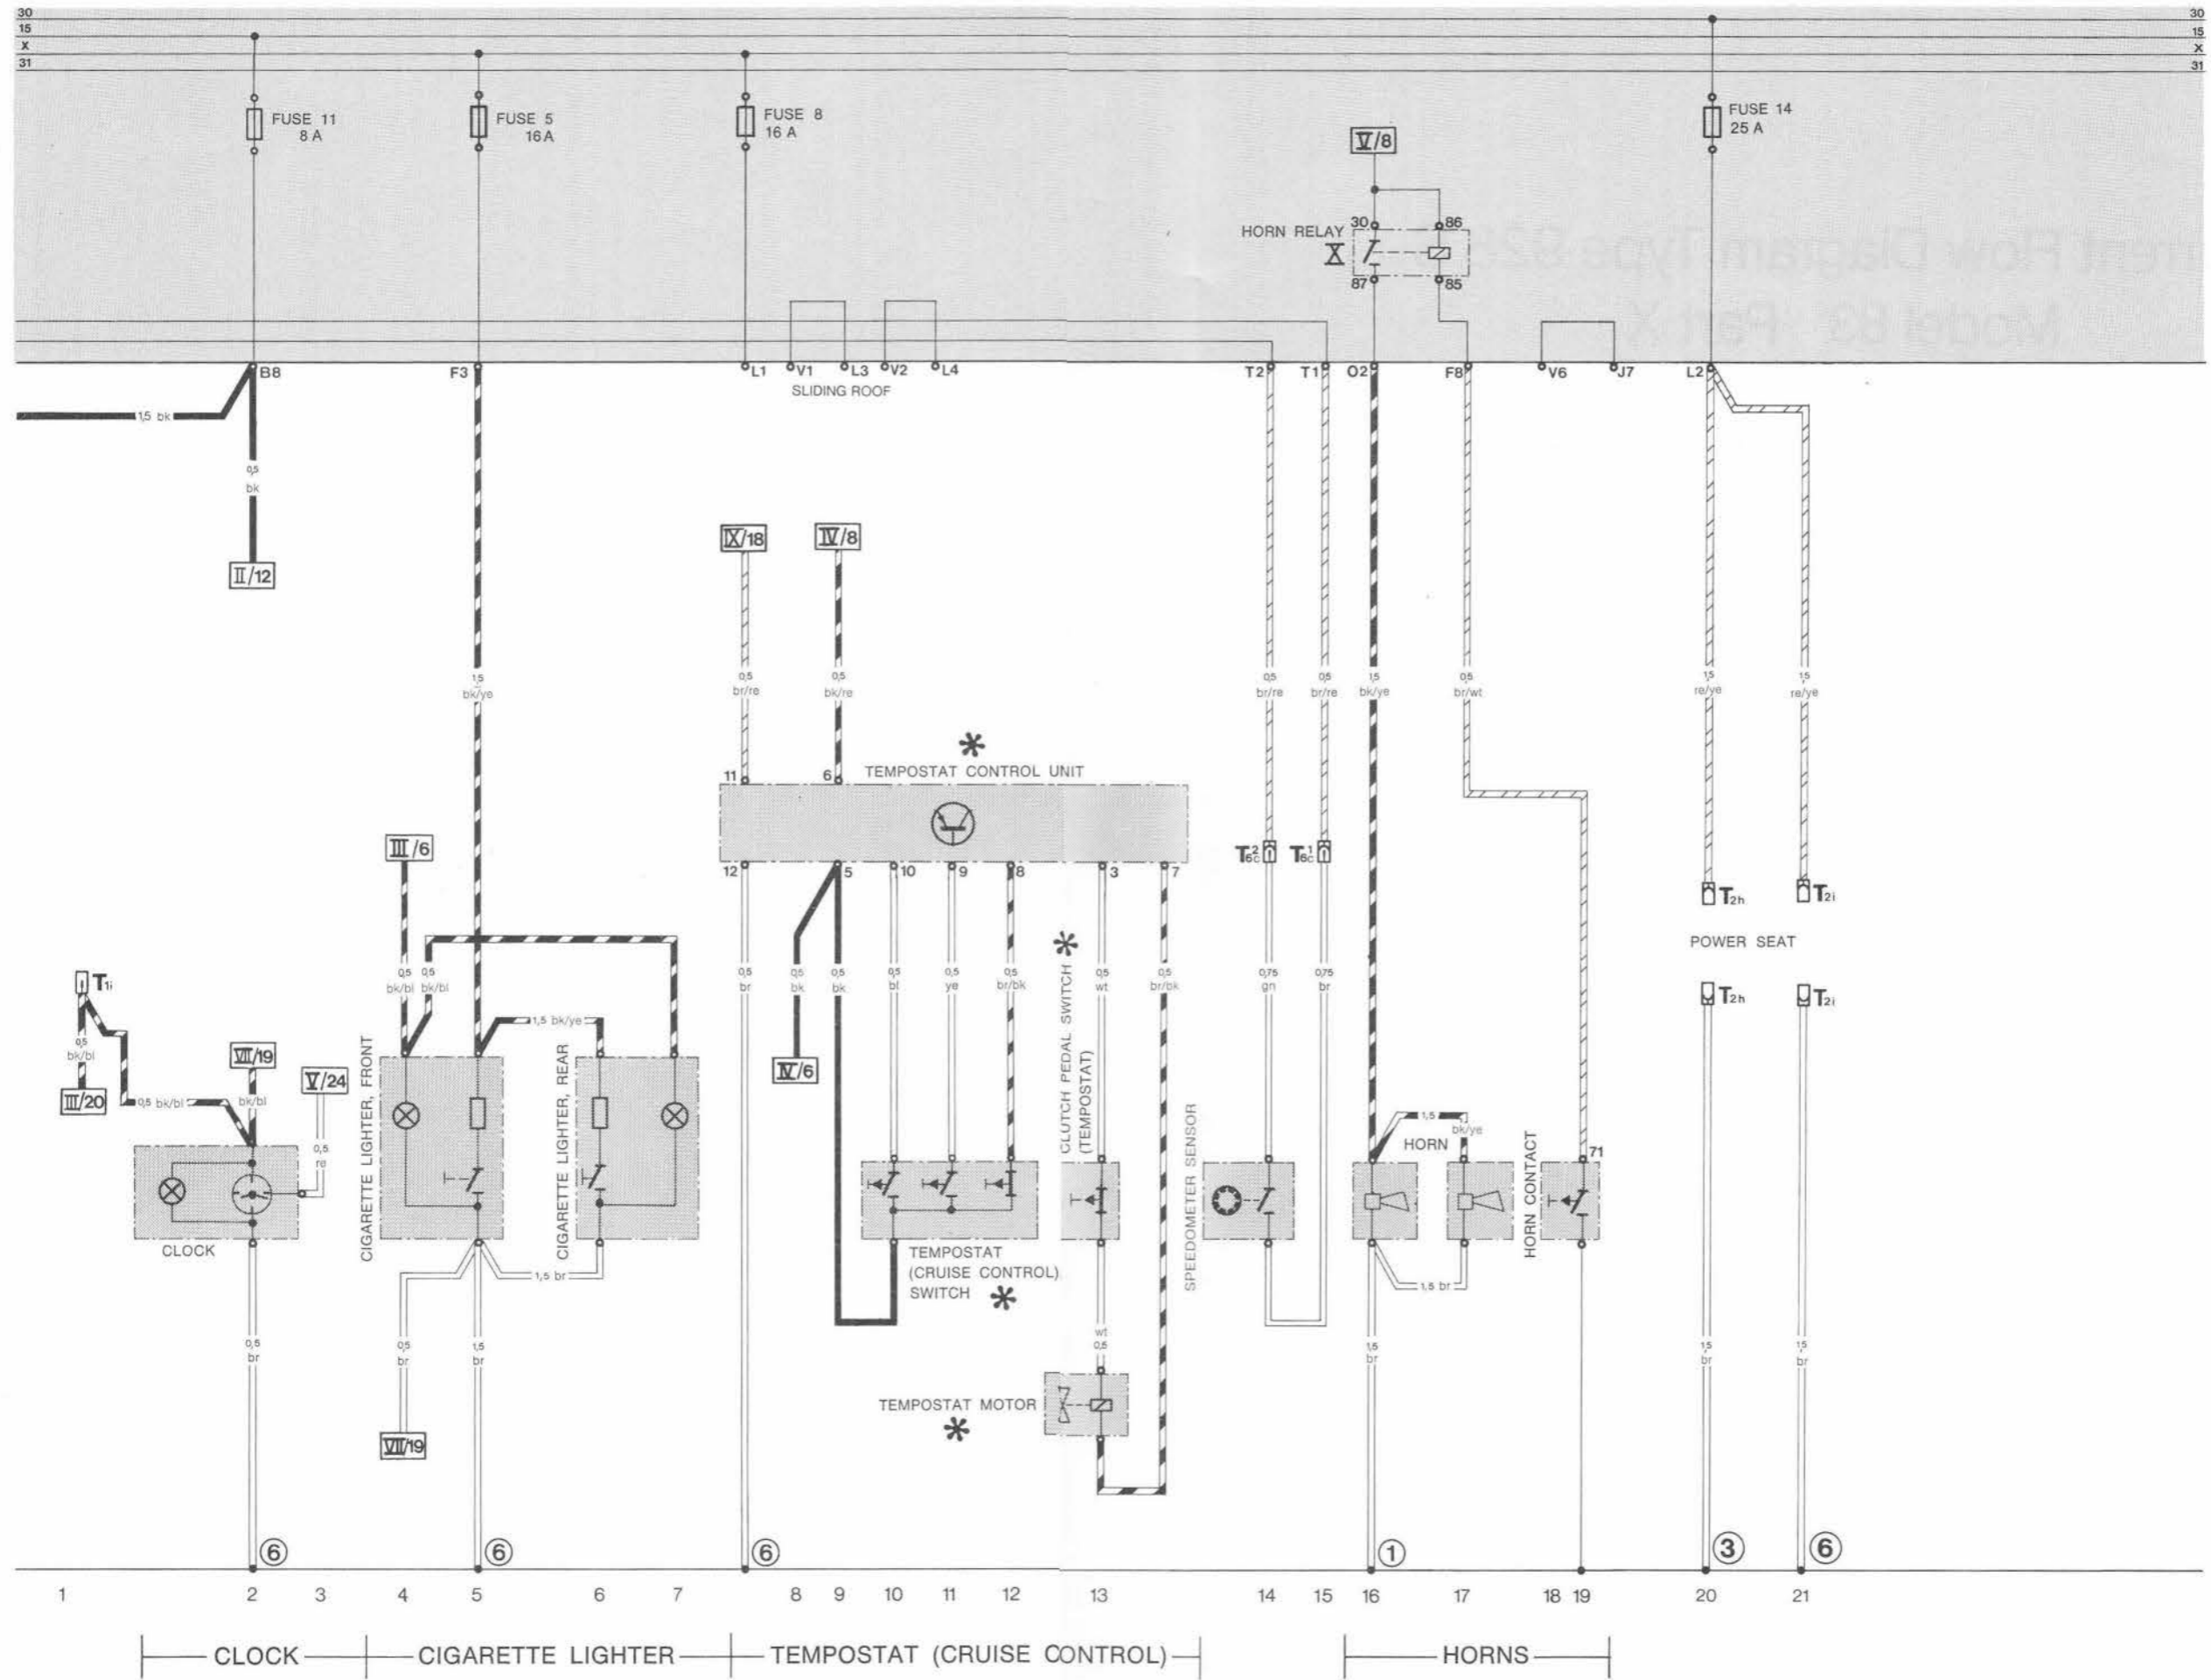

Additional Current Flow Diagram Type 928 S Model 83

Automatic gearbox

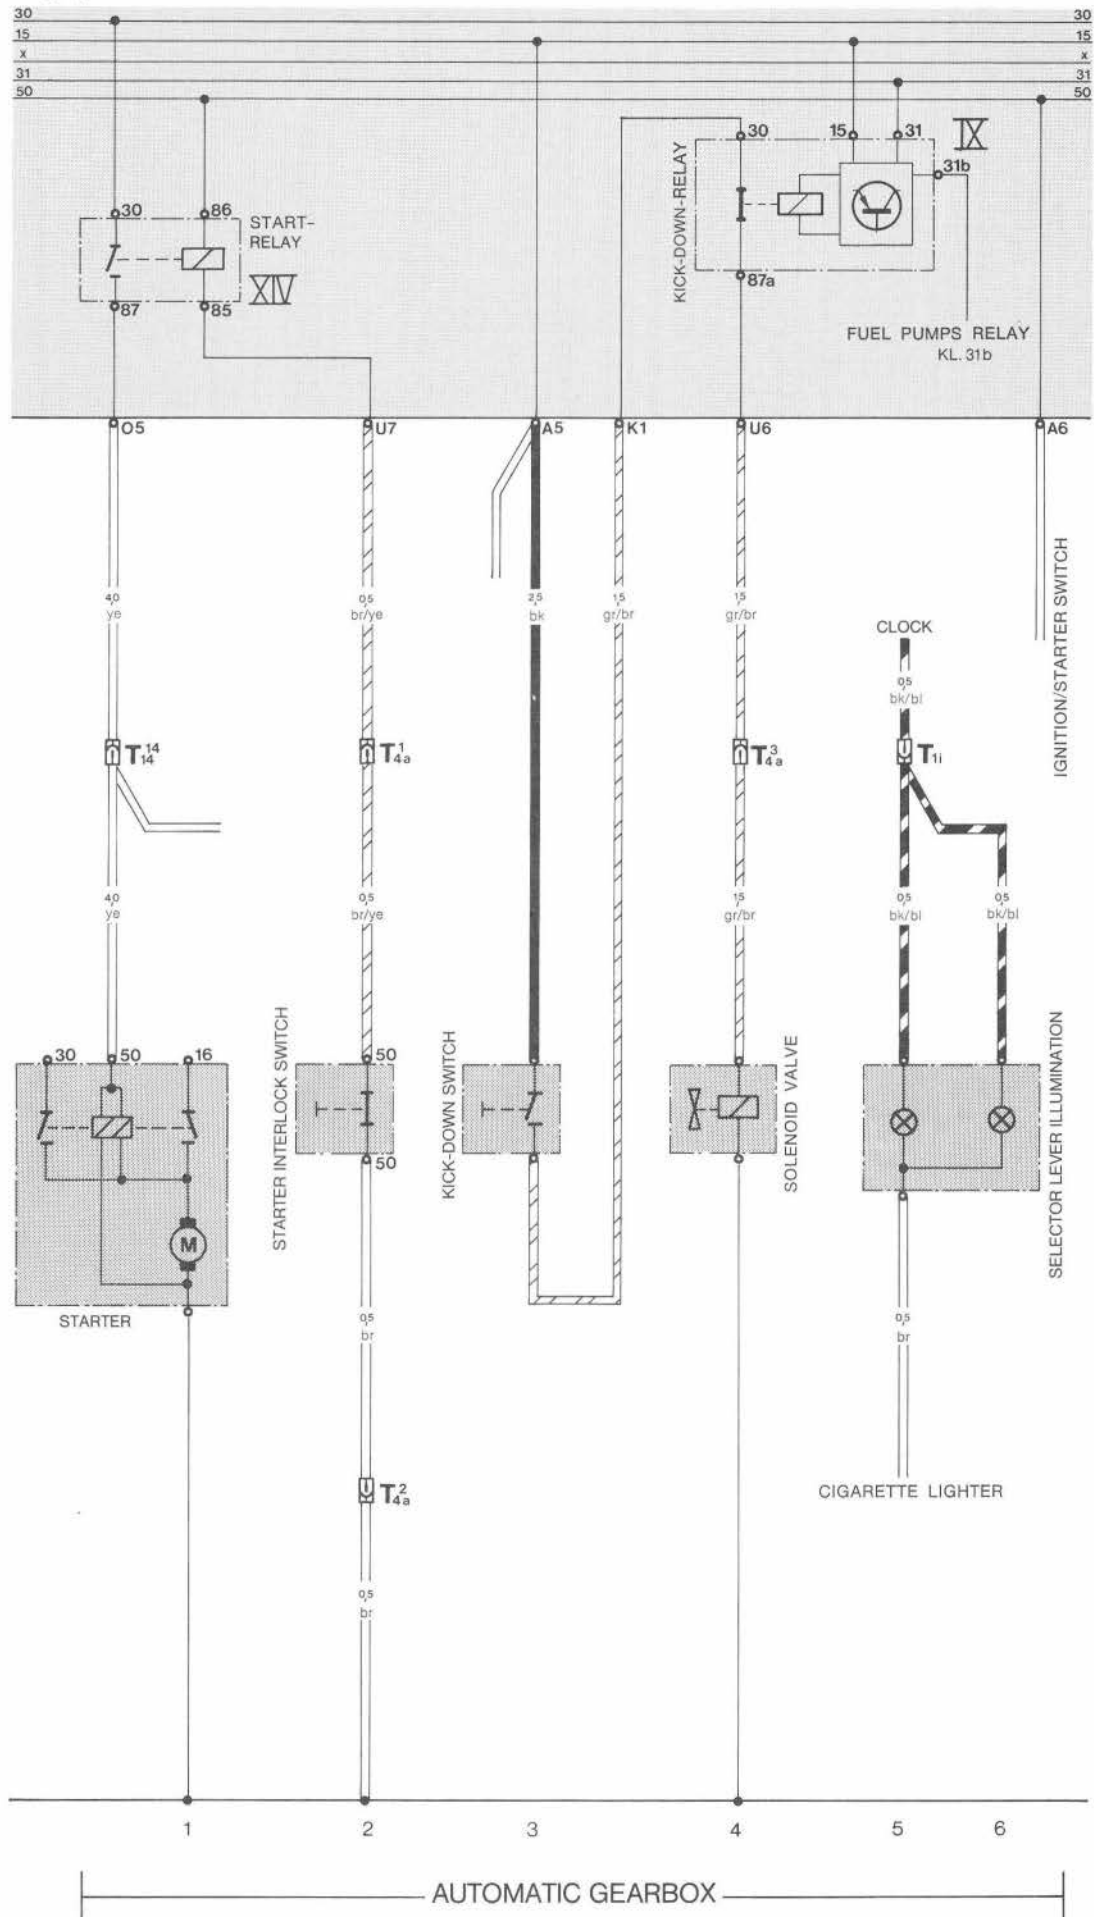


Additional Current Flow Diagram

Type 928 S Model 83

(HIFI)
RADIO WITH 8 LOUDSPEAKERS

Wiring

| | |
|----|----|
| 30 | 30 |
| 15 | 15 |
| X | X |
| 31 | 31 |

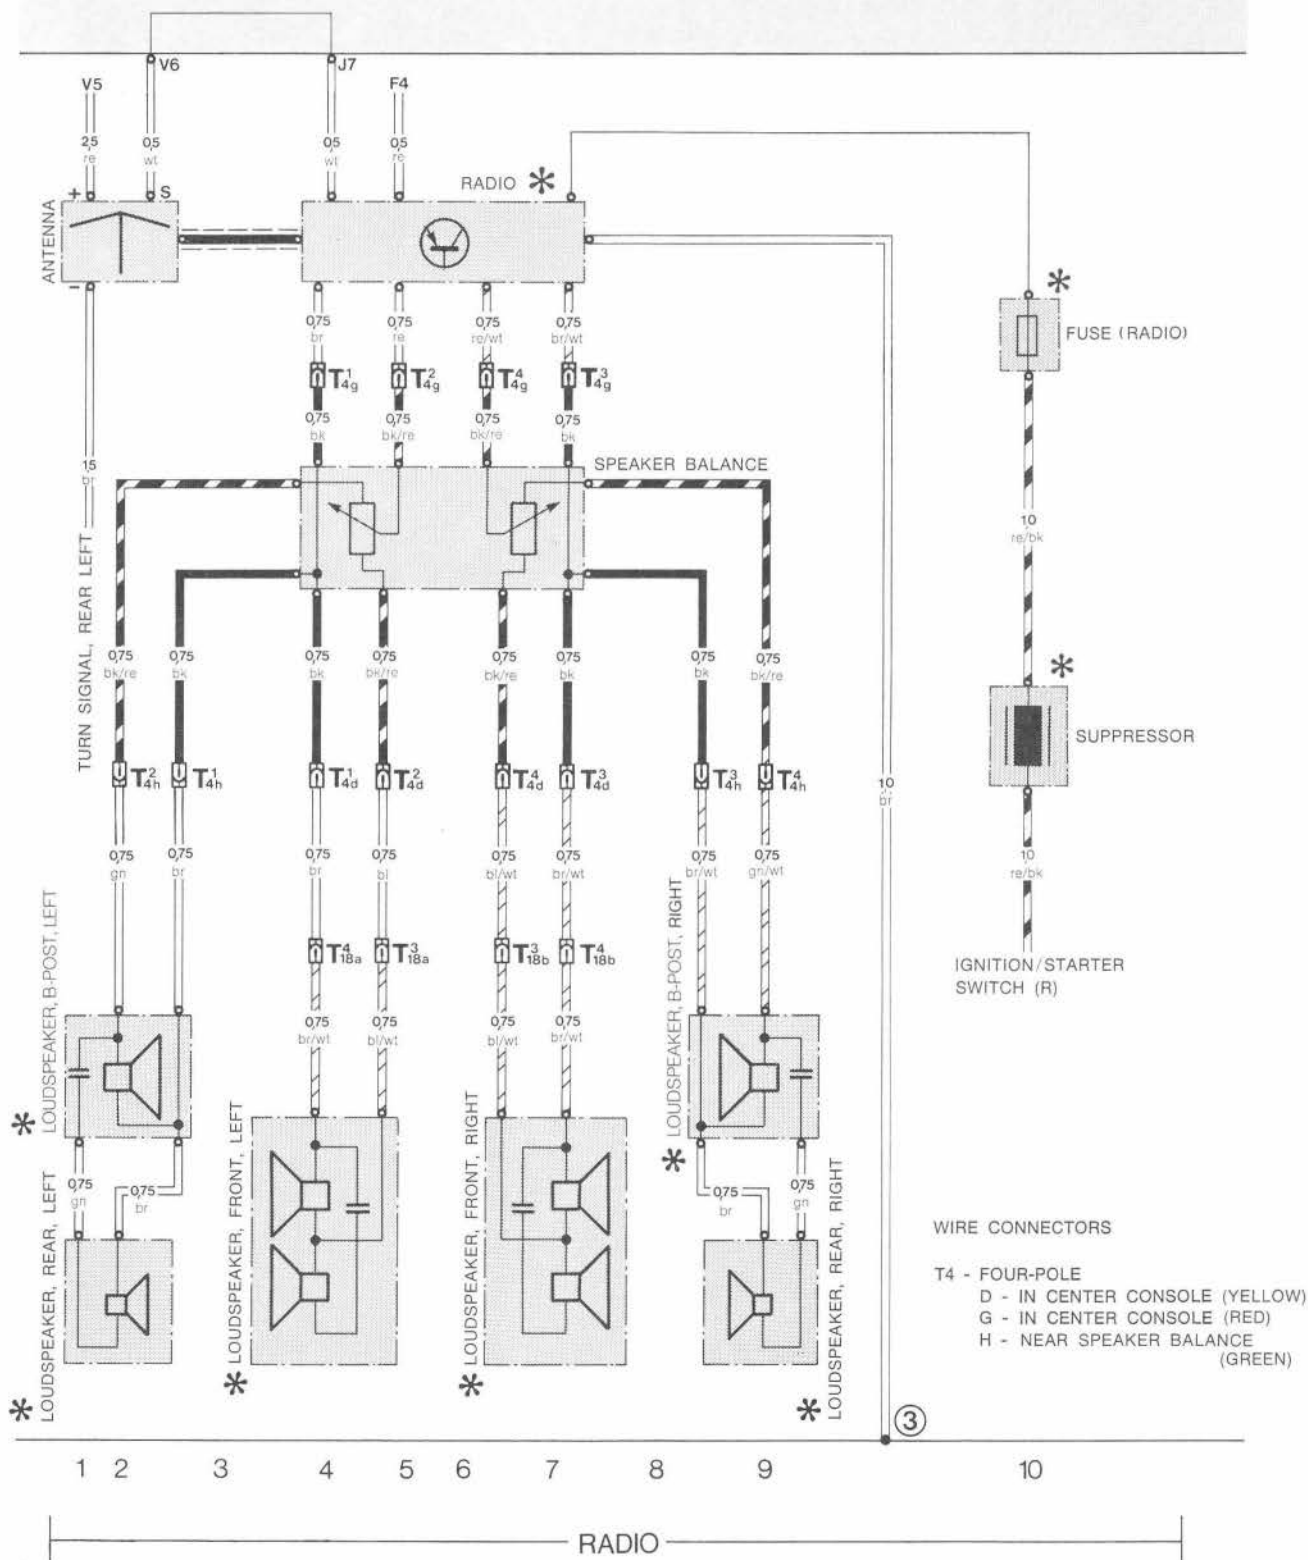

Additional Current Flow Diagram Type 928 S Model 83

**RADIO WITH 8 LOUDSPEAKERS
AND BOOSTER (HIFI)**

Additional Current Flow Diagram Type 928 S Model 83

RADIO WITH 8 LOUDSPEAKERS AND BOOSTER (HIFI)

| | |
|----|----|
| 30 | 30 |
| 15 | 15 |
| X | X |
| 31 | 31 |

