



REMOVING AND INSTALLING STARTER LOCKING AND BACKUP LIGHT SWITCH

Removing


1. Disconnect selector lever cable.

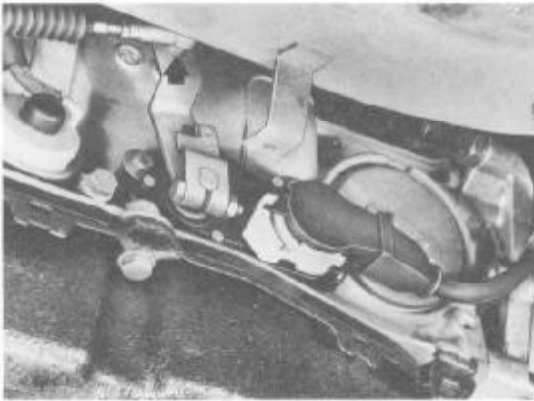


2. Remove bolt for range selector lever and pull off lever.

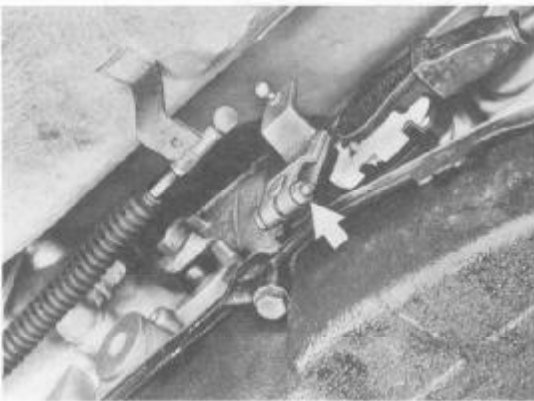


3. Unlock plug by turning white plastic ring (arrow) upwards in direction of arrow.

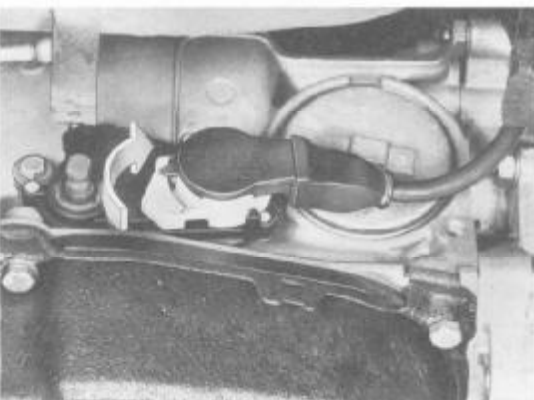

4. Pry off plug carefully with two screwdrivers applied on cable outlet and bar.

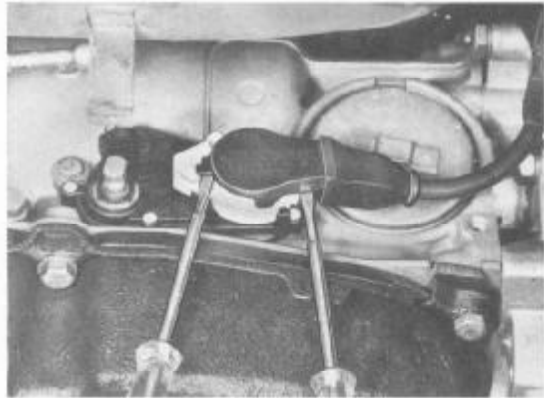

5. Remove switch mounting screws and take off switch.

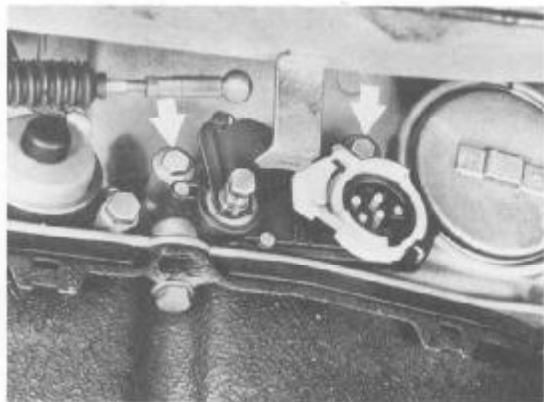

Installing

1. Install switch with both mounting screws, but do not tighten.